

## 16.External Connection Terminal

### A: REMOVAL


1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For the 12 volt engine restart battery of HEV model, disconnect the ground terminal from 12V engine restart battery sensor.

2) Remove the console box assembly. <Ref. to EI-81, REMOVAL, Console Box.>

3) While pressing the claw, press it in from the rear to remove the unit assembly - AUX.

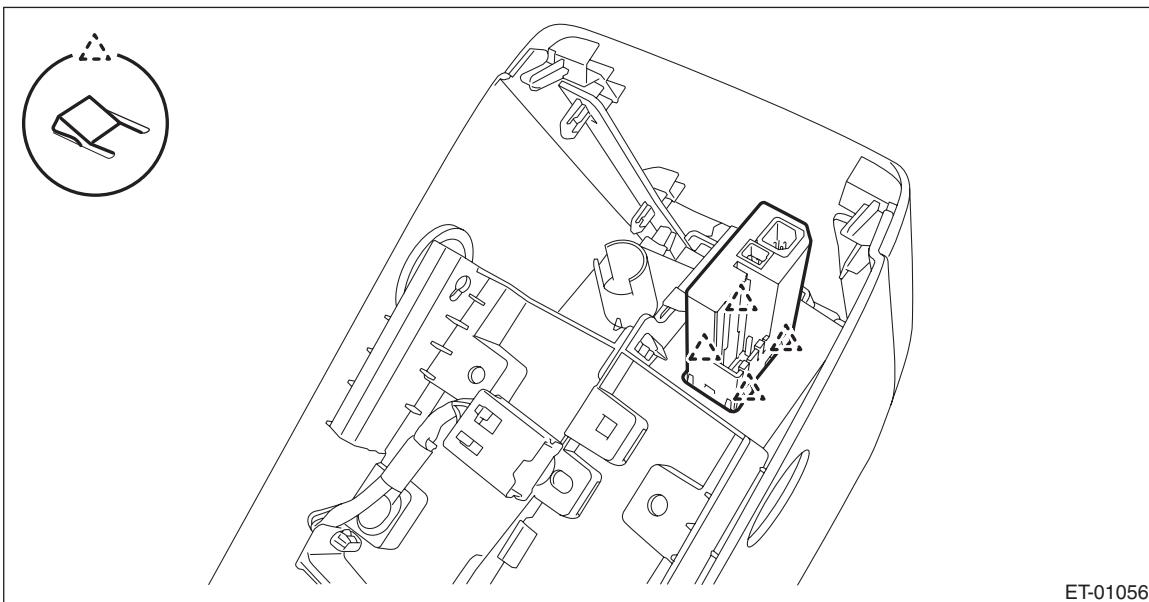

### B: INSTALLATION

Install each part in the reverse order of removal.

***Tightening torque:***

***Console box assembly: 6.5 N·m (0.66 kgf·m, 4.8 ft-lb)***