

## 5. Audio

### A: REMOVAL

1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For the 12 volt engine restart battery of HEV model, disconnect the ground terminal from 12V engine restart battery sensor.


2) Remove the cover assembly - instrument panel LWR driver and the knee airbag module. <Ref. to AB-34, REMOVAL, Knee Airbag Module.>

3) Remove the glove box. <Ref. to EI-78, REMOVAL, Glove Box.>

4) Remove the center grille assembly. <Ref. to AC-104, CENTER GRILLE ASSEMBLY, REMOVAL, Air Vent Grille.>

5) Remove the audio assembly.

(1) On manual A/C models, disconnect the control cables from both sides of the heater & cooling unit.

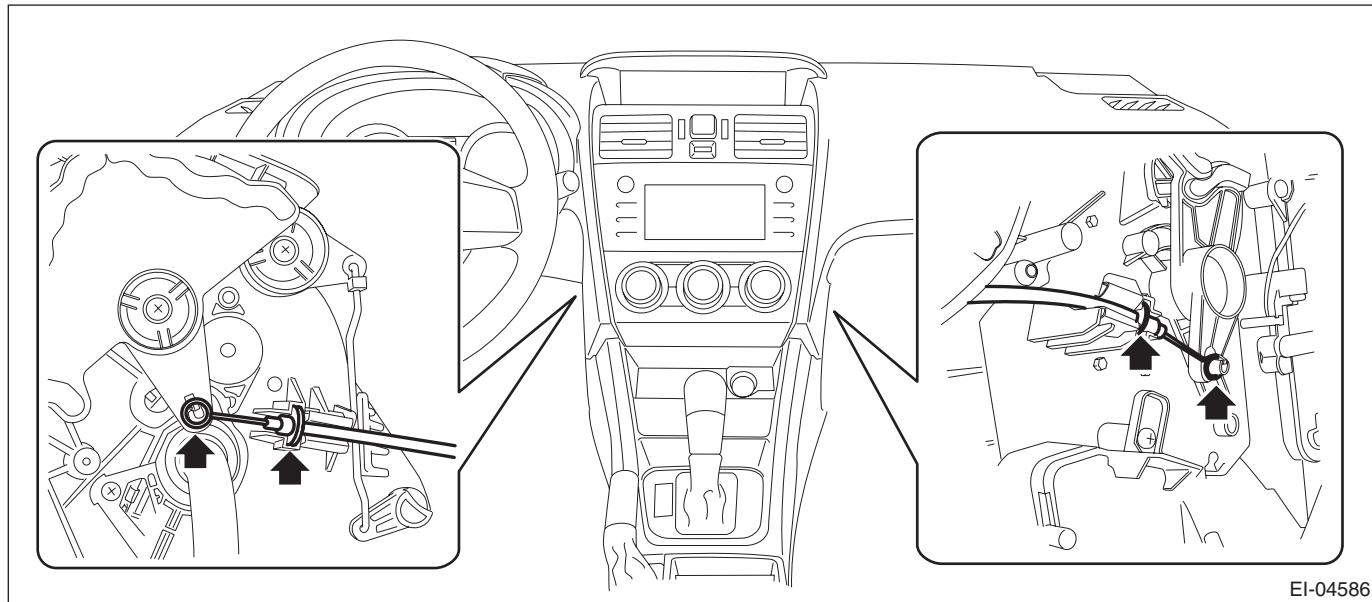


(2) Attach the protective tape (a) to the cover - shift lever.

(3) Remove the screws, bolts and claws, and partially pull out the audio assembly.


NOTE:

Release the claws by using a clip remover wrapped with protective tape.

(4) Disconnect the connectors, and remove the audio assembly.

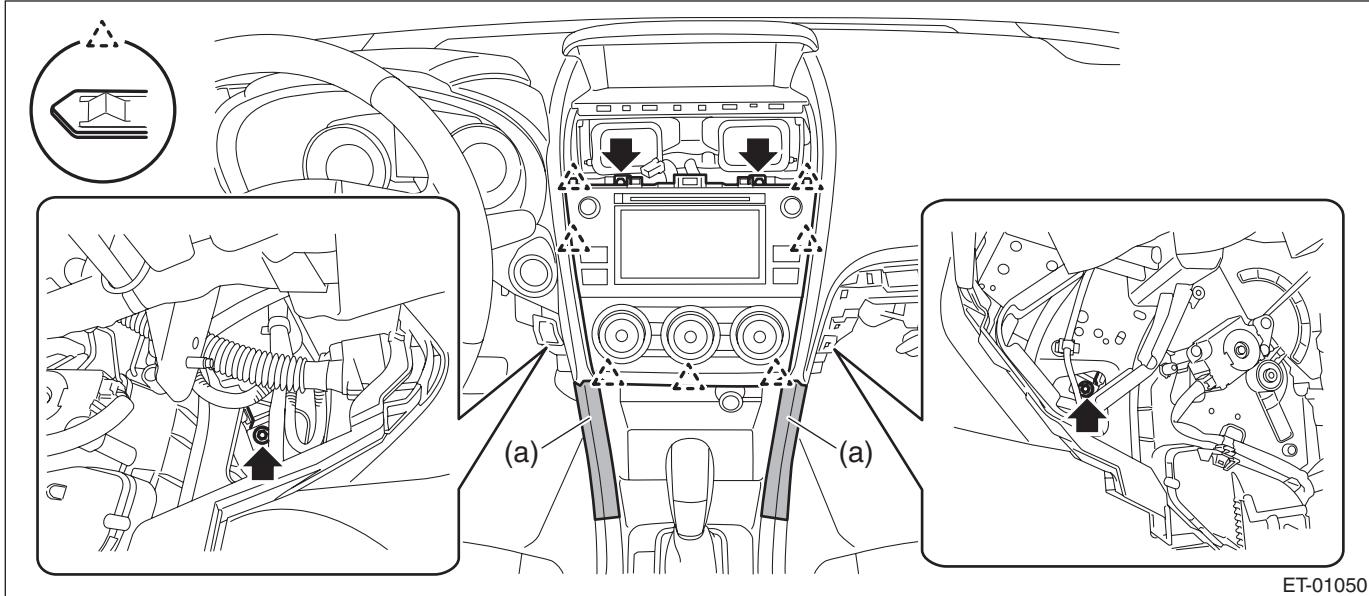


6) Remove the screws, and then remove the audio bracket.

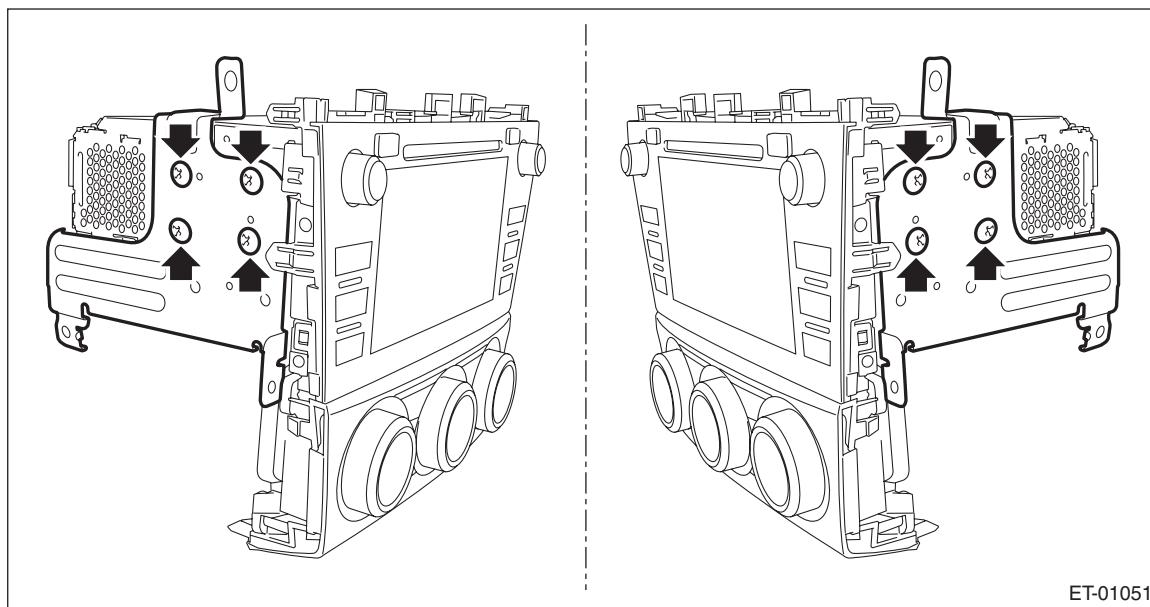

### NOTE:

To have the audio repaired, remove the audio bracket and the heater control assembly, and install it to the vehicle as shown in the figure. <Ref. to AC-50, REMOVAL, Control Panel.>

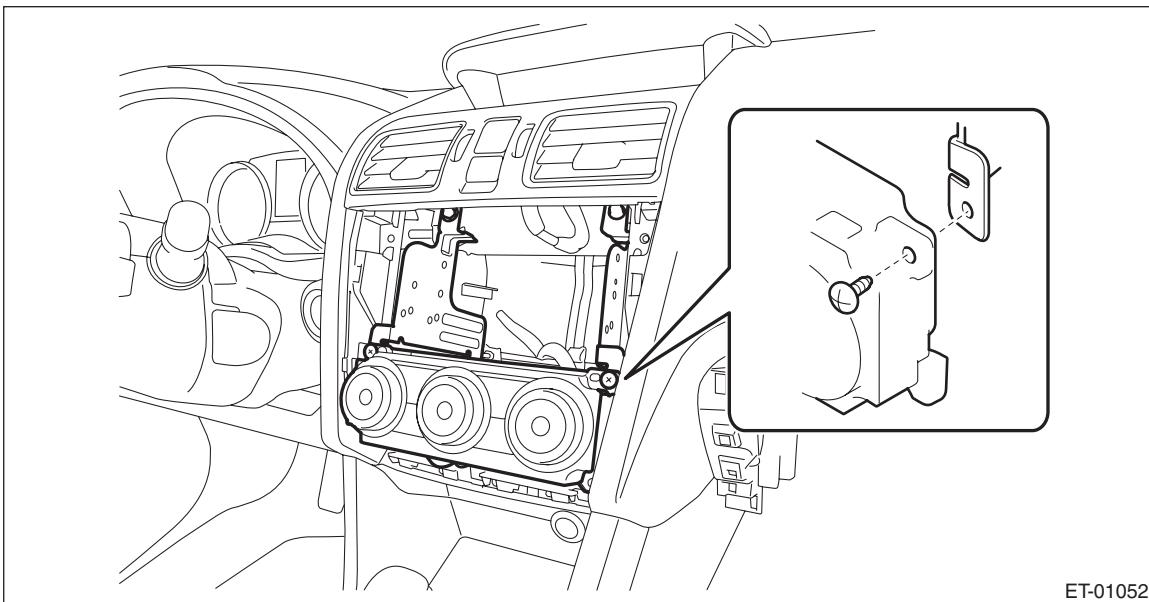

## B: INSTALLATION

### CAUTION:

After installing the center grille assembly, check that the air vent grille of the center grille assembly is inserted correctly into the air vent duct.

Install each part in the reverse order of removal.

#### *Tightening torque:*

7.5 N·m (0.76 kgf·m, 5.5 ft-lb)