


11. Rear Door Glass

A: REMOVAL


- 1) Remove the trim panel - rear door. <Ref. to EI-73, REAR DOOR, REMOVAL, Door Trim.>
- 2) Remove the sealing cover - rear door.

CAUTION:

- Carefully remove the butyl tape. Excessive force will easily break the sealing cover - rear door.
- If the sealing cover - rear door gets broken, replace it with a new part.
 - (1) Remove the screw to remove the bracket - door trim rear.
 - (2) Carefully remove the butyl tape to remove the sealing cover - rear door.

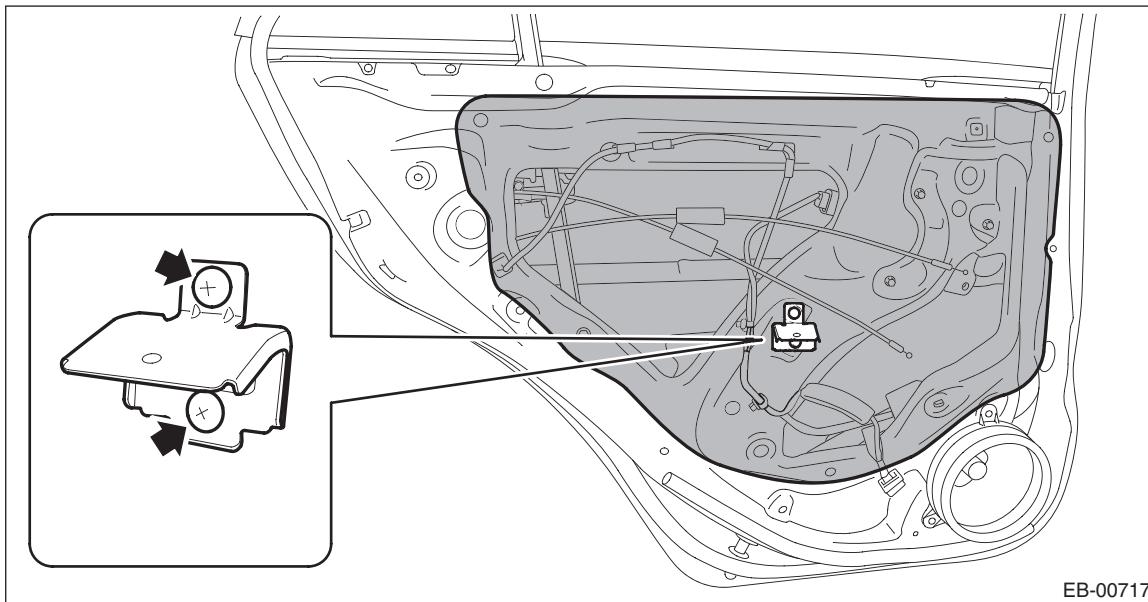


- 3) Attach the battery ground cable and the switch - power window, and turn the ignition to ON.
- 4) Remove the glass assembly - rear door.
 - (1) Operate the switch - power window sub rear to move the glass assembly - rear door to the lowest position.
 - (2) Remove the running channel - rear door.
 - (3) Remove the screws and bolts, and then remove the sash COMPL - rear partition.

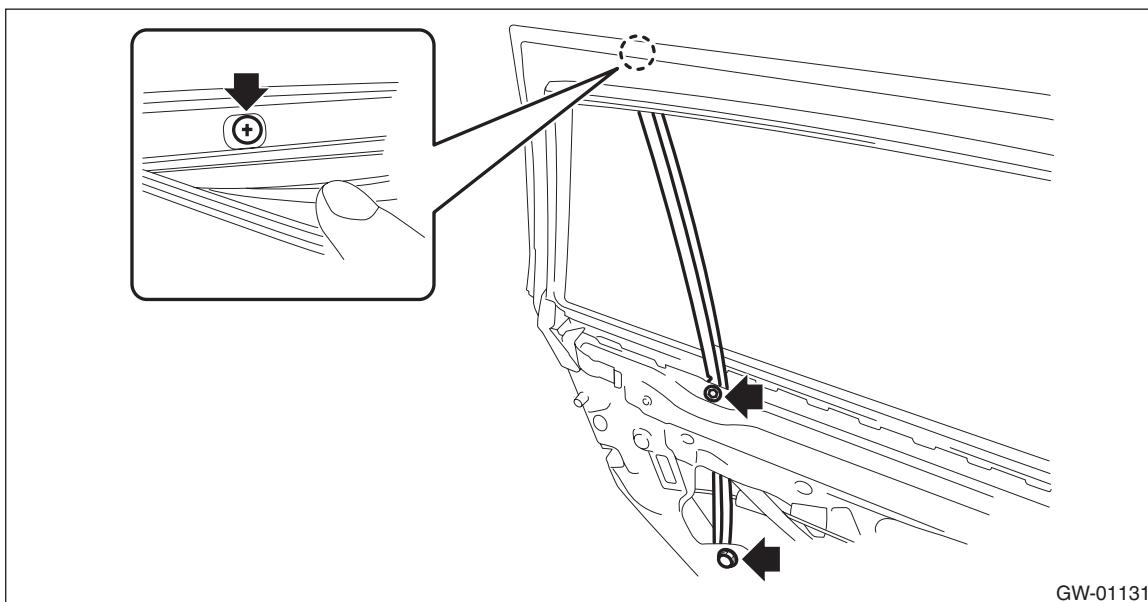

Rear Door Glass

GLASS/WINDOWS/MIRRORS


(4) Remove the glass - rear door partition.

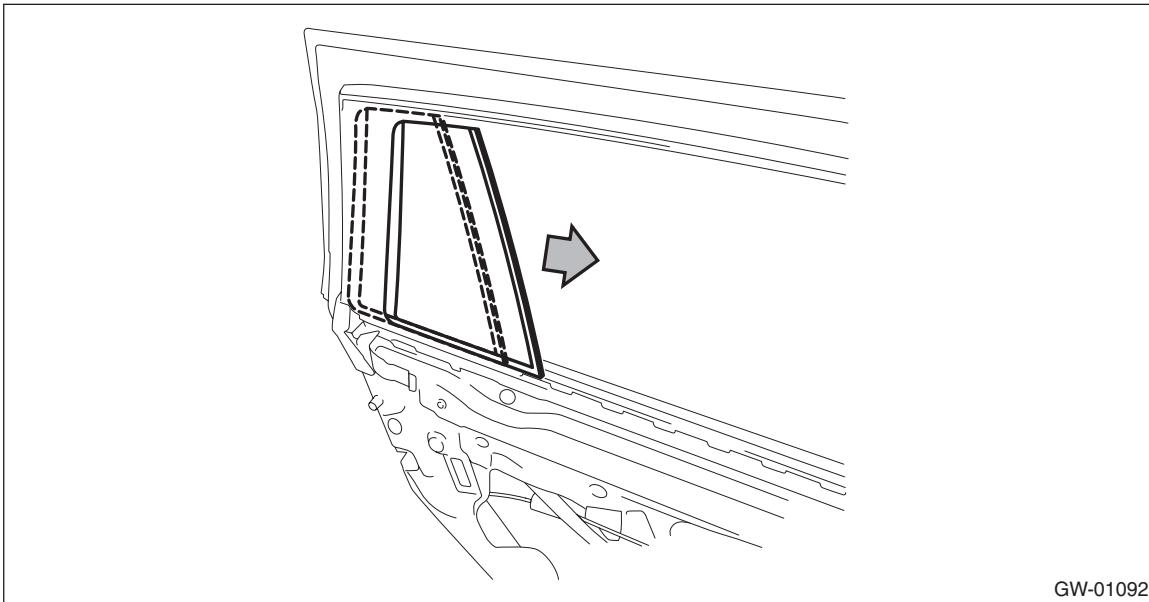

(5) While tilting the glass assembly - rear door, remove the guide from the roller of the regulator and motor assembly - rear, then remove the glass assembly - rear door.

CAUTION:

Avoid impact and damage to the glass assembly - rear door.

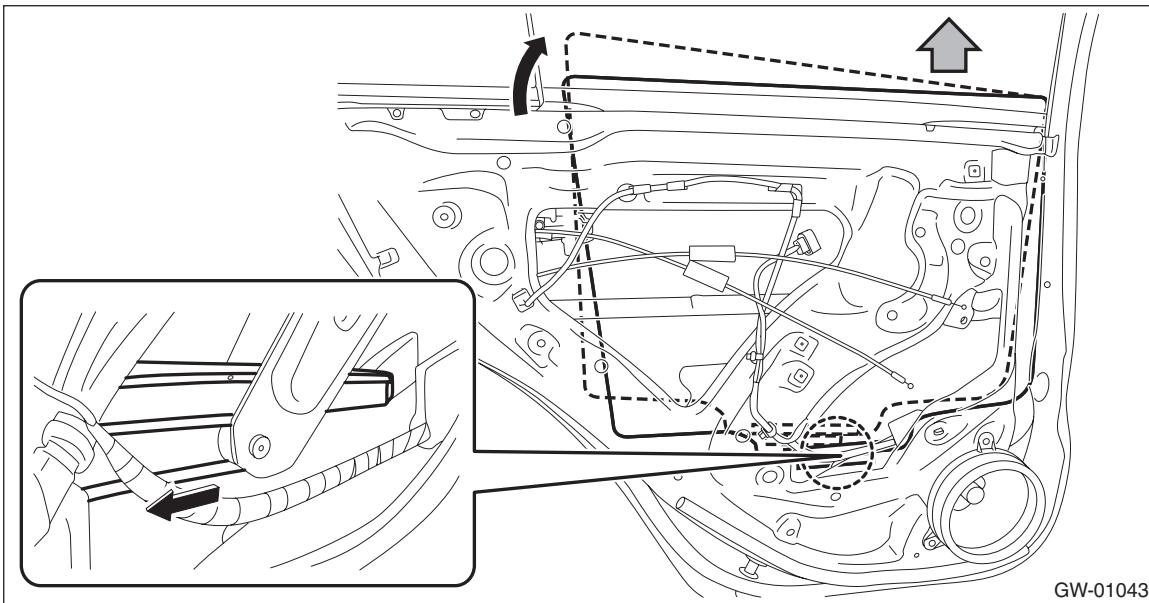

B: INSTALLATION

CAUTION:

- Check that the running channel - rear door is securely fixed to the panel assembly - rear door and to the sash COMPL - rear partition.
- Before installing the glass assembly - rear door, check the lip of the running channel - rear door for being everted or tuck-in.

Install each part in the reverse order of removal.

Tightening torque:

Refer to "COMPONENT" of "General Description". <Ref. to GW-3, REAR DOOR GLASS, COMPONENT, General Description.>