



## 12. Rear Regulator and Motor Assembly

### A: REMOVAL

- 1) Remove the glass assembly - rear door. <Ref. to GW-31, REMOVAL, Rear Door Glass.>
- 2) Remove the rear regulator and motor assembly.
  - (1) Disconnect the motor - rear connector.

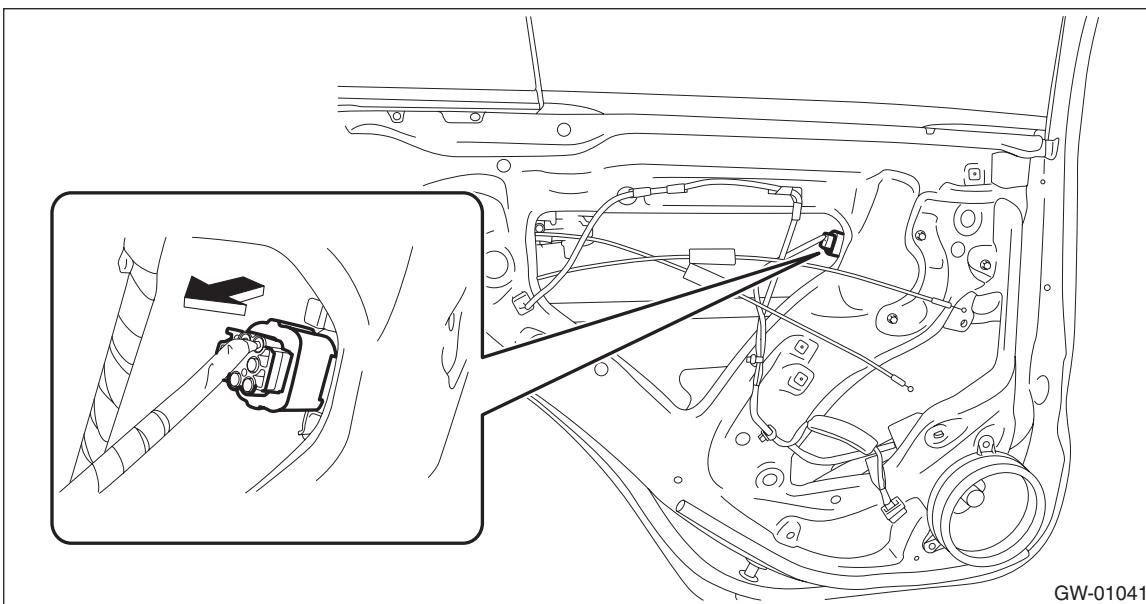

- (2) Remove the bolts, and then remove the rear regulator and motor assembly.

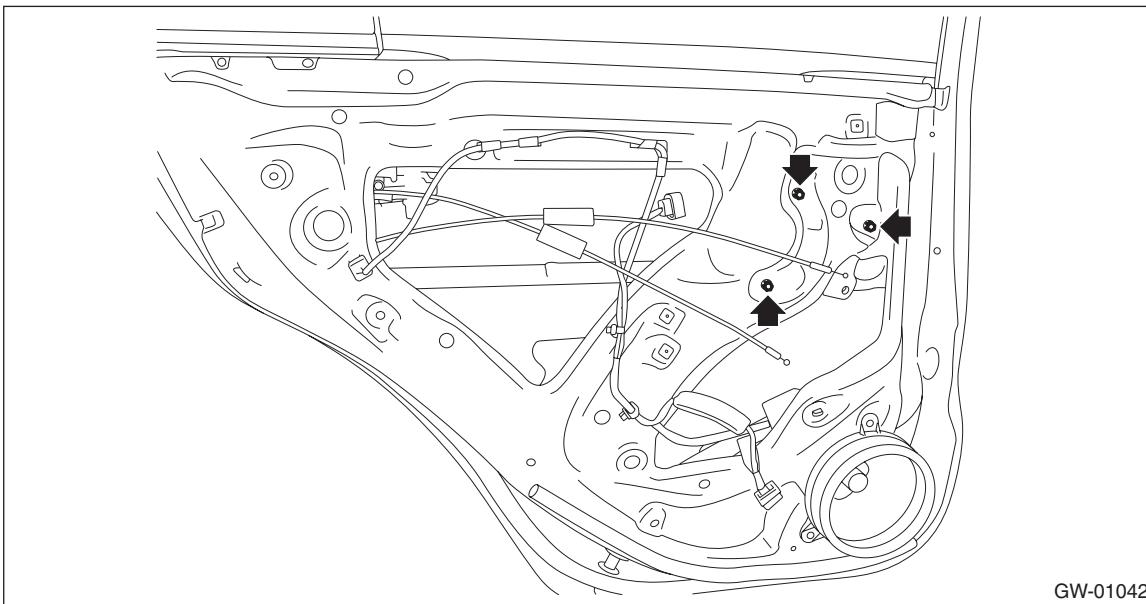

### B: INSTALLATION

Install each part in the reverse order of removal.

#### *Tightening torque:*


*Refer to "COMPONENT" of "General Description". <Ref. to GW-3, REAR DOOR GLASS, COMPONENT, General Description.>*

# Rear Regulator and Motor Assembly

## GLASS/WINDOWS/MIRRORS

### C: INSPECTION

- 1) Disconnect the connector of the motor - rear.
- 2) Check the motor operation when battery voltage is applied between terminals of the motor - rear connector.

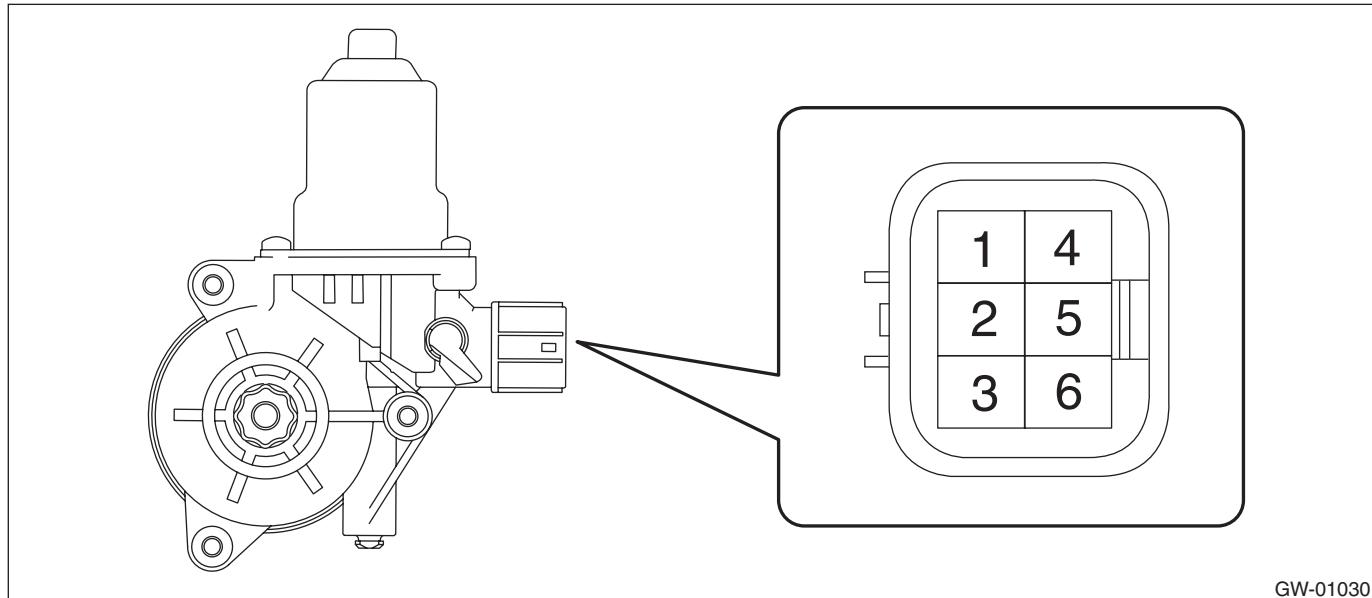

GW-01030

- LH side

Terminal No.	Inspection conditions	Standard
4 (+) — 1(-)	Apply battery voltage between terminals.	Increase
1 (+) — 4(-)	Apply battery voltage between terminals.	Decrease

- RH side

Terminal No.	Inspection conditions	Standard
3 (+) — 6(-)	Apply battery voltage between terminals.	Increase
6 (+) — 3(-)	Apply battery voltage between terminals.	Decrease

- 3) If it does not operate properly as a result of inspection, replace the regulator and motor assembly - rear.