


6. Front Regulator and Motor Assembly

A: REMOVAL

- 1) Remove the glass assembly - front door. <Ref. to GW-18, REMOVAL, Front Door Glass.>
- 2) Remove the regulator and motor assembly - front.
 - (1) Disconnect the motor - front connector.
 - (2) Remove the bolts, and then remove the regulator and motor assembly - front.

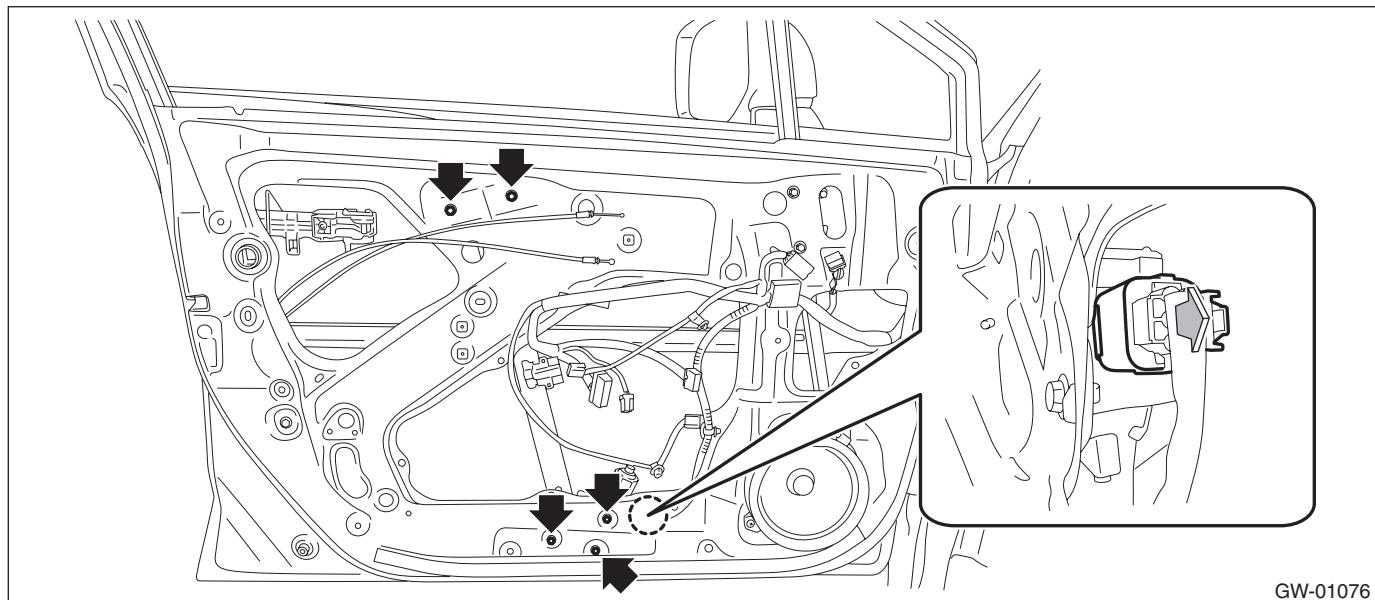

B: INSTALLATION

Install each part in the reverse order of removal.

Tightening torque:


Refer to “COMPONENT” of “General Description”. <Ref. to GW-2, FRONT DOOR GLASS, COMPONENT, General Description.>

Front Regulator and Motor Assembly

GLASS/WINDOWS/MIRRORS

C: INSPECTION

- 1) Disconnect the connector of the motor - front.
- 2) Check the motor operation when battery voltage is applied between terminals of the motor - front connector.

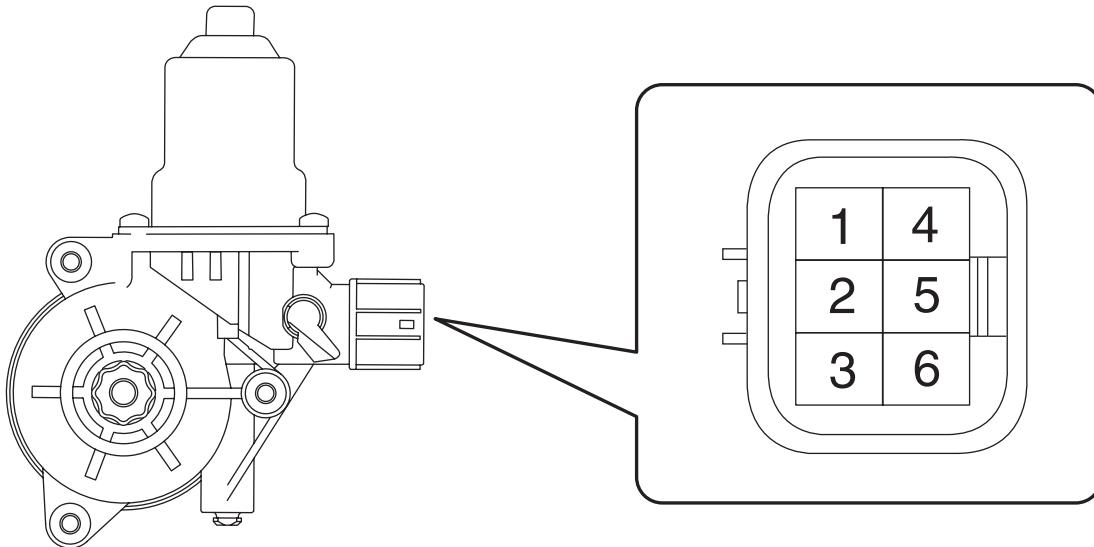

GW-01030

- LH side

Terminal No.	Inspection conditions	Standard
4 (+) — 1 (-)	Apply battery voltage between terminals.	Increase
1 (+) — 4 (-)	Apply battery voltage between terminals.	Decrease

- RH side

Terminal No.	Inspection conditions	Standard
3 (+) — 6 (-)	Apply battery voltage between terminals.	Increase
6 (+) — 3 (-)	Apply battery voltage between terminals.	Decrease

- 3) If it does not operate properly as a result of inspection, replace the regulator and motor assembly - front.