

## 7. Remote Control Mirror System

### A: WIRING DIAGRAM

Refer to "Remote Control Mirror System" in the wiring diagram.

- Gasoline engine model: <Ref. to WI(w/o HEV)-16, Power Supply Circuit.>
- HEV model: <Ref. to WI(HEV)-21, Power Supply Circuit.>

### B: INSPECTION

#### 1. SYMPTOM CHART

Symptoms	Inspection order
All function does not operate.	<ol style="list-style-type: none"><li>1. Check the fuse.</li><li>2. Check the remote control mirror switch.</li><li>3. Check the wiring harness.</li></ol>
One side of the mirror motor does not operate.	<ol style="list-style-type: none"><li>1. Check the remote control mirror switch.</li><li>2. Check the mirror motor.</li><li>3. Check the wiring harness.</li></ol>
Mirror heater does not operate.	<ol style="list-style-type: none"><li>1. Check the rear defogger switch.</li><li>2. Check the rear defogger relay.</li><li>3. Check the mirror heater.</li><li>4. Check the wiring harness.</li><li>5. Check body integrated unit.</li></ol>

#### NOTE:

The mirror heater operates with the rear window defogger at the same time. Refer to "INSPECTION" of "Rear Window Defogger System" for details. <Ref. to GW-50, INSPECTION, Rear Window Defogger System.>

### C: NOTE

For procedure of each component in the remote control mirror system, refer to the respective section.

- Outer mirror assembly: <Ref. to GW-24, Outer Mirror Assembly.>
- Remote control mirror switch: <Ref. to GW-28, Remote Control Mirror Switch.>