

Blower Motor

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

10. Blower Motor


A: REMOVAL

1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For the 12 volt engine restart battery of HEV model, disconnect the ground terminal from 12V engine restart battery sensor.


2) Release the clips, and remove the under cover assembly - passenger.

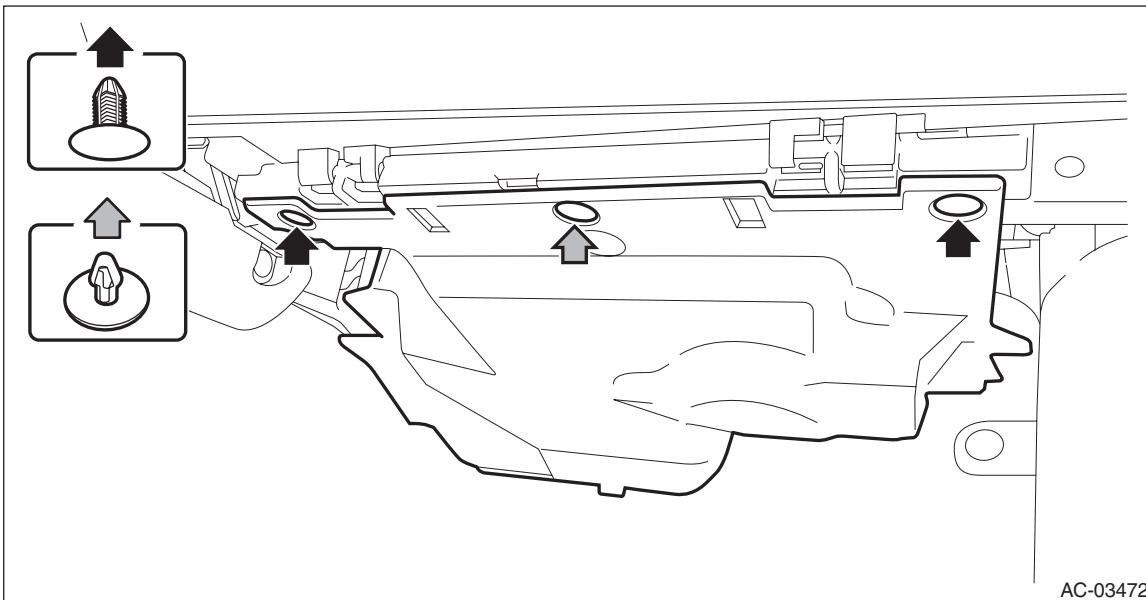

3) Remove the blower - motor.

(1) Disconnect the connector.

(2) Remove the screws and detach the blower - motor.

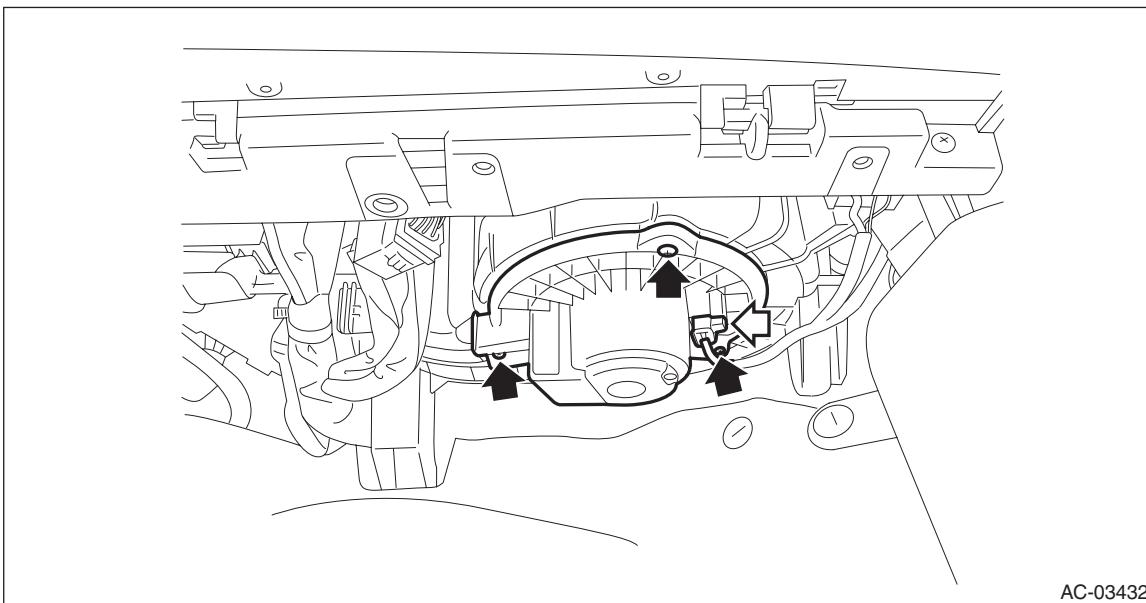

B: INSTALLATION

Install each part in the reverse order of removal.


Blower Motor

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

C: INSPECTION

UNIT INSPECTION

1) Check the motor operation when battery voltage is applied between the terminals of motor.

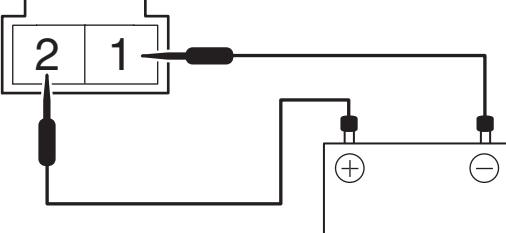Terminal No.	Inspection conditions	Specification	Connection diagram
2 (+) — 1 (-)	Connect battery to the terminals	Speed	 AC-02797

2) If it does not operate normally, replace the blower - motor.