

Power Transistor (Auto A/C Model)

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

11. Power Transistor (Auto A/C Model)

A: REMOVAL

1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:


For the 12 volt engine restart battery of HEV model, disconnect the ground terminal from 12V engine restart battery sensor.

2) Remove the glove box. <Ref. to EI-78, REMOVAL, Glove Box.>

3) Remove the screws and remove the duct - foot RH.

NOTE:


Remove the connector and clip of the motor - actuator mix RH, and move the harness aside.

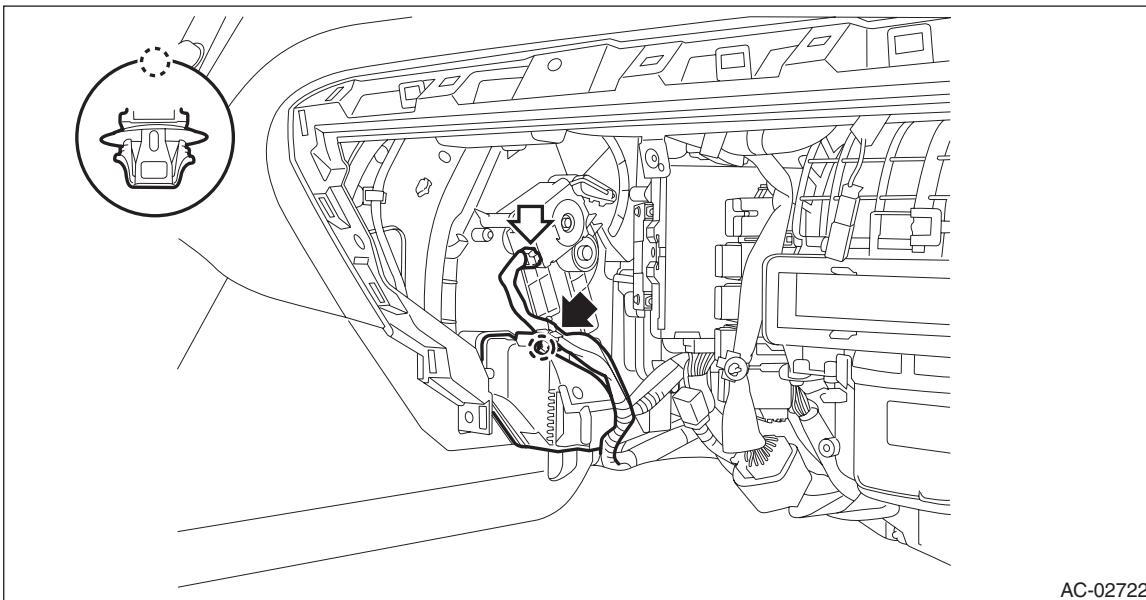

4) Remove the power transistor.

(1) Disconnect the connector.

(2) Remove the power transistor while pressing the power transistor body claw part and sliding it.

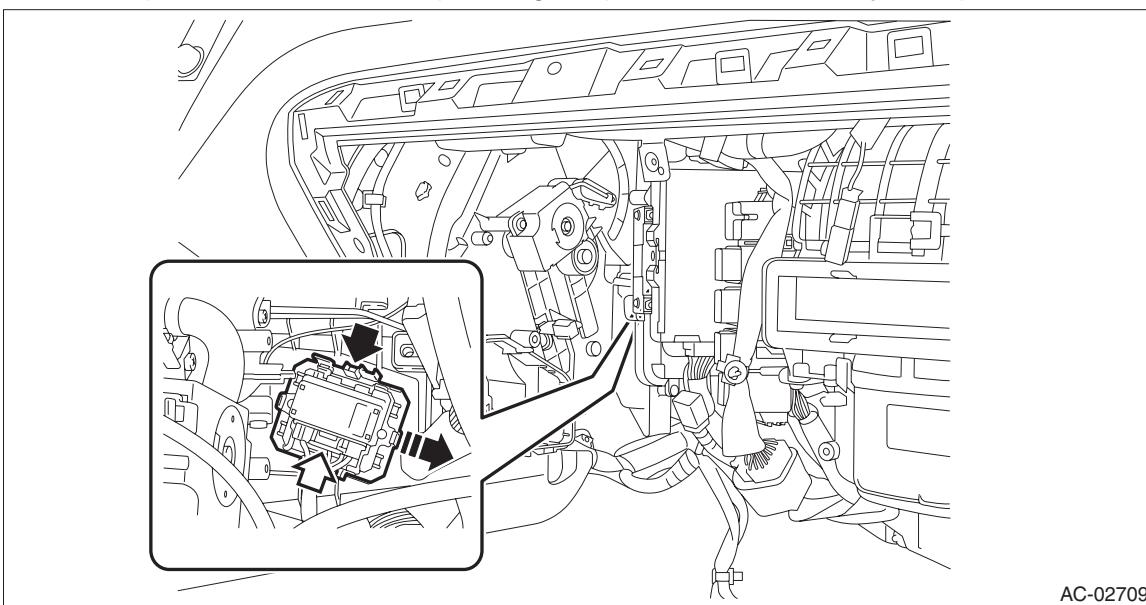

B: INSTALLATION

Install each part in the reverse order of removal.