

### 24. In-Vehicle Sensor (Auto A/C Model)


#### A: REMOVAL

##### CAUTION:

Be careful not to damage the sensors and interior trims when removing.


- 1) Remove the knee airbag module. <Ref. to AB-34, REMOVAL, Knee Airbag Module.>
- 2) Remove the in-vehicle sensor.

- (1) Disconnect the connector, and remove the aspirator hose.

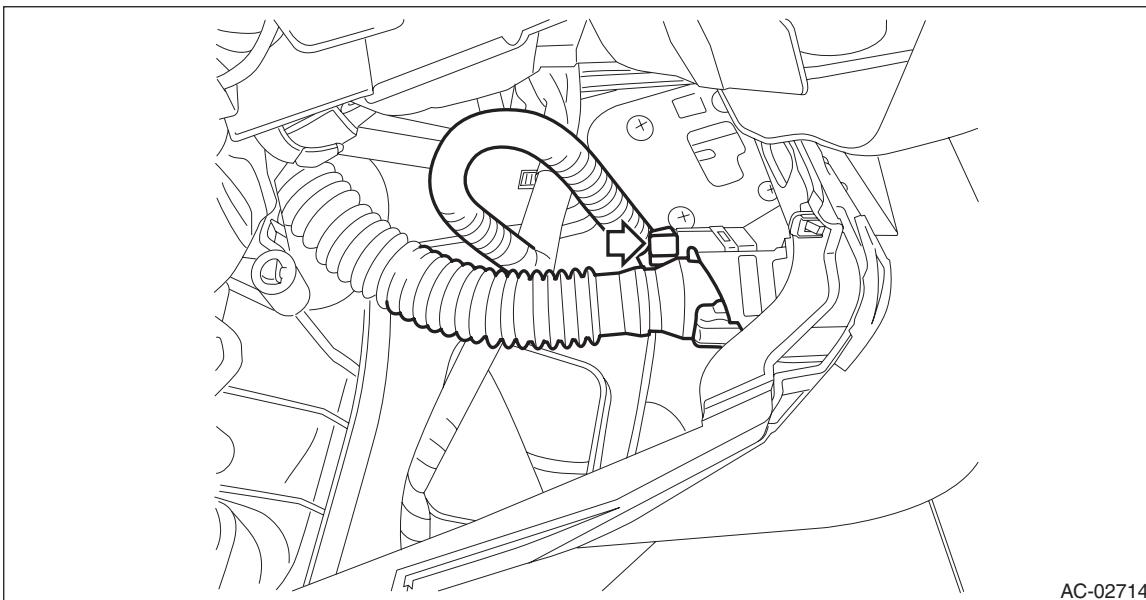

- (2) Release the claws and remove the cover switch - starter.

- (3) Remove the screw and remove the in-vehicle sensor from the cover switch - starter.

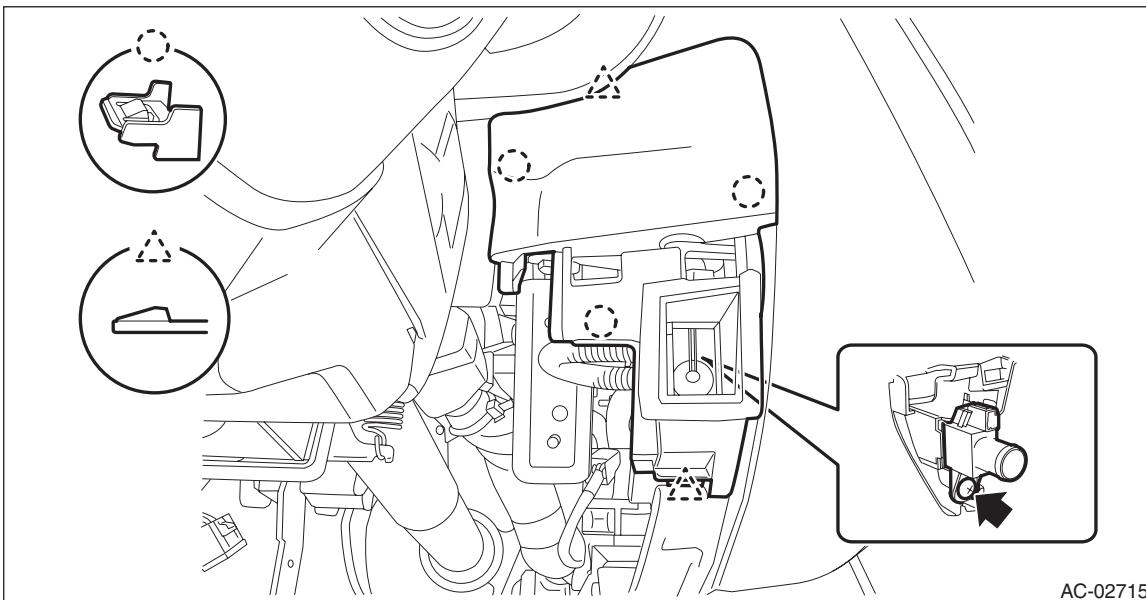

#### B: INSTALLATION

Install each part in the reverse order of removal.

#### C: INSPECTION

On the vehicle inspection

*Preparation tool:*

*Circuit tester*


## In-Vehicle Sensor (Auto A/C Model)

### HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

1) Set the vehicle to the following conditions.

Item	Condition
Ignition switch	ON
A/C switch	ON
Temperature adjustment dial	HI (MAX HOT)
Air flow control dial or switch	DEF
Fan dial	HI (MAX)

2) Check the suction port (A) for in-vehicle sensor of the cover assembly - instrument panel LWR driver INN.

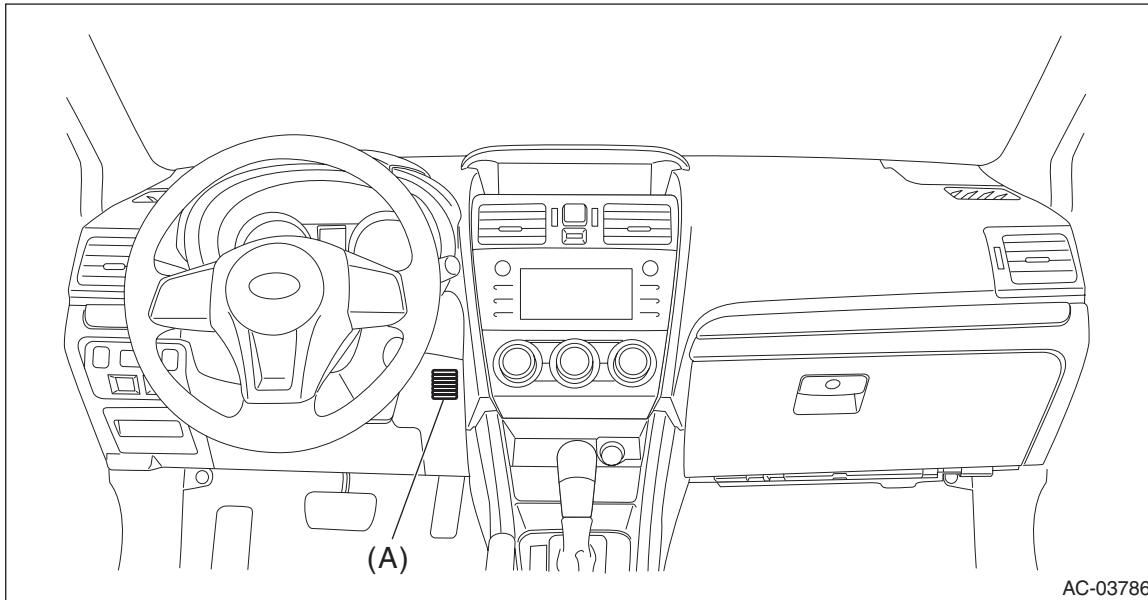

(1) Put a strip of paper close to the front side of the suction port (A).


(2) Can you see the paper moving towards the port and the air being sucked into the port?

#### CAUTION:

**Be careful not to let the paper get sucked into the port.**

- Yes → Go to step 5).
- No → Go to step 3).

3) Remove the cover assembly - instrument panel LWR driver INN, and check the aspirator hose (A).

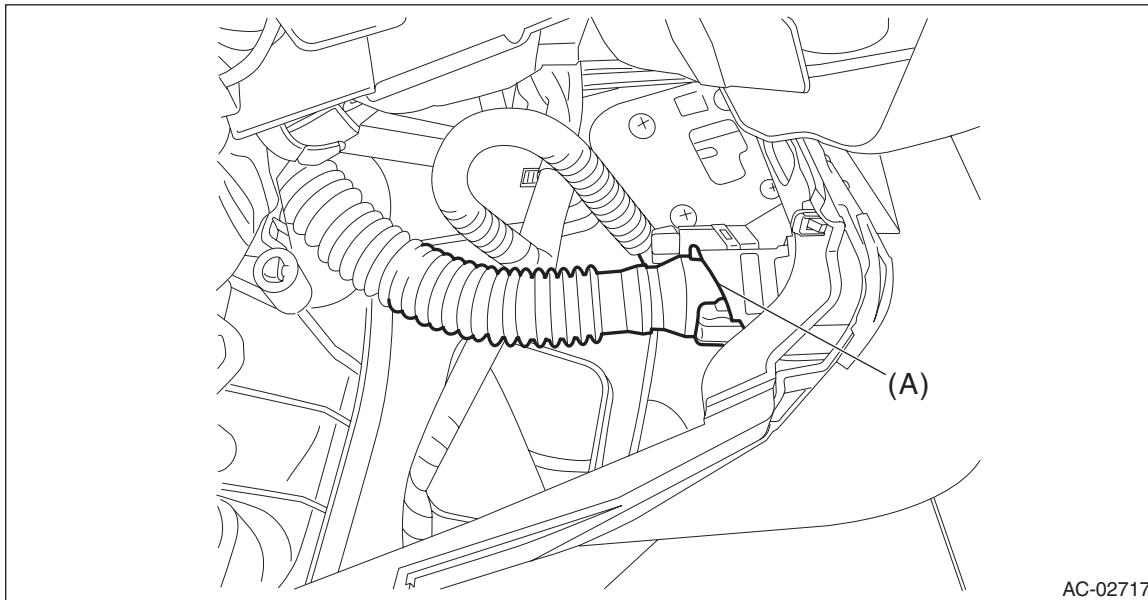

(1) Are the aspirator hoses on both sides of the case and sensor connected securely?

# In-Vehicle Sensor (Auto A/C Model)

## HVAC SYSTEM (HEATER, VENTILATOR AND A/C)


(2) Is the aspirator hose free from any kinks or cracks?  
• **Yes** → Go to step 4).  
• **No** → Repair or replace the aspirator hose if necessary.

4) Check if there is anything that affects sensing, around the in-vehicle sensor.  
(1) Is the in-vehicle sensor hole free from clogging?  
(2) Is the peripheral area of in-vehicle sensor free from any heat-producing parts (such as audio, navigation system etc.)?  
• **Yes** → Go to step 5).  
• **No** → Remove everything that affects sensing.

5) Perform the inspection of in-vehicle sensor unit.  
(1) Disconnect the in-vehicle sensor connector.  
(2) Is the resistance between terminals of in-vehicle sensor within standard value?

### CAUTION:

During inspection, be careful not to touch the sensor end in order to avoid misjudgment due to body temperature.

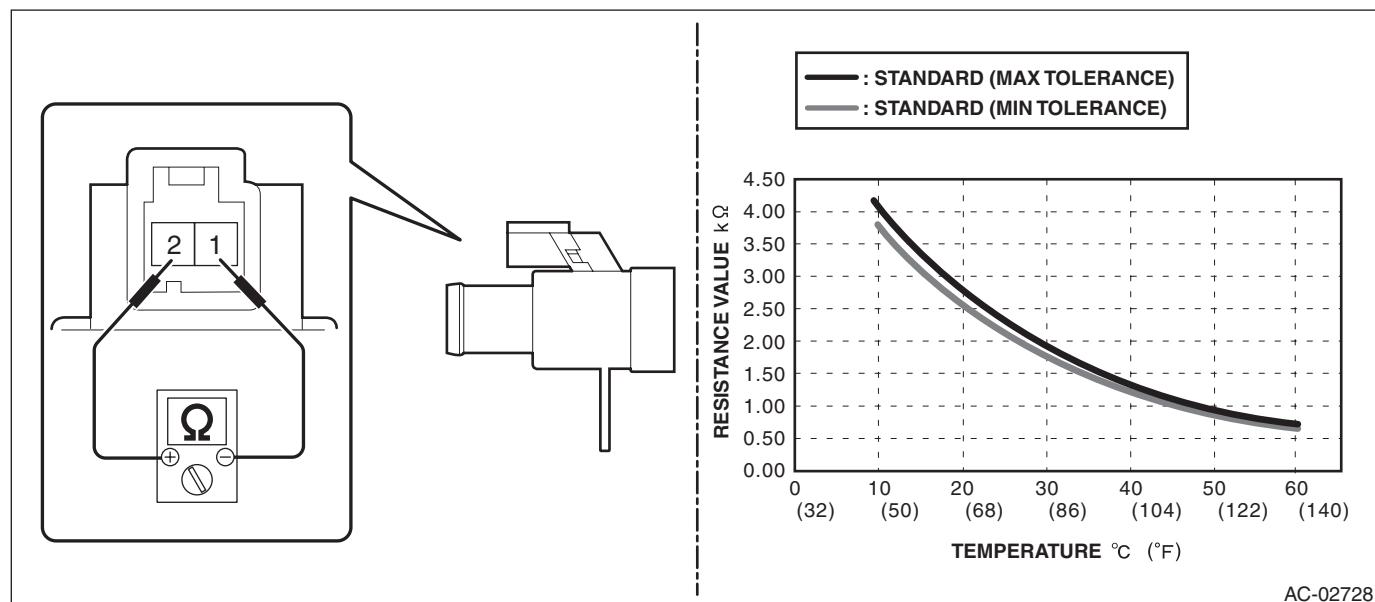

AC-02728

Terminal No.	Inspection conditions	Standard
1 — 2	10°C	3.772 — 4.101 kΩ
	15°C	3.096 — 3.338 kΩ
	20°C	2.556 — 2.734 kΩ
	25°C	2.121 — 2.251 kΩ
	30°C	1.756 — 1.878 kΩ
	35°C	1.462 — 1.574 kΩ
	40°C	1.223 — 1.326 kΩ
	45°C	1.028 — 1.122 kΩ
	50°C	0.868 — 0.9542 kΩ
	55°C	0.7363 — 0.8147 kΩ
	60°C	0.6273 — 0.6984 kΩ

- **Yes** → The in-vehicle sensor is normal.
- **No** → Replace the in-vehicle sensor.