


32. Heater Duct

A: REMOVAL

- 1) Remove the heater and cooling unit assembly. <Ref. to AC-60, REMOVAL, Heater and Cooling Unit.>
- 2) Turn over the floor mat. <Ref. to EI-160, REMOVAL, Floor Mat.>.
- 3) Remove the duct - rear heater.
 - (1) Remove the clips, and remove the duct - rear heater CTR (A).
 - (2) Release the claws, and remove the duct - rear heater (B) on LH and RH sides.

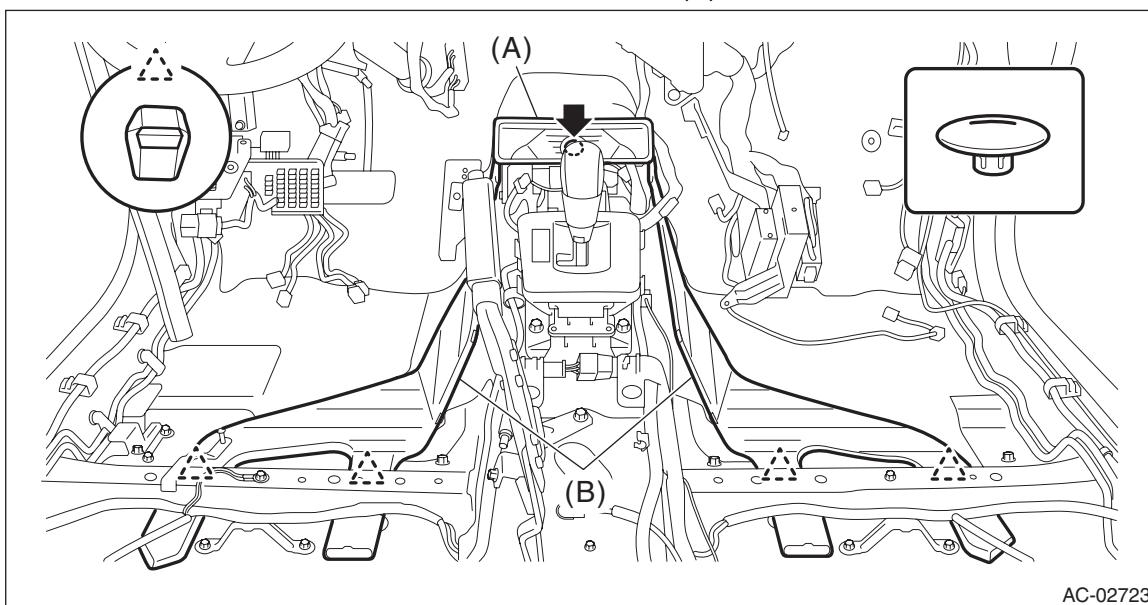

NOTE:

For HEV model, remove the duct - extension.

B: INSTALLATION

Install each part in the reverse order of removal.