

Blower Motor Unit Assembly

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

9. Blower Motor Unit Assembly

A: REMOVAL

1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For the 12 volt engine restart battery of HEV model, disconnect the ground terminal from 12V engine restart battery sensor.

2) Remove the glove box. <Ref. to EI-78, REMOVAL, Glove Box.>

3) Remove the engine control module (ECM).


• Gasoline engine model: <Ref. to FU(H4DO(w/o HEV))-100, REMOVAL, Engine Control Module (ECM).>

• HEV model: <Ref. to FU(H4DO(HEV))-85, REMOVAL, Engine Control Module (ECM).>

4) Remove the blower motor unit assembly.

(1) Release the claws, and then remove the grille assembly - ventilation RH.


(2) Disconnect the blower motor relay and each connector.

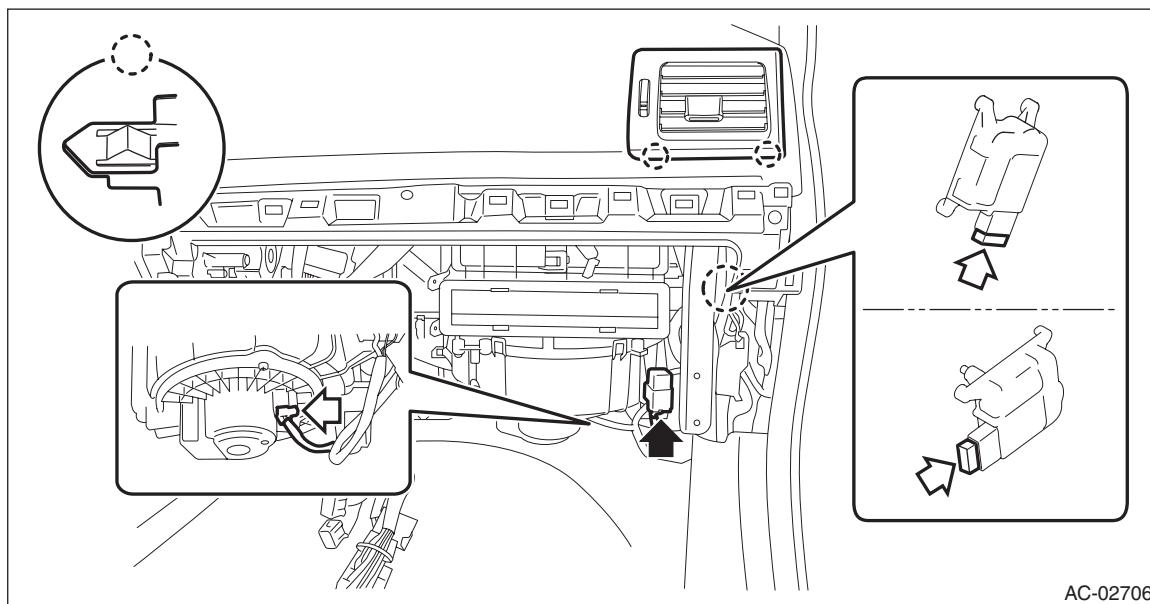

(3) Remove the bolts and nuts to remove blower motor unit assembly.

NOTE:

Remove the RH upper nut from the mounting portion of the grille assembly - ventilation RH.

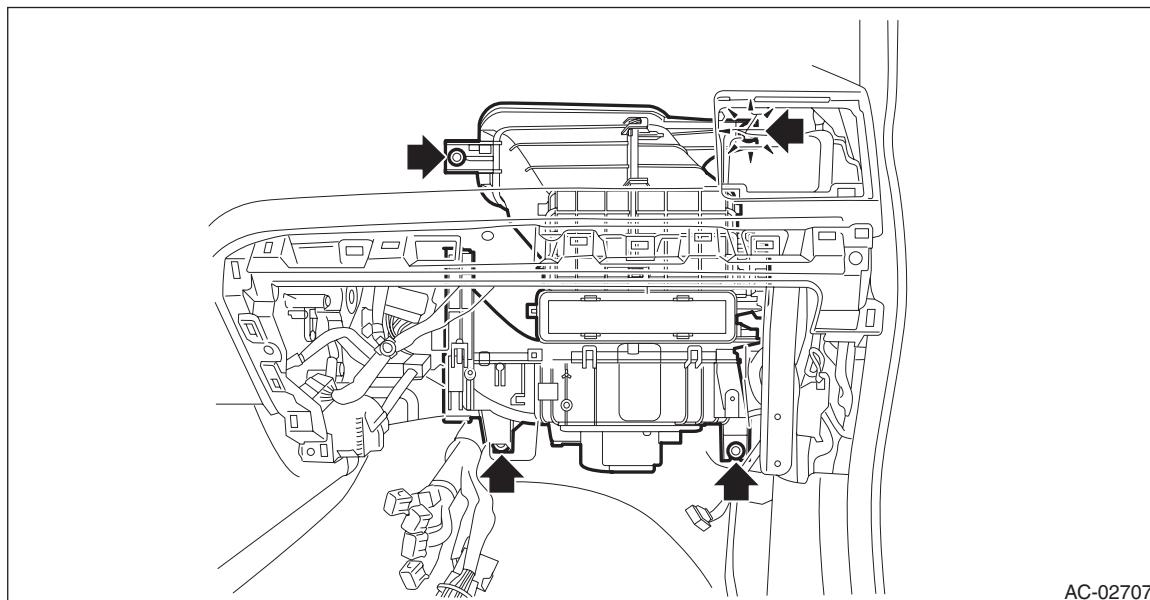

B: INSTALLATION

CAUTION:

After installing the grille assembly - ventilation RH, check that the air vent grille of the grille assembly - ventilation RH is inserted correctly into the air vent duct.

Install each part in the reverse order of removal.

Tightening torque:

Blower motor unit: <Ref. to AC-10, BLOWER MOTOR UNIT, COMPONENT, General Description.>