

## 11. User Customizing

### A: OPERATION

For operation procedures, refer to the “PC application help for Subaru Select Monitor”.

### B: LIST

- Combination meter (models with normal meter)

Items to be displayed	Initial setting value	Customize setting	Note
Air temperature correction	±0°C	-5°C — +5°C	Temperature compensation can only be performed by 1°C (1°C change = 1.8°F) interval.
Mean fuel efficiency correction	±0%	+10% — -10%	—

- Combination meter (models with color TFT)

Items to be displayed	Initial setting value	Customize setting	Note
Air temperature correction	±0°C	-5°C — +5°C	Temperature compensation can only be performed by 1°C (1°C change = 1.8°F) interval.
Mean fuel efficiency correction	±0%	+10% — -10%	—
Seat belt 2-stage warning implementation YES/NO	2-stage warning implemented	2-stage warning implemented/2-stage warning not implemented	—
Demonstration mode permission / fault permission	OFF	fault permission / Demonstration mode permission	Demonstration mode must not be permitted when used by a customer.