

14. Charge Warning Light

A: INSPECTION

Illuminated when the ignition switch is turned ON, and goes off after the engine has been started.

NOTE:

For HEV model, when the charge warning light stays lit after the engine has been started, perform inspection for the charge warning light. <Ref. to SC(H4DO(HEV))-38, CHECK CHARGE WARNING LIGHT, INSPECTION, Integrated Starter Generator (ISG).>

SEATS

SE

	Page
1. General Description	2
2. Front Seat	7
3. Rear Seat	23
4. Seat Heater System	36