

General Description

INSTRUMENTATION/DRIVER INFO (DIAGNOSTICS)

3. General Description

A: CAUTION

1. AIRBAG SYSTEM

CAUTION:

- Do not use the electrical test equipment on the airbag system wiring harnesses and connector circuits.
- Be careful not to damage the airbag system wiring harness.

B: INSPECTION

Before performing the diagnosis, check the following items which may cause problems relating the wiper or light.

1) Check the battery. <Ref. to SC(H4DO(w/o HEV))-52, Battery.>

NOTE:

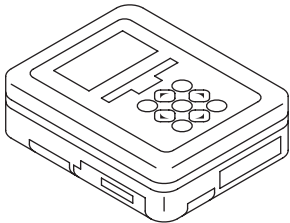
For HEV model, check the 12 volt auxiliary battery. <Ref. to SC(H4DO(HEV))-39, Battery.>

2) Check the fuse condition.

3) Check the connecting condition of harness and harness connector.

C: PREPARATION TOOL

1. SPECIAL TOOL

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST1B022XU0	1B022XU0	SUBARU SELECT MONITOR III KIT	Used for setting of each function and trouble-shooting for electrical system. NOTE: For detailed operation procedures of Subaru Select Monitor III, refer to "PC application help for Subaru Select Monitor".

2. GENERAL TOOL

TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance, voltage and current.