

10. Interior Light System

A: WIRING DIAGRAM

Refer to "Interior Light System" in the wiring diagram.

- Gasoline engine model

Model without EyeSight: <Ref. to WI(w/o HEV)-147, WITHOUT EyeSight, WIRING DIAGRAM, Interior Light System.>

Model with EyeSight: <Ref. to WI(w/o HEV)-150, WITH EyeSight, WIRING DIAGRAM, Interior Light System.>

- HEV model: <Ref. to WI(HEV)-155, WIRING DIAGRAM, Interior Light System.>

B: INSPECTION

1. CHECK DOOR SWITCH

Refer to the "INSPECTION" of the "Door Switch". <Ref. to LI-99, INSPECTION, Door Switch.>

2. CHECK REAR GATE LATCH SWITCH

Refer to "INSPECTION" of the "Rear Gate Latch and Actuator Assembly" in "SECURITY AND LOCKS" section. <Ref. to SL-57, ACTUATOR, INSPECTION, Rear Gate Latch and Actuator Assembly.>

3. CHECK TRUNK LID LATCH SWITCH

Refer to "INSPECTION" of the "Trunk Lid Latch and Actuator Assembly" in "SECURITY AND LOCKS" section. <Ref. to SL-59, ACTUATOR, INSPECTION, Trunk Lid Latch and Actuator Assembly.>

C: NOTE

For operation procedures of each component of the interior light system, refer to the respective section.

- Spot map light: <Ref. to LI-80, Spot Map Light.>
- Room light: <Ref. to LI-82, Room Light.>
- Luggage room light: <Ref. to LI-84, Luggage Room Light.>
- Trunk room light: <Ref. to LI-86, Trunk Room Light.>
- Glove box light: <Ref. to LI-88, Glove Box Light.>
- Door switch: <Ref. to LI-99, Door Switch.>