

16. Hazard Switch

A: REMOVAL


- 1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For the 12 volt engine restart battery of HEV model, disconnect the ground terminal from 12V engine restart battery sensor.

- 2) Remove the center grille assembly. <Ref. to AC-104, CENTER GRILLE ASSEMBLY, REMOVAL, Air Vent Grille.>

- 3) Release the claws, and remove the switch - hazard from the panel center assembly.

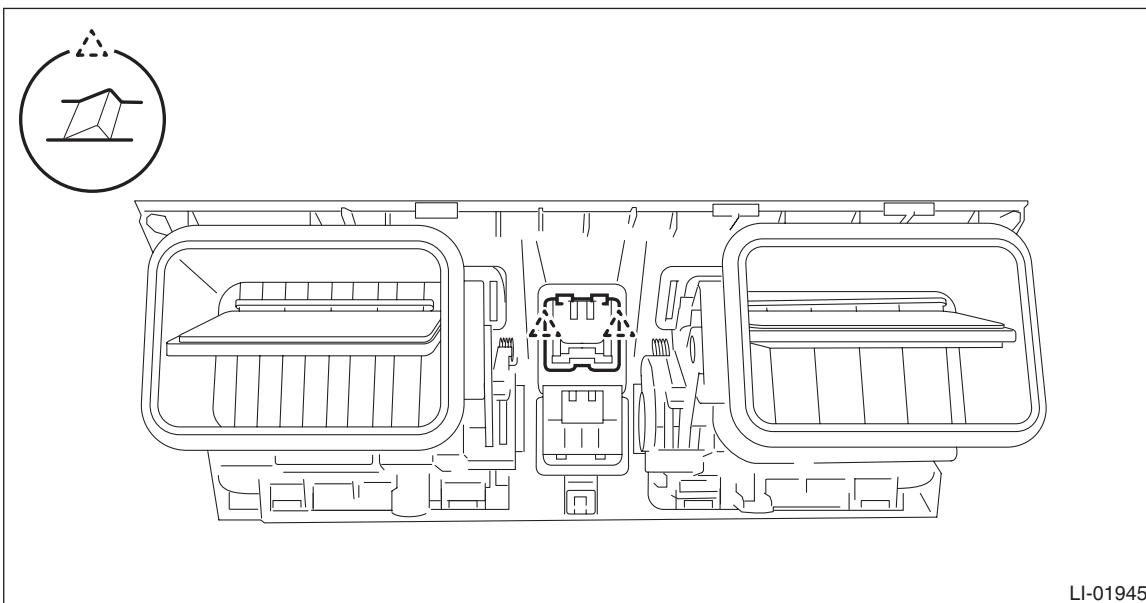

B: INSTALLATION

CAUTION:

After installing the center grille assembly, check that the air vent grille of the center grille assembly is inserted correctly into the air vent duct.

Install each part in the reverse order of removal.

C: INSPECTION

Unit inspection

Preparation tool:

Circuit tester

- 1) Check the resistance between switch terminals.

Terminal No.	Inspection conditions	Standard	Connection diagram
	Switch OFF	1 MΩ or more	
2 — 3	Switch ON	Less than 1 Ω	

LI-01252

- 2) Replace the switch - hazard if the inspection result is not within the standard value.