

## 18. Front Turn Signal Light Bulb


### A: REMOVAL

1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For the 12 volt engine restart battery of HEV model, disconnect the ground terminal from 12V engine restart battery sensor.


2) Turn the steering wheel in the opposite direction from the parts to be removed. Then remove the clips and turn over the mud guard - front.

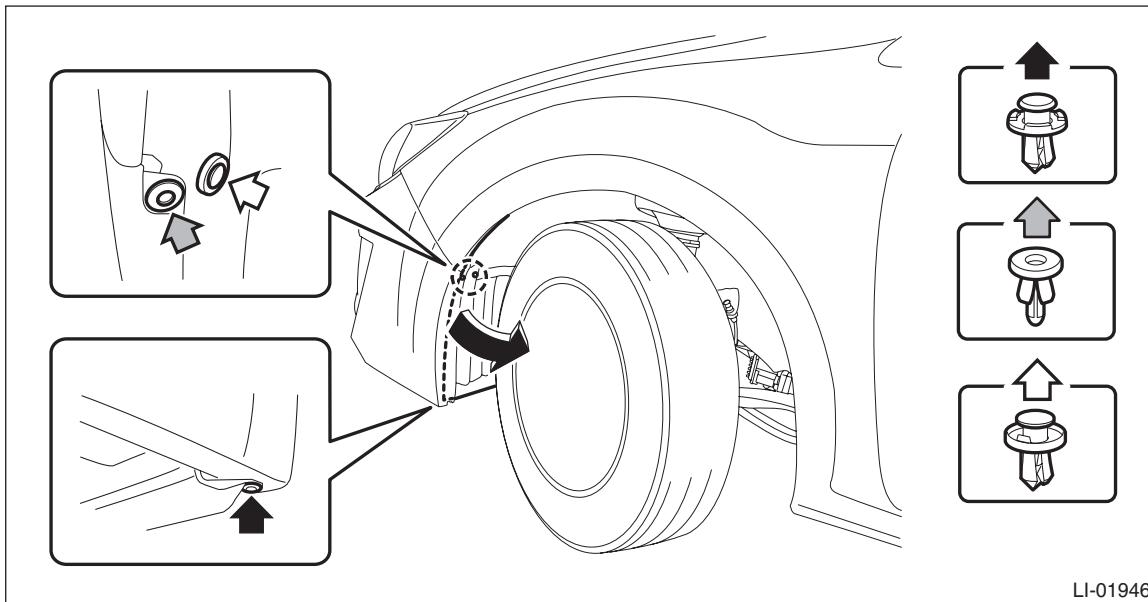

3) Remove the bulb socket and front turn signal light bulb.

**CAUTION:**

Use a dry clean cloth so that no grease or water adheres to the glass portion of the bulb.

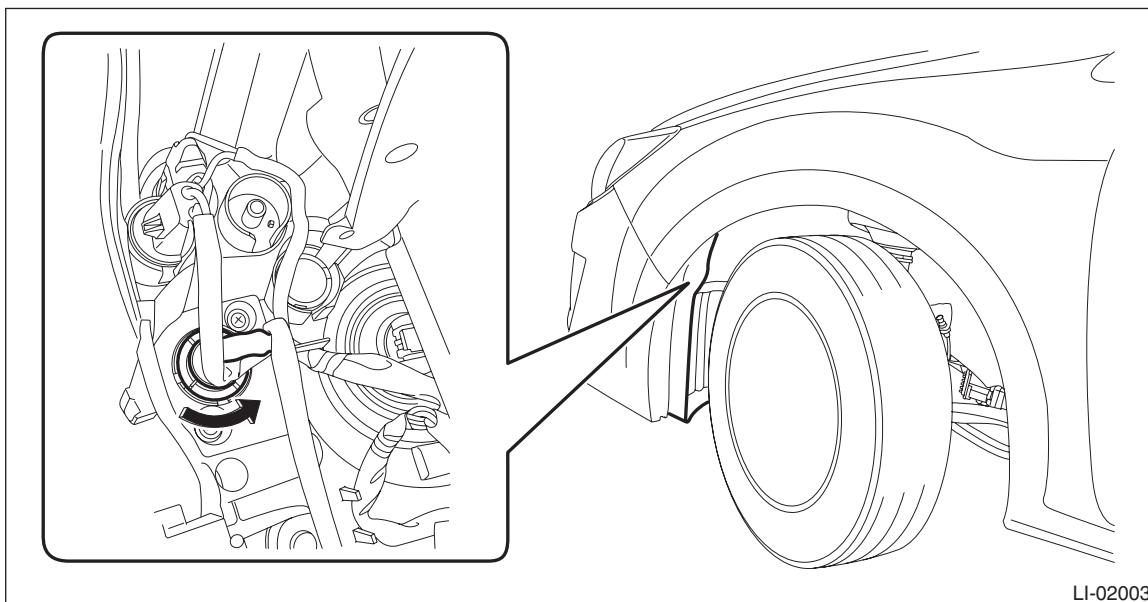

# Front Turn Signal Light Bulb

## LIGHTING SYSTEM

---

### B: INSTALLATION

Install each part in the reverse order of removal.

### C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) Replace the bulb if it is found defective.