

22. Front Fog Light Bulb


A: REMOVAL

1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For the 12 volt engine restart battery of HEV model, disconnect the ground terminal from 12V engine restart battery sensor.

2) Remove the screw and clips, and turn over the front side of the mud guard - front.

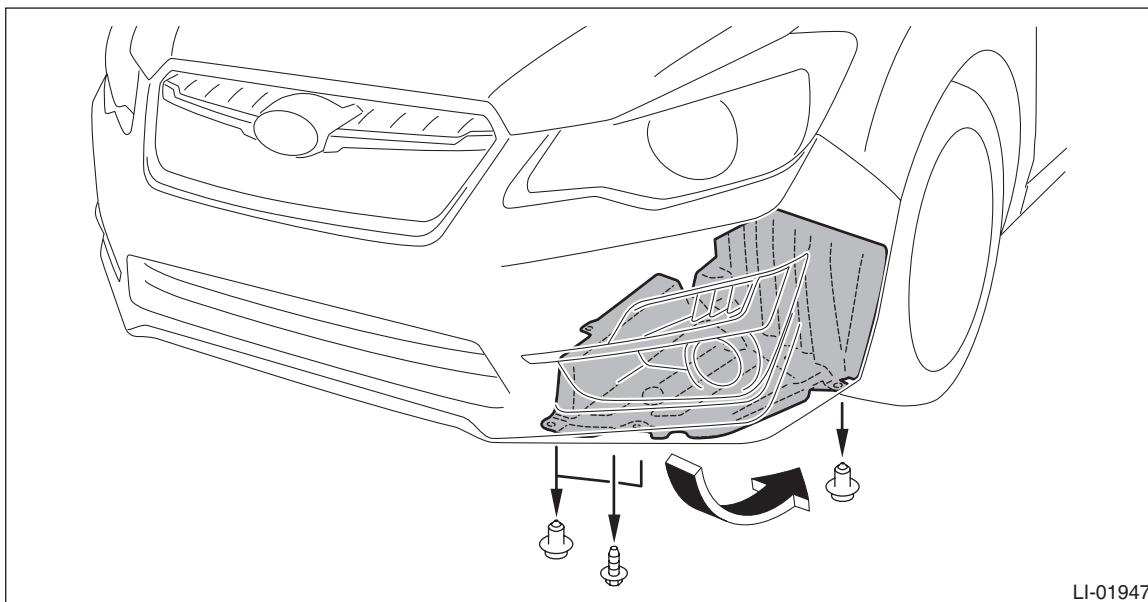

3) From the bottom of the bumper face - front, remove the front fog light bulb.


CAUTION:

Use a dry clean cloth so that no grease or water adheres to the glass portion of the bulb.

(1) Disconnect the connector.

(2) Remove the bulb.


• Model without SRF

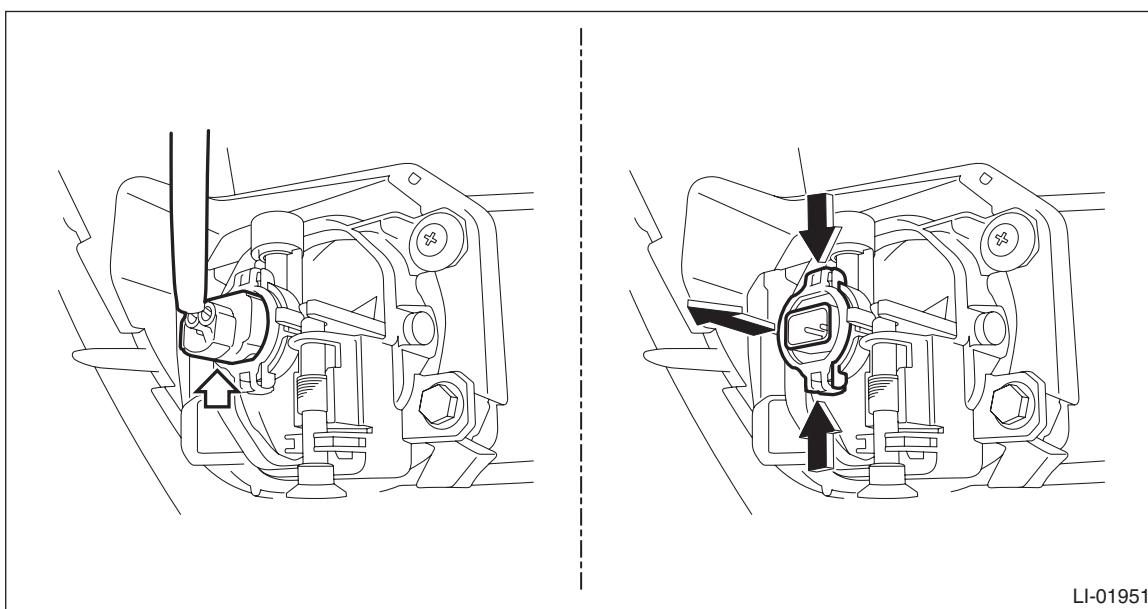

Front Fog Light Bulb

LIGHTING SYSTEM


- Model with SRF

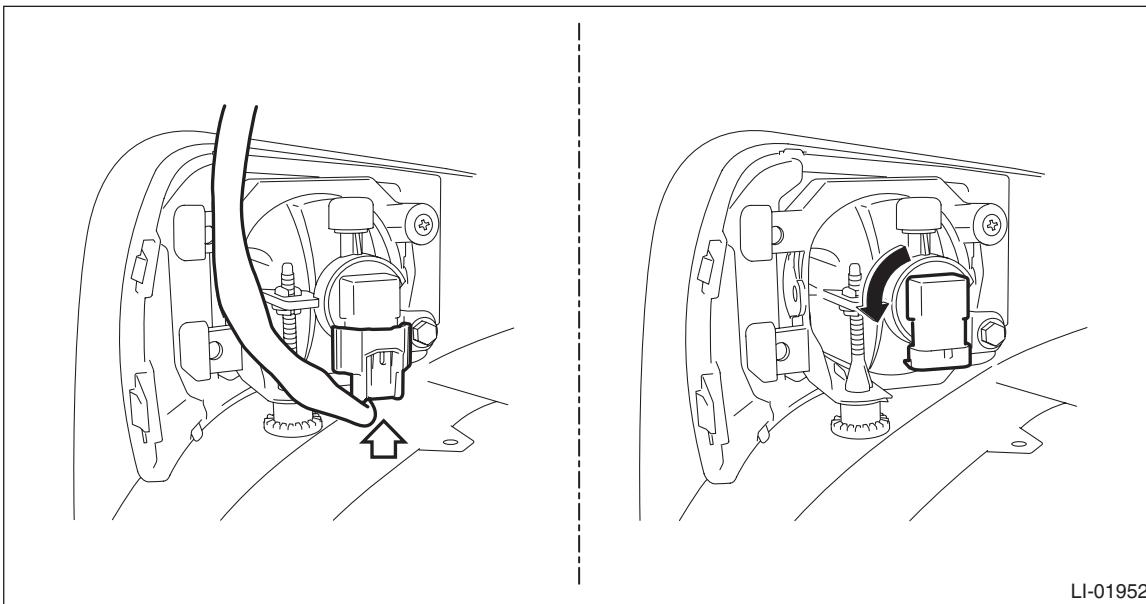

B: INSTALLATION

CAUTION:

- After connecting the connector, make sure that the bulb is locked securely.
- Install the mud guard - front so that the front end of the mud guard (b) comes outside the bumper face - front (a).

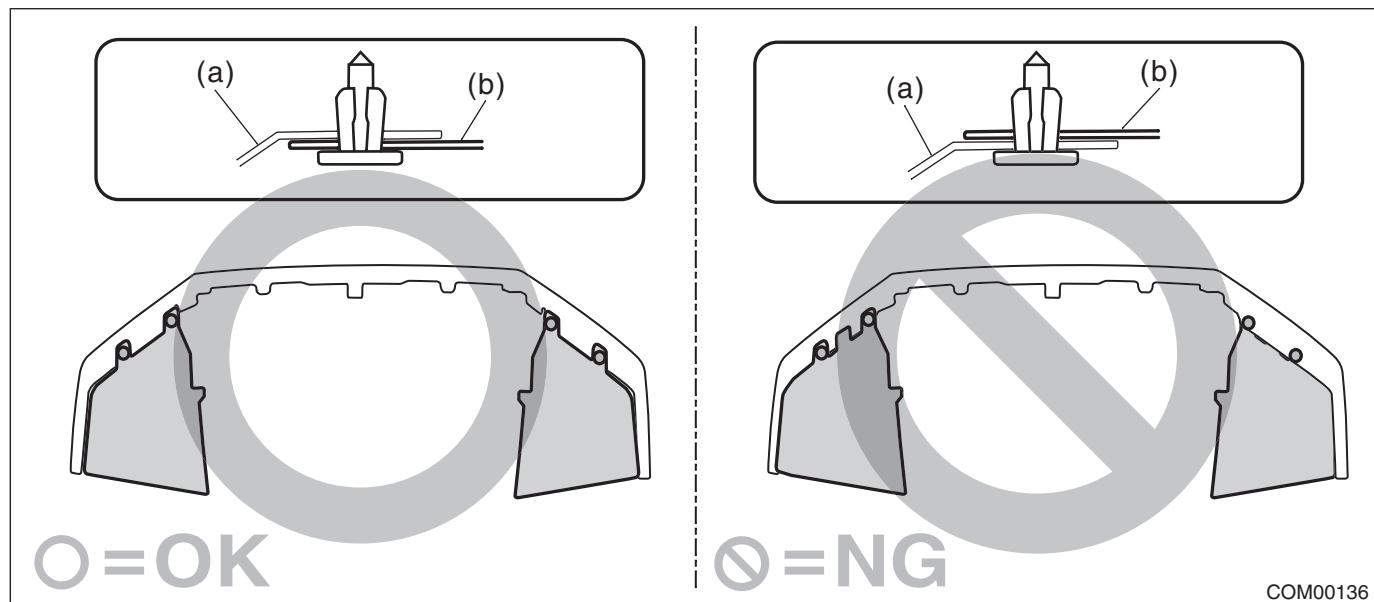

Install each part in the reverse order of removal.

C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) Replace the bulb if it is found defective.