

## 23. Side Turn Signal Light Assembly

### A: REMOVAL

- 1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For the 12 volt engine restart battery of HEV model, disconnect the ground terminal from 12V engine restart battery sensor.

- 2) Remove the light assembly - side turn mirror. <Ref. to GW-25, DISASSEMBLY, Outer Mirror Assembly.>

### B: INSTALLATION

Install each part in the reverse order of removal.

### C: INSPECTION

- 1) Install the light to check if it blinks normally.

- 2) If it fails to blink normally, replace the light assembly - side turn mirror with a new part.

NOTE:

Since LED (Light Emitting Diode) is used for the light, replace the light assembly - side turn mirror if the LED burns out.