

35. Glove Box Light

A: REMOVAL

1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:


For the 12 volt engine restart battery of HEV model, disconnect the ground terminal from 12V engine restart battery sensor.

2) Remove the pocket assembly.

(1) Attach the protective tape (a) to the panel center LWR.

(2) Remove the damper COMPL - pocket.

(3) Release the stoppers and remove the pocket assembly by pulling it toward you.

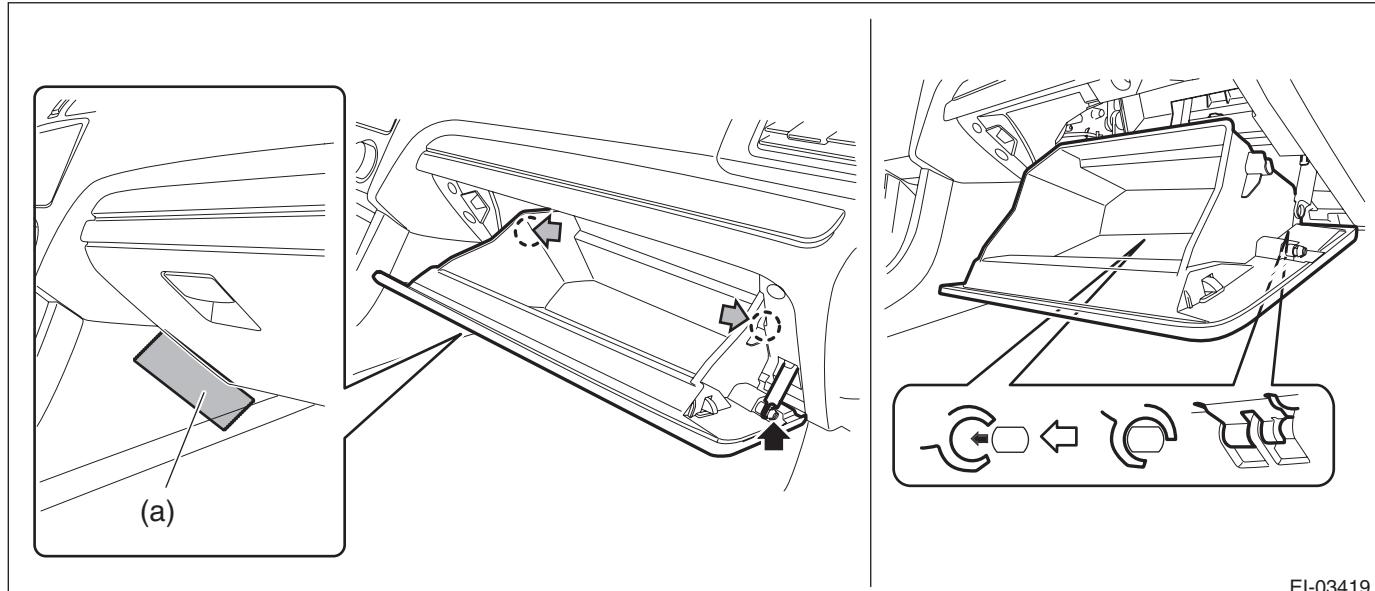


EI-03419

3) Remove the light - pocket.

(1) Release the claws and remove the light - pocket cover from the back panel - pocket.

(2) Disconnect the connector and remove the light - pocket from the cover.

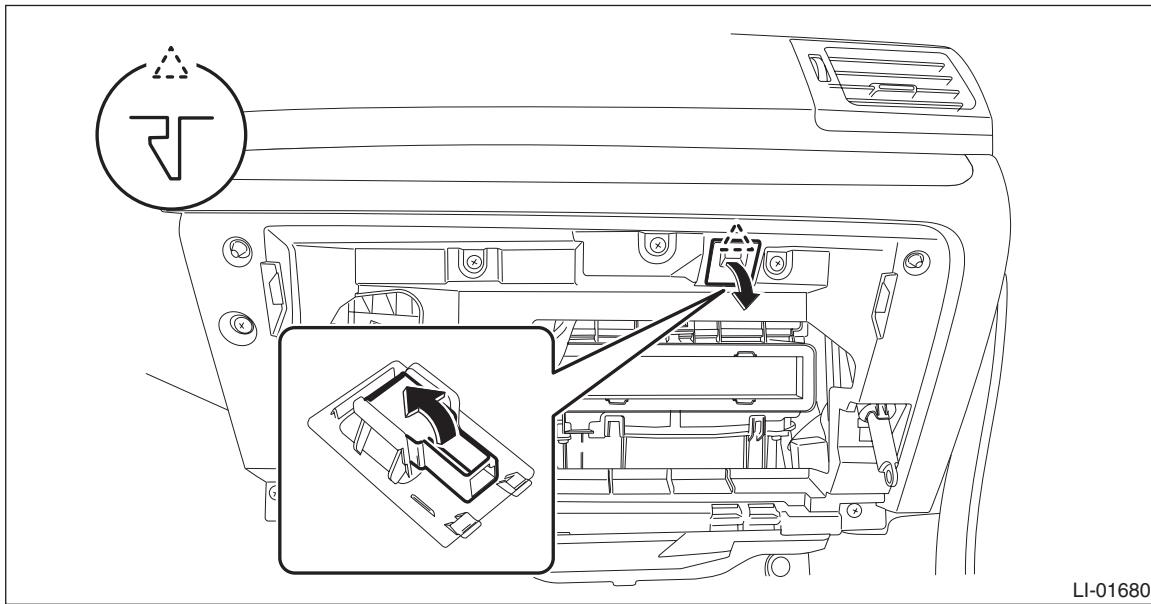

LI-01680

B: INSTALLATION

Install each part in the reverse order of removal.

C: INSPECTION

- 1) Install the light to test if it illuminates normally.
- 2) If it fails to illuminate normally, replace the light - pocket with a new part.

NOTE:

Since LED (Light Emitting Diode) is used for the light, replace the light - pocket if the LED burns out.