

## 41.Door Switch

### A: REMOVAL

1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>


NOTE:

For the 12 volt engine restart battery of HEV model, disconnect the ground terminal from 12V engine restart battery sensor.

2) Remove the switch assembly - door.

(1) Remove the screws, and pull out the switch assembly - door toward you.

(2) Disconnect the connector and remove the switch assembly - door.

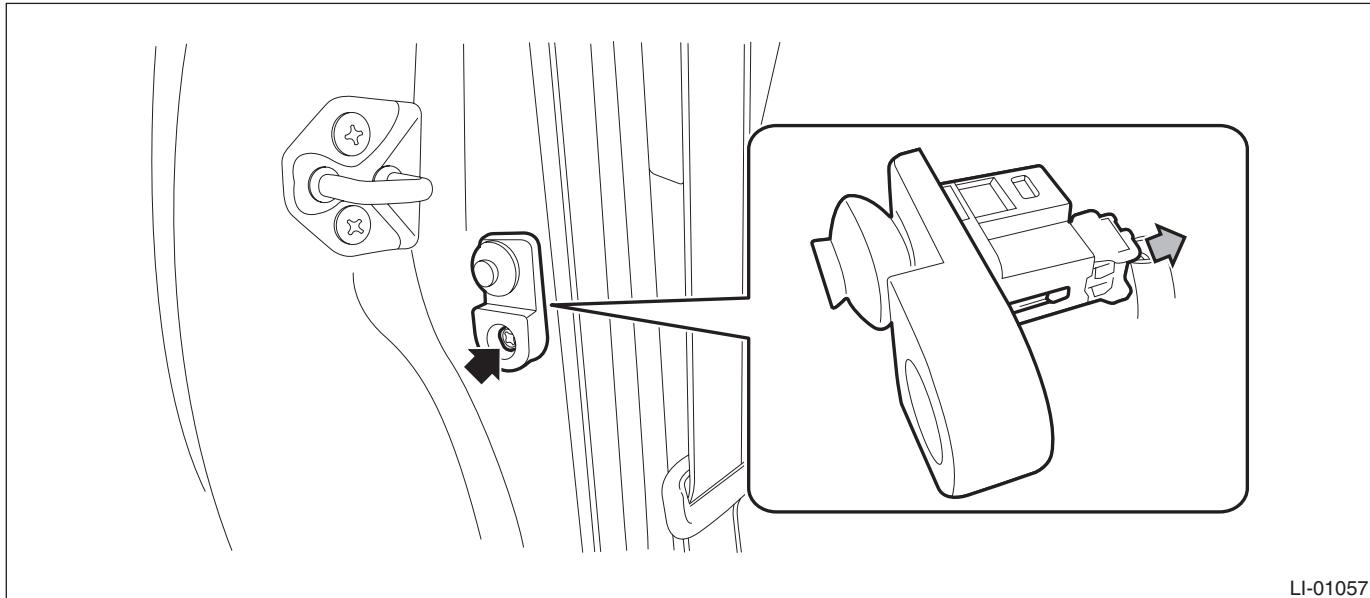

LI-01057

### B: INSTALLATION

Install each part in the reverse order of removal.

### C: INSPECTION

#### Unit inspection

**Preparation tool:**

**Circuit tester**

1) Check the resistance between switch terminals.

Terminal No.	Inspection conditions	Standard	Connection diagram
	When door is opened	Less than 1 $\Omega$	
1 — 3	When door is closed	1 M $\Omega$ or more	

LI-01327

2) Replace the switch assembly - door if the inspection result is not within the standard value.