

6. Front Fog Light System

A: WIRING DIAGRAM

Refer to "Front Fog Light System" in the wiring diagram.

- Gasoline engine model
 - Model without SRF: <Ref. to WI(w/o HEV)-131, WITHOUT SRF, WIRING DIAGRAM, Front Fog Light System.>
 - Model with SRF: <Ref. to WI(w/o HEV)-132, WITH SRF, WIRING DIAGRAM, Front Fog Light System.>
- HEV model: <Ref. to WI(HEV)-129, WIRING DIAGRAM, Front Fog Light System.>

B: INSPECTION

1. CHECK FRONT FOG LIGHT SWITCH

Refer to the "INSPECTION" of the "Combination Switch (Light)". <Ref. to LI-24, INSPECTION, Combination Switch (Light).>

C: NOTE

For operation procedures of each component of the front fog light system, refer to the respective section.

- Combination switch (light): <Ref. to LI-21, Combination Switch (Light).>
- Front fog light assembly: <Ref. to LI-53, Front Fog Light Assembly.>
- Front fog light bulb: <Ref. to LI-57, Front Fog Light Bulb.>