

8. Back-up Light System

A: WIRING DIAGRAM

Refer to "Back-up Light System" in the wiring diagram. <Ref. to WI(w/o HEV)-64, WIRING DIAGRAM, Back-up Light System.>

- Gasoline engine model: <Ref. to WI(w/o HEV)-64, WIRING DIAGRAM, Back-up Light System.>
- HEV model: <Ref. to WI(HEV)-64, WIRING DIAGRAM, Back-up Light System.>

B: INSPECTION

1. CHECK BACK-UP LIGHT SWITCH (MT MODEL)

Refer to "INSPECTION" of the "Switches and Harness" in "MANUAL TRANSMISSION AND DIFFERENTIAL" section. <Ref. to 5MT-36, BACK-UP LIGHT SWITCH, INSPECTION, Switches and Harness.>

2. CHECK INHIBITOR SWITCH (CVT MODEL)

Refer to "INSPECTION" of the "Inhibitor Switch" in "CONTINUOUSLY VARIABLE TRANSMISSION" section.

- Gasoline engine model: <Ref. to CVT(TR580)-96, INSPECTION, Inhibitor Switch.>
- HEV model: <Ref. to CVT(TH58A)-97, INSPECTION, Inhibitor Switch.>

C: NOTE

For operation procedures of each component of the back-up light system, refer to the respective section.

- Rear combination light assembly: <Ref. to LI-60, Rear Combination Light Assembly.>
- Back-up light bulb: <Ref. to LI-71, Back-up Light Bulb.>