

9. Stop Light System

A: WIRING DIAGRAM

Refer to "Stop Light System" in the wiring diagram.

- Gasoline engine model

4 door model (without EyeSight): <Ref. to WI(w/o HEV)-211, 4 DOOR MODEL (WITHOUT EyeSight), WIRING DIAGRAM, Stop Light System.>

4 door model (with EyeSight): <Ref. to WI(w/o HEV)-212, 4 DOOR MODEL (WITH EyeSight), WIRING DIAGRAM, Stop Light System.>

5 door model / XV model (without EyeSight): <Ref. to WI(w/o HEV)-214, 5 DOOR MODEL (WITHOUT EyeSight), WIRING DIAGRAM, Stop Light System.>

5 door model / XV model (with EyeSight): <Ref. to WI(w/o HEV)-215, 5 DOOR MODEL (WITH EyeSight), WIRING DIAGRAM, Stop Light System.>

- HEV model: <Ref. to WI(HEV)-210, WIRING DIAGRAM, Stop Light System.>

B: INSPECTION

1. CHECK STOP LIGHT SWITCH

Refer to "INSPECTION" of the "Stop Light Switch" in "BRAKE" section. <Ref. to BR-76, INSPECTION, Stop Light Switch.>

C: NOTE

For operation procedures of each component of the stop light system, refer to the respective section.

- Rear combination light assembly: <Ref. to LI-60, Rear Combination Light Assembly.>
- Tail light/stop light bulb: <Ref. to LI-63, Tail/Stop Light Bulb.>
- High-mounted stop light: <Ref. to LI-76, High-mounted Stop Light.>