

### 11.Read Current Data

#### A: OPERATION

Check the operating condition of each sensor in the event of malfunction in the seat belt buckle switch, or when the seat belt buckle switch has been replaced.

- 1) On «Main Menu» display, select {Each System Check}.
- 2) On «System Selection Menu» display, select {Occupant Detection System}.
- 3) On «Occupant Detection System» display, select {Current Data Display & Save}.

The following table is for support data.

Item	Display	Note
Front Passenger Seat Status	Empty or Child/Adult or Child	<p>“Adult or Child” when the seat is occupied  “Empty or Child” when the seat is unoccupied or when child restraint seat is installed</p> <p><b>CAUTION:</b>  When checking the operating status, be careful of the followings.</p> <ul style="list-style-type: none"> <li>• When the seat is unoccupied: Do not place anything on the seat.</li> <li>• Child restraint seat: Install the seat according to its instruction manual.</li> <li>• When the seat is occupied: Someone who weighs at least approx. 70 kg (155 lb) must be seated during the check.</li> </ul>

#### NOTE:

For detailed operation procedures, refer to “PC application help for Subaru Select Monitor”.