

# General Description


## SEATS

### 1. General Description

#### A: COMPONENT

##### 1. FRONT SEAT

- Manual seat LH

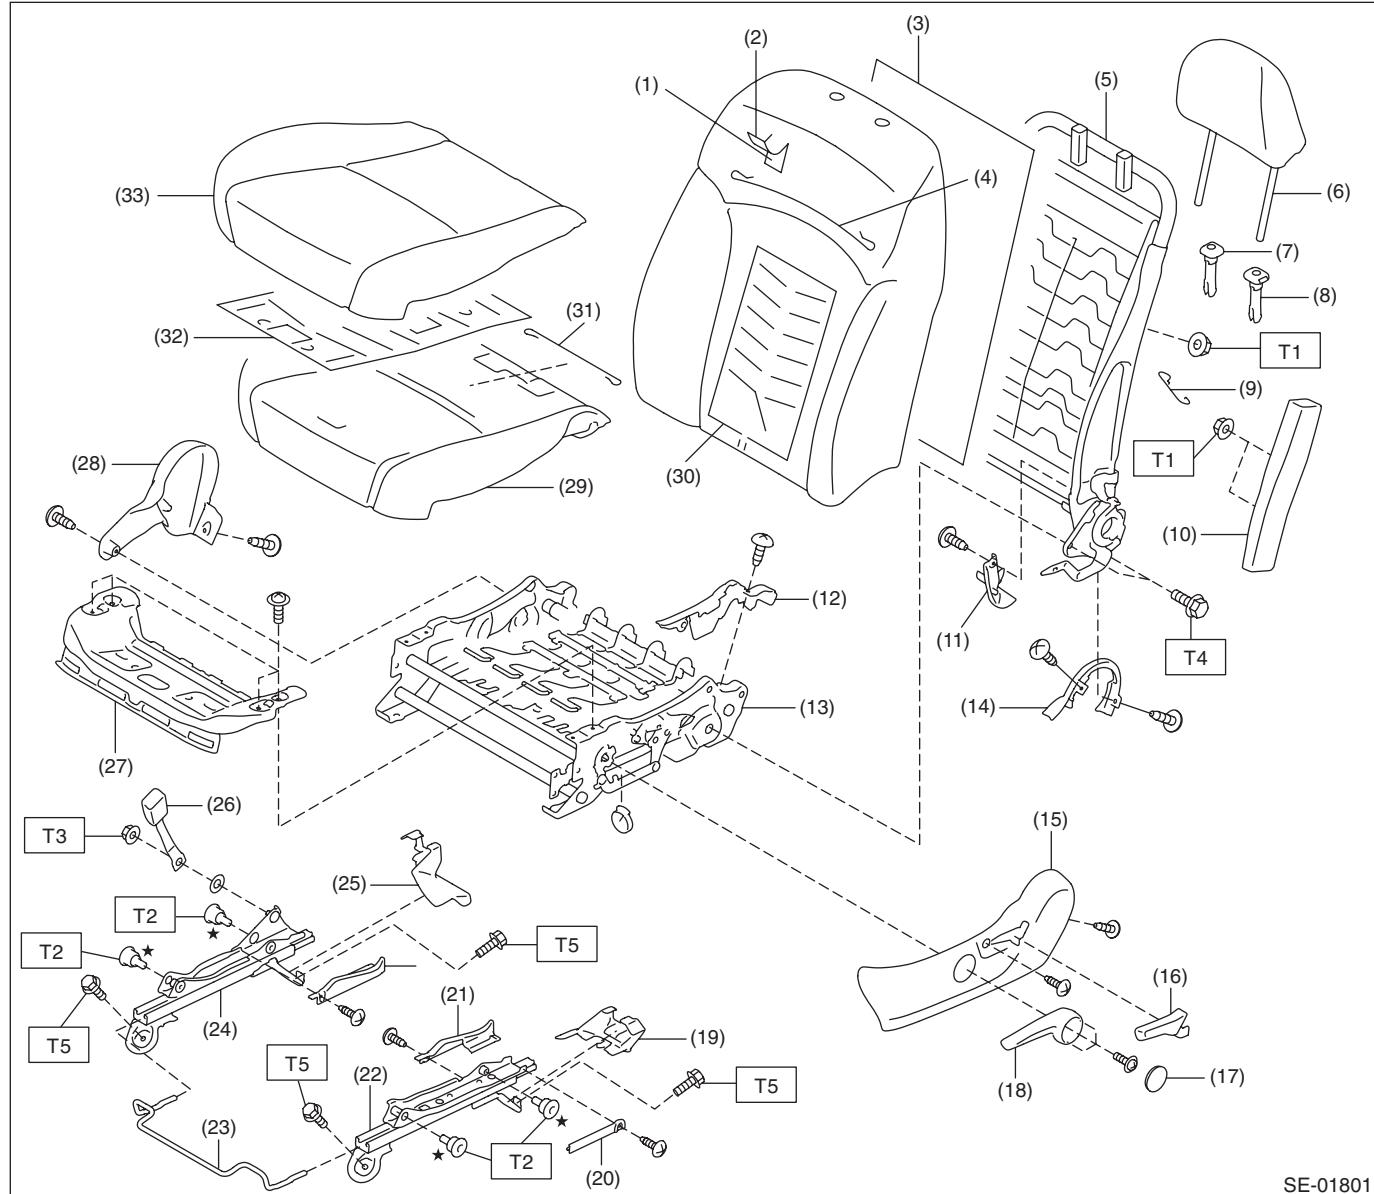

# General Description

SEATS

---


(1) Pad ASSY - front seat backrest	(15) Cover - hinge front seat OUT	(29) Pad ASSY - front seat cushion
(2) Cover COMPL - front backrest	(16) Lever - reclining	(30) Heater unit - front seat backrest
(3) Cover - silencer front seat backrest	(17) Cap - lifter lever	(31) Wire set - front seat cushion
(4) Wire set - front seat backrest	(18) Knob - lifter	(32) Heater unit - front seat cushion
(5) Frame ASSY - front backrest	(19) Cover - bolt rear OUT	(33) Cover - front cushion
(6) Headrest ASSY - front	(20) Cover - slide rail OUT	
(7) Bushing - free headrest	(21) Cover - slide rail OUT	<b><i>Tightening torque: N·m (kgf·m, ft·lb)</i></b>
(8) Bushing - lock headrest	(22) Slide rail ASSY - OUT	<b><i>T1: 6 (0.61, 4.4)</i></b>
(9) Hook - backrest front	(23) Lever - towel bar	<b><i>T2: 15 (1.53, 11.1)</i></b>
(10) Side airbag module LH	(24) Slide rail ASSY - INN	<b><i>T3: 38 (3.87, 28.0)</i></b>
(11) Cover - inner front	(25) Cover - bolt rear INN	<b><i>T4: 52 (5.30, 38.4)</i></b>
(12) Cover - frame front cushion	(26) Seat belt inner - front	<b><i>T5: 53 (5.40, 39.1)</i></b>
(13) Frame ASSY - front cushion	(27) Panel - front seat	
(14) Cover - hinge base front seat	(28) Cover - hinge front seat INN	

---

# General Description

## SEATS

- Manual seat RH

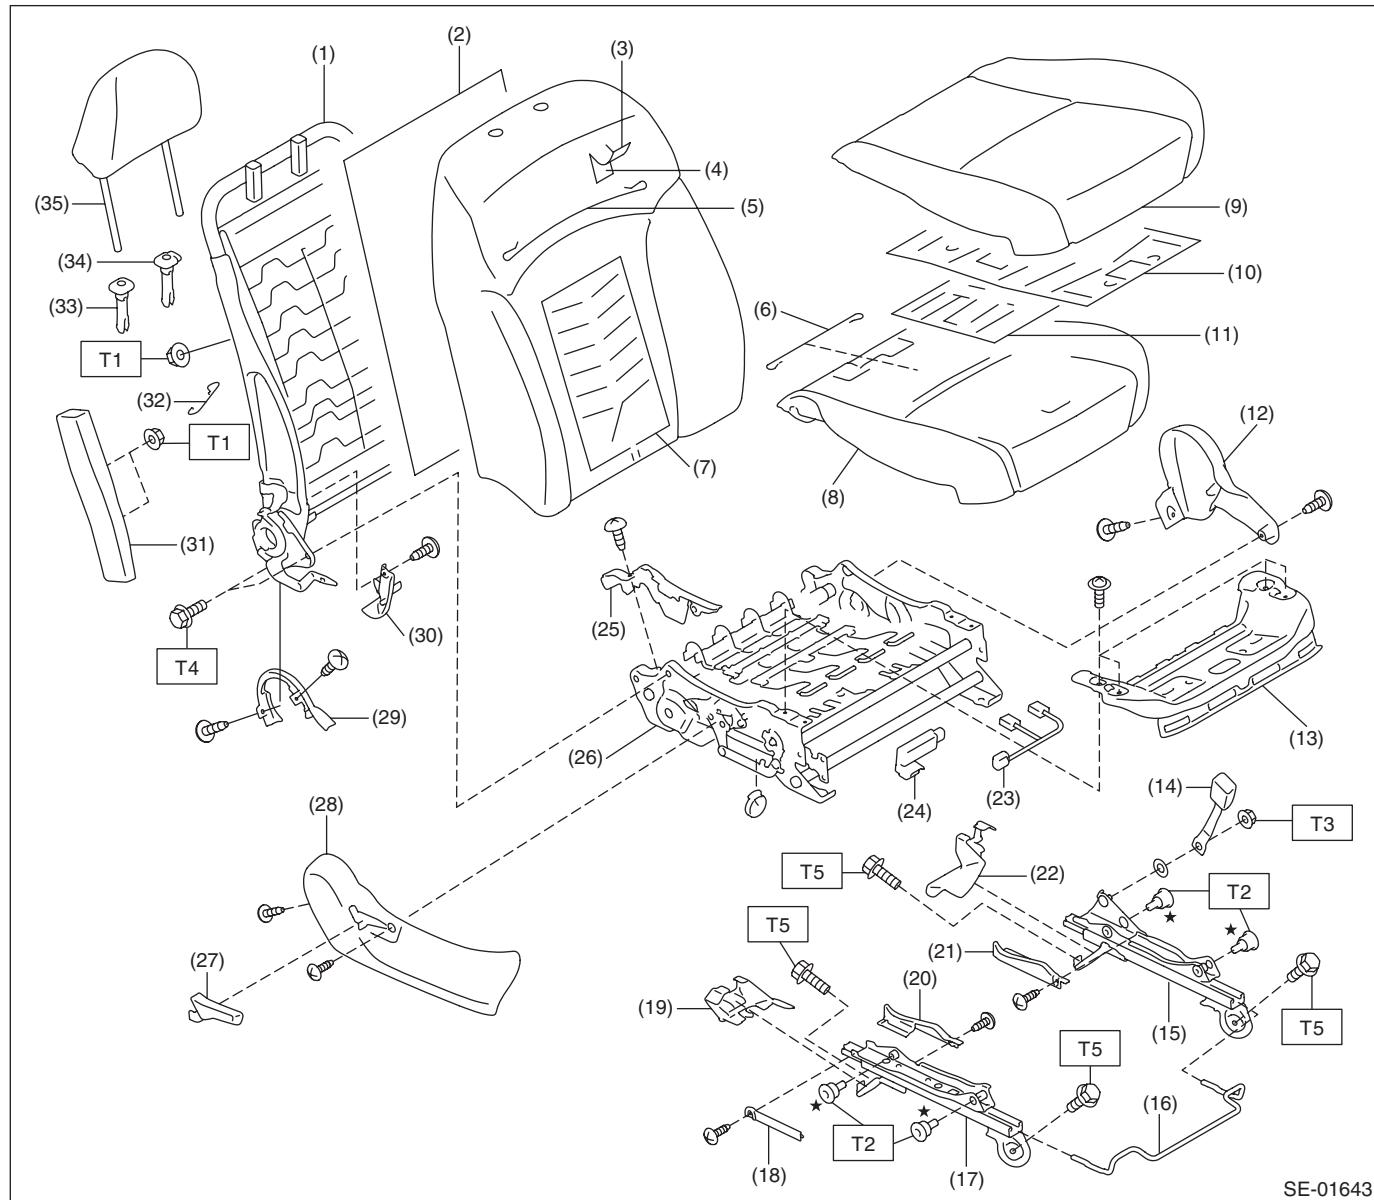


(1) Frame ASSY - front backrest	(15) Slide rail ASSY - INN	(29) Cover - hinge base front seat
(2) Cover - silencer front seat backrest	(16) Lever - towel bar	(30) Cover - inner front
(3) Cover COMPL - front backrest	(17) Slide rail ASSY - OUT	(31) Side airbag module RH
(4) Pad ASSY - front seat backrest	(18) Cover - slide rail OUT	(32) Hook - backrest front
(5) Wire set - front seat backrest	(19) Cover - bolt rear OUT	(33) Bushing - free headrest
(6) Wire set - front seat cushion	(20) Cover - slide rail OUT	(34) Bushing - lock headrest
(7) Heater unit - front seat backrest	(21) Cover - slide rail INN	(35) Headrest ASSY - front
(8) Pad ASSY - front seat cushion	(22) Cover - bolt rear INN	
(9) Cover - front cushion	(23) Harness - occupant detection sensor	
(10) Heater unit - front cushion	(24) Control unit - occupant detection sensor	
(11) Occupant detection sensor	(25) Cover - frame front seat cushion	<b>Tightening torque: N·m (kgf·m, ft·lb)</b>
(12) Cover - hinge front seat INN	(26) Frame ASSY - front seat cushion	<b>T1: 6 (0.61, 4.4)</b>
(13) Panel - front seat	(27) Lever - reclining	<b>T2: 15 (1.53, 11.1)</b>
(14) Seat belt inner - front	(28) Cover - hinge front seat OUT	<b>T3: 38 (3.87, 28.0)</b>
		<b>T4: 52 (5.30, 38.4)</b>
		<b>T5: 53 (5.40, 39.1)</b>

# General Description

SEATS

## 2. REAR SEAT

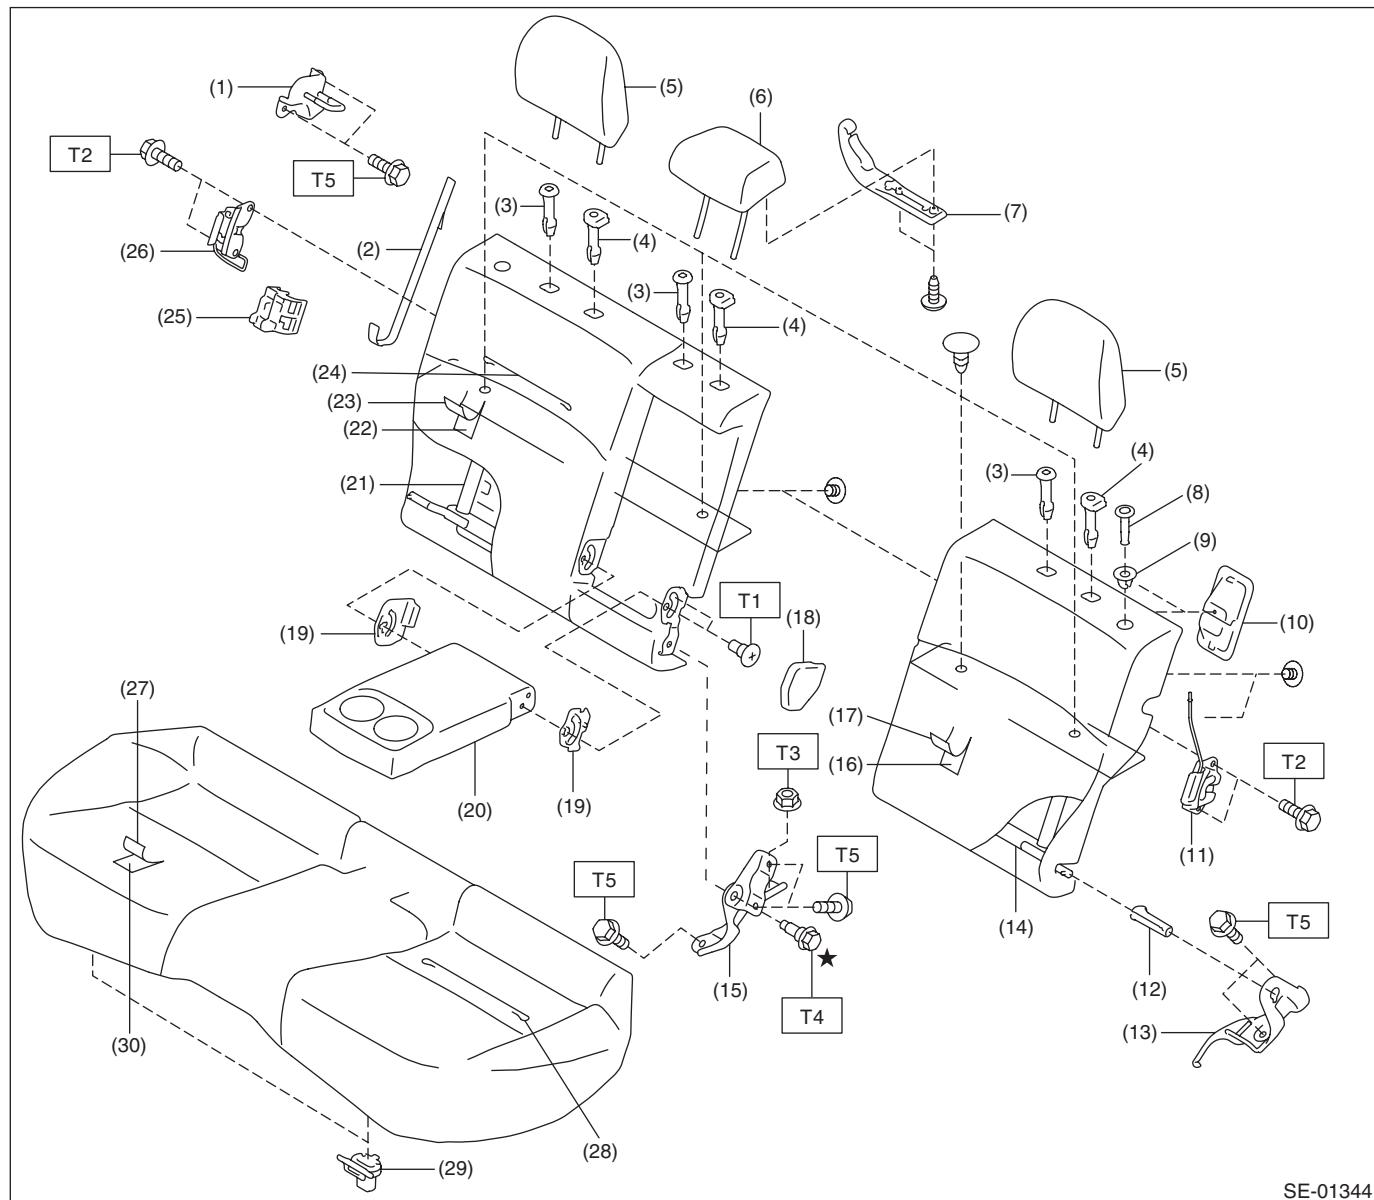

(1) Striker - backrest rear RH	(14) Frame ASSY - rear backrest LH	(27) Cover - rear cushion
(2) Knob - strap (4 door model)	(15) Hinge ASSY - backrest center	(28) Wire set - rear cushion
(3) Bushing - headrest	(16) Pad ASSY - rear seat backrest LH	(29) Hook - seat cushion rear
(4) Bushing - lock ASSY	(17) Cover COMPL - rear backrest LH	(30) Pad and frame ASSY - rear cushion
(5) Headrest ASSY - rear backrest	(18) Cover - armrest	
(6) Headrest ASSY - rear center	(19) Bushing - rear armrest	
(7) Belt guide - rear seat (5 door model/XV model)	(20) Armrest ASSY - rear center	
(8) Knob - backrest rear	(21) Frame ASSY - rear backrest RH	
(9) Knob - guide	(22) Pad ASSY - rear seat backrest RH	
(10) Tether anchor cover	(23) Cover COMPL - rear backrest RH	
(11) Lock ASSY - backrest rear LH	(24) Wire set - rear backrest	
(12) Bushing - backrest hinge	(25) Knob - strap guide (4 door model)	
(13) Hinge ASSY - rear backrest	(26) Lock ASSY - backrest rear RH	

**Tightening torque: N·m (kgf·m, ft·lb)**

**T1: 14.7 (1.5, 10.8)**

**T2: 22.5 (2.3, 16.6)**

**T3: 24.5 (2.5, 18.1)**

**T4: 28.9 (2.9, 21.3)**

**T5: 33 (3.4, 24.3)**

## General Description

### SEATS

---

#### **B: CAUTION**

When removing the front seat from the vehicle, refer to “CAUTION” of “General Description” in “AIRBAG SYSTEM” section. <Ref. to AB-10, CAUTION, General Description.>

#### **C: PREPARATION TOOL**

##### **1. GENERAL TOOL**

TOOL NAME	REMARKS
Long nose plier	Used for removing the hog ring.
Hog ring pliers	Used for installing the hog ring.
Circuit tester	Used for measuring resistance and voltage.