

3. Rear Seat

A: REMOVAL

CAUTION:

- Airbag system satellite safing sensor is located in the lower of the rear seat cushion center. Before removing the rear seat, refer to "CAUTION" of "General Description" in "AIRBAG SYSTEM" section. <Ref. to AB-10, CAUTION, General Description.>
- The airbag system is fitted with a backup power supply. After disconnecting the battery ground cable, the airbag may operate if you do not wait for 60 seconds before starting the service of airbag system.

1) Disconnect the ground cable from battery and wait for at least 60 seconds before starting work. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For the 12 volt engine restart battery of HEV model, disconnect the ground terminal from 12V engine restart battery sensor.

2) Remove the rear seat cushion assembly.


(1) Push the corners of the rear seat cushion from above.

(2) While pushing the corners of the rear seat cushion from above, pull the knob of the hook - seat cushion rear towards yourself.

(3) While pulling the knob towards yourself, disconnect the hooks by lifting up the rear seat cushion.

NOTE:


Pull the left side of the knob to disconnect the LH side hook, and pull the right side of the knob to disconnect the RH side hook.

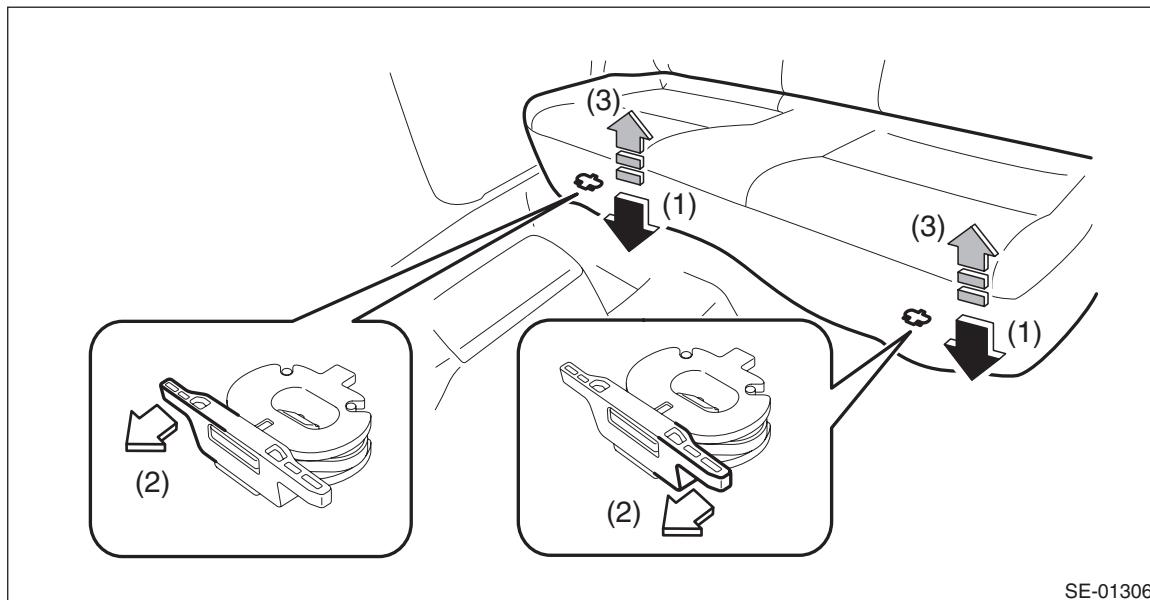

Rear Seat

SEATS


(4) Remove the hook (A) by pushing it back while lifting the front side of the rear seat cushion, and remove the rear seat cushion.

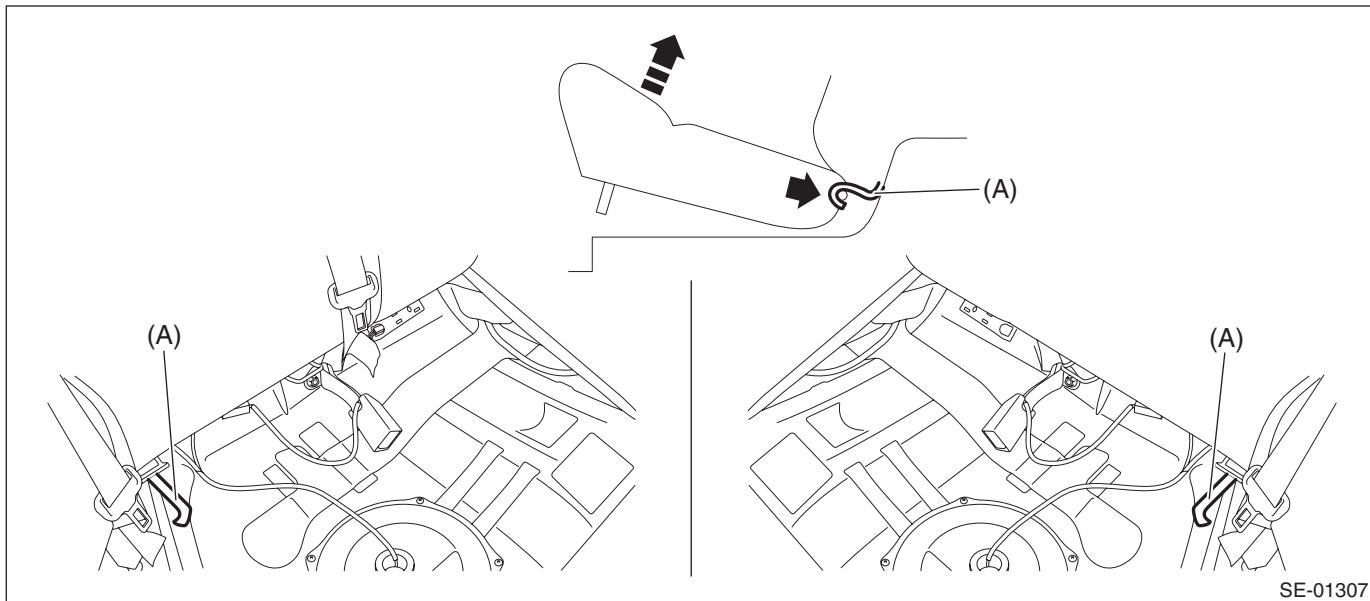


3) Remove the backrest assembly LH.

(1) Tilt the backrest assembly LH forward.


(2) Remove the clips located at the bottom of the cover COMPL - rear backrest LH and RH of the rear seat back.

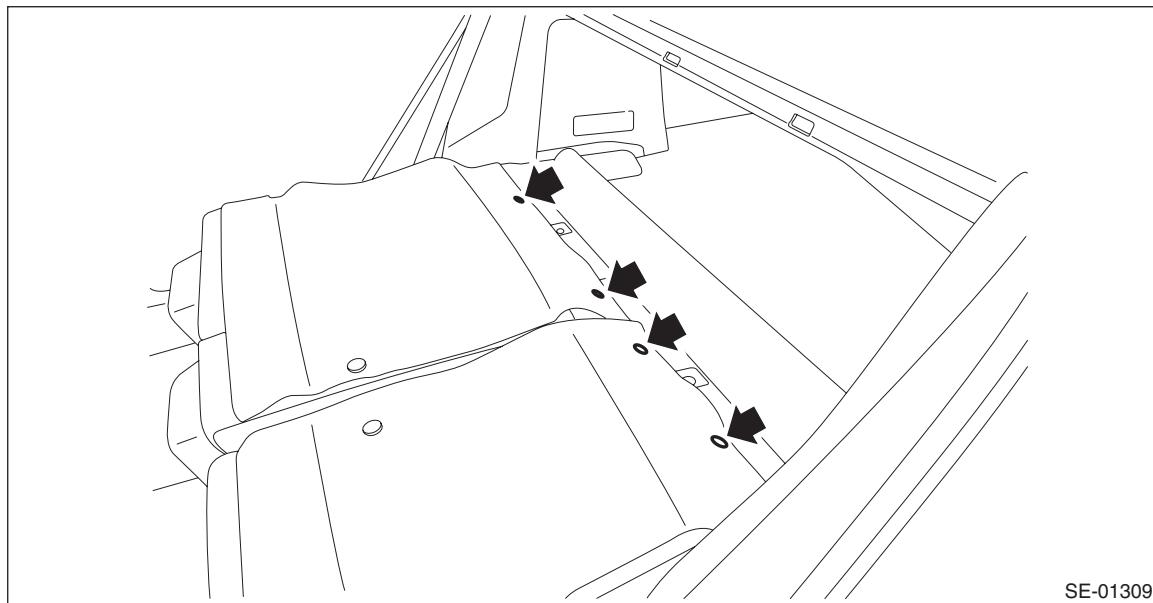

(3) Turn over the cover COMPL - rear backrest LH to remove the bolts.

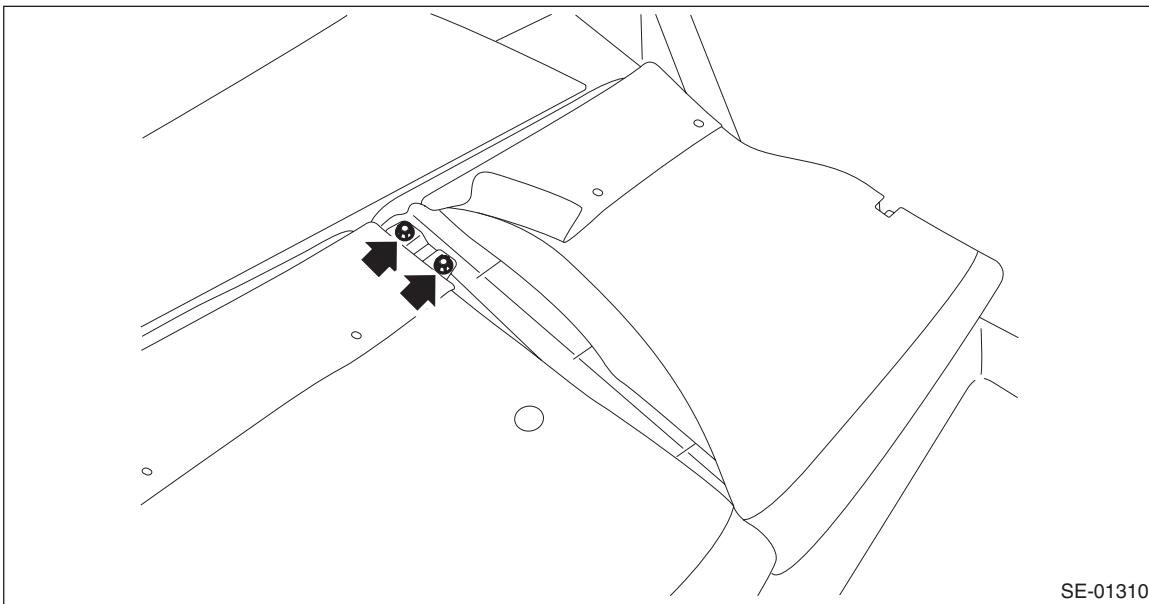

(4) Remove the backrest assembly LH from the hinge assembly.

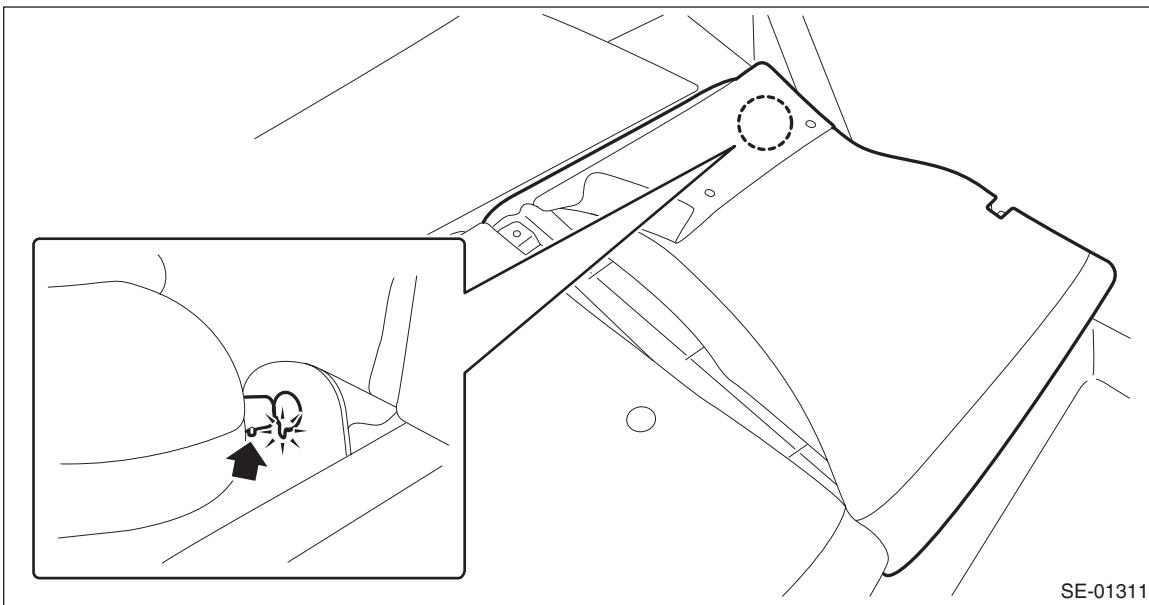

NOTE:


The backrest assembly cannot be removed unless pin positions on the hinge assembly side and backrest assembly side are aligned.

Rear Seat

SEATS


4) Remove the backrest assembly RH.

(1) Remove the bolts and nuts.

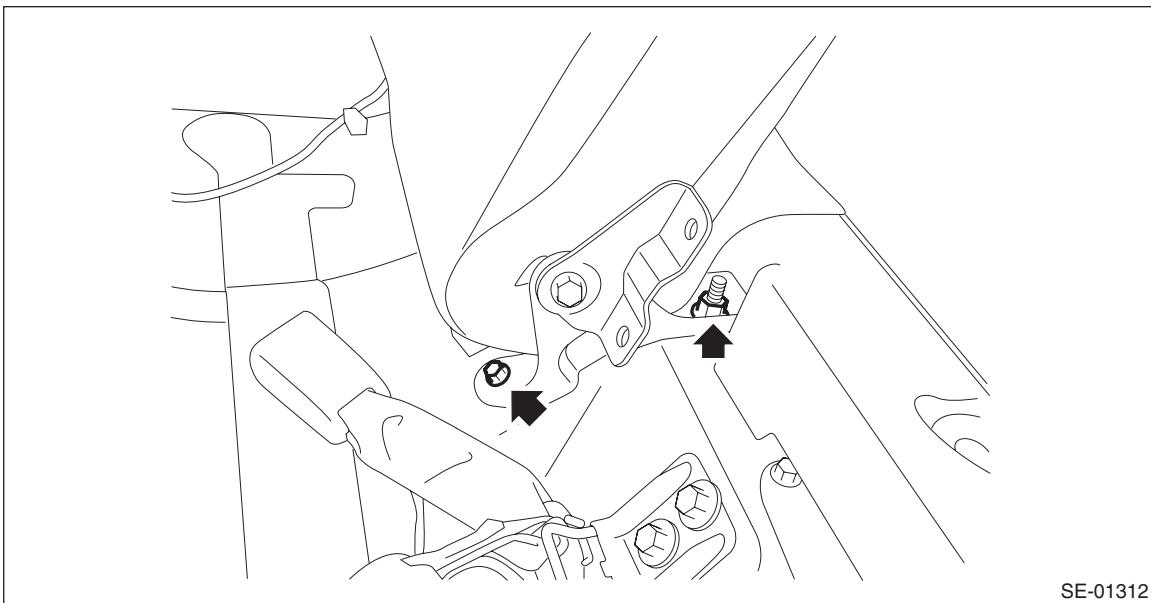

SE-01312

(2) Remove the backrest assembly RH from the hinge assembly.

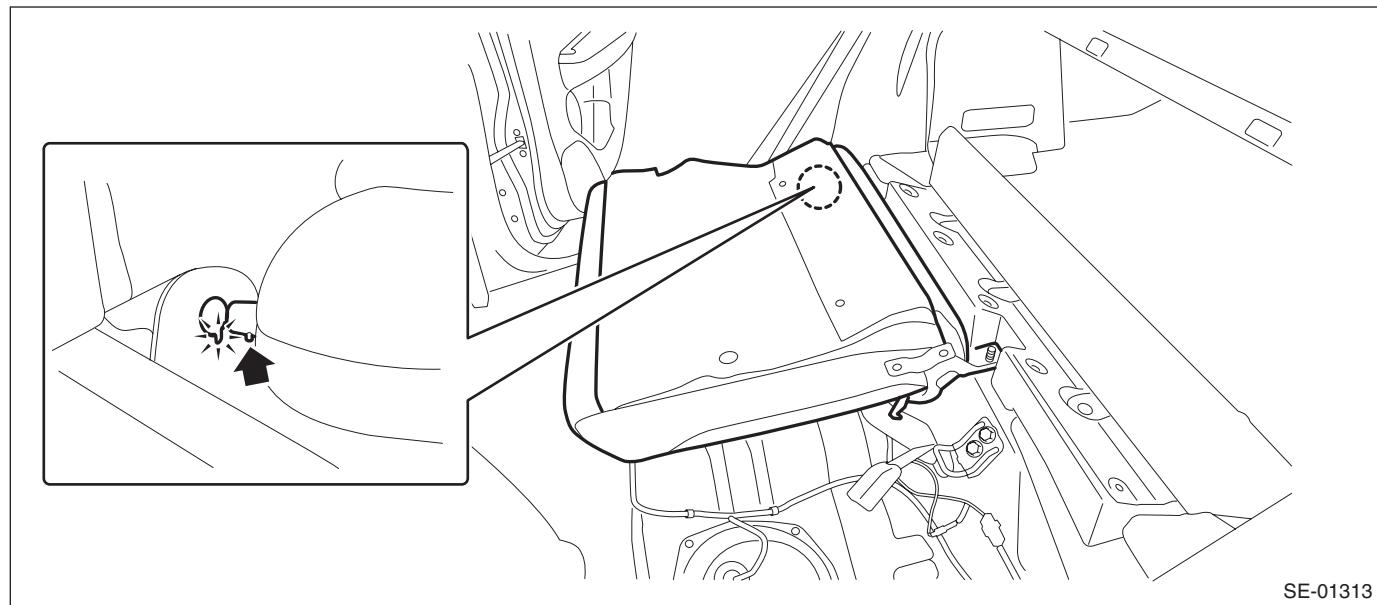

SE-01313

NOTE:

The backrest assembly cannot be removed unless pin positions on the hinge assembly side and backrest assembly side are aligned.

B: INSTALLATION

Install each part in the reverse order of removal.

NOTE:


- After installing the backrest assembly, make sure that each seat belt operates normally.
- Make sure that they are properly secured on each hook on the vehicle side.

Tightening torque:

Refer to "COMPONENT" of "General Description". <Ref. to SE-5, REAR SEAT, COMPONENT, General Description.>

C: DISASSEMBLY

- 1) Remove the rear seat. <Ref. to SE-23, REMOVAL, Rear Seat.>
- 2) Remove the headrest assembly - rear backrest.
- 3) Remove the armrest assembly - rear center. (model with armrest assembly - rear center)
 - (1) Remove the cover - armrest by pulling it in the direction of the arrow (black).
 - (2) Remove the screws and remove the armrest assembly - rear center.

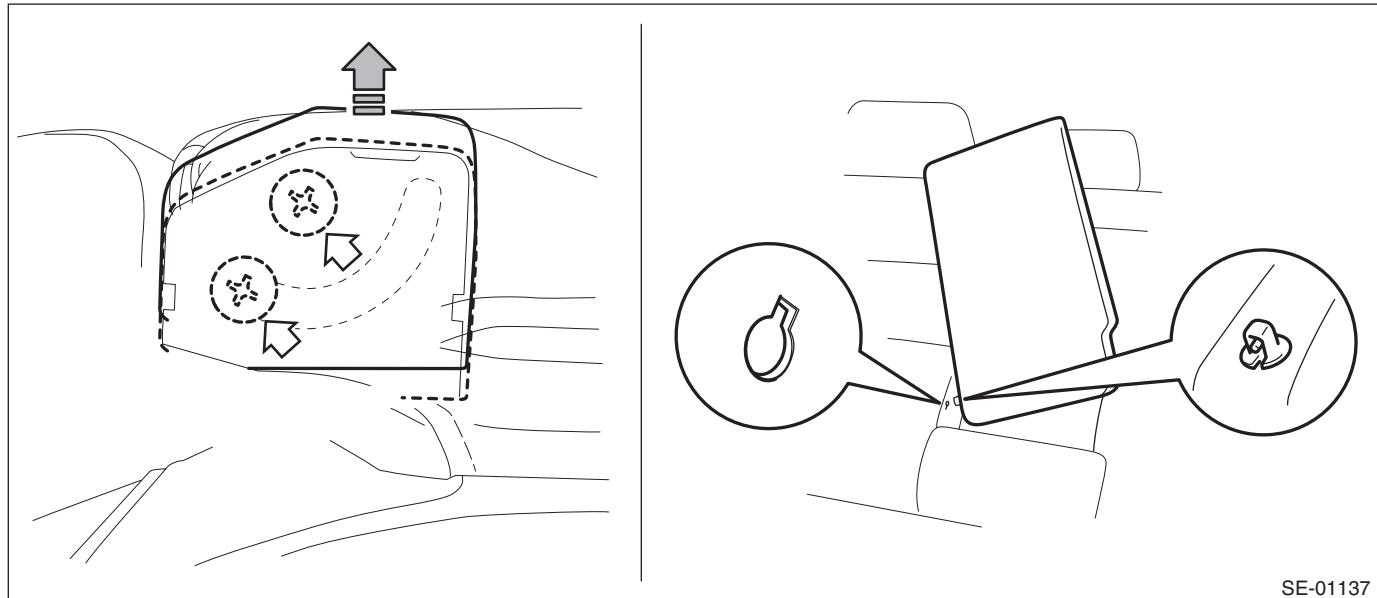


NOTE:

The armrest assembly - rear center cannot be detached unless pin positions on the RH side of the backrest assembly and on the center side of the armrest assembly - rear are aligned.


Rear Seat

SEATS

4) Remove the knob - backrest. (Screw-in type)

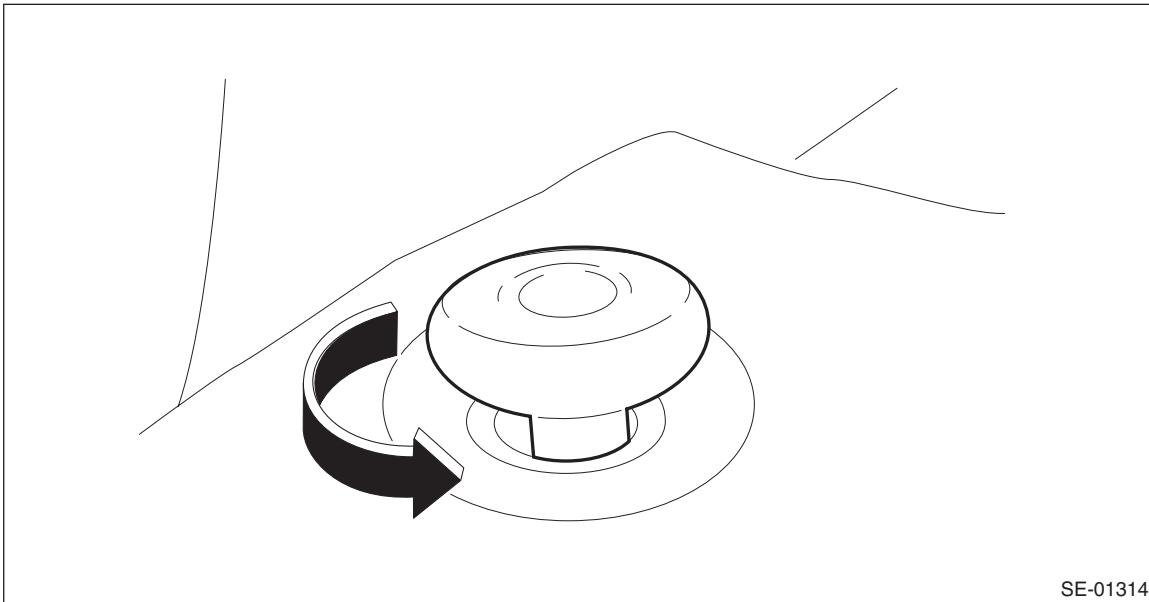


5) Remove the clips on the backside of the cover COMPL - rear backrest LH.

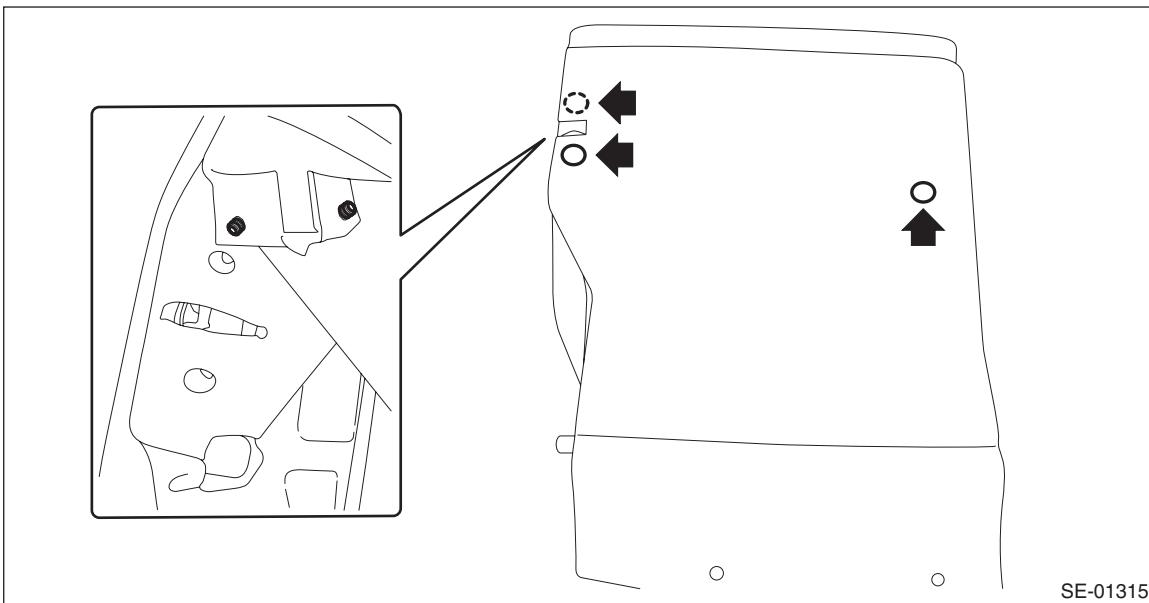

Rear Seat


SEATS

- 6) Detach the plastic fastener at the bottom of backrest assembly LH and turn over the cover COMPL - rear backrest LH.

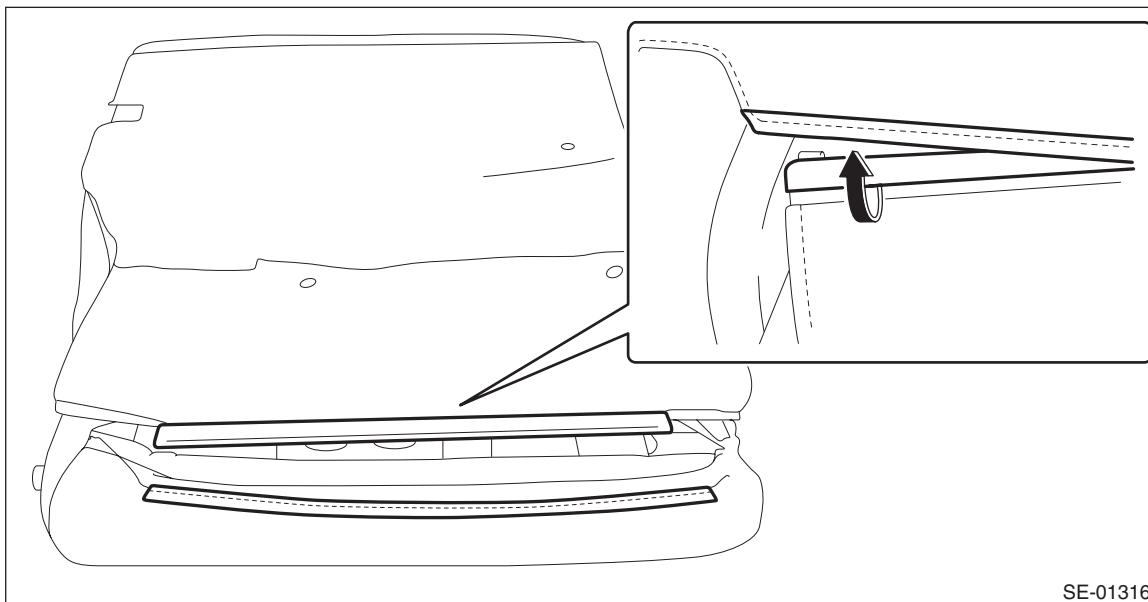

SE-01316

- 7) Remove the plastic hooks on the back side of the backrest assembly LH, and turn over the backrest assembly.

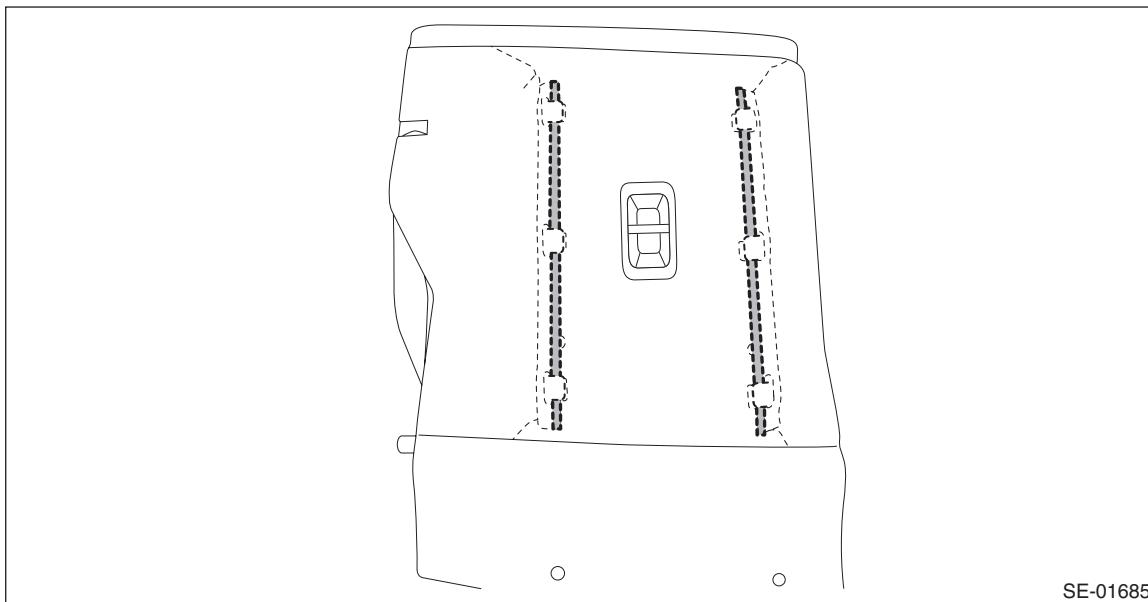


SE-01685

Rear Seat


SEATS

8) Pull up the pad and cover, and remove the tether anchor cover from the inside of back board.

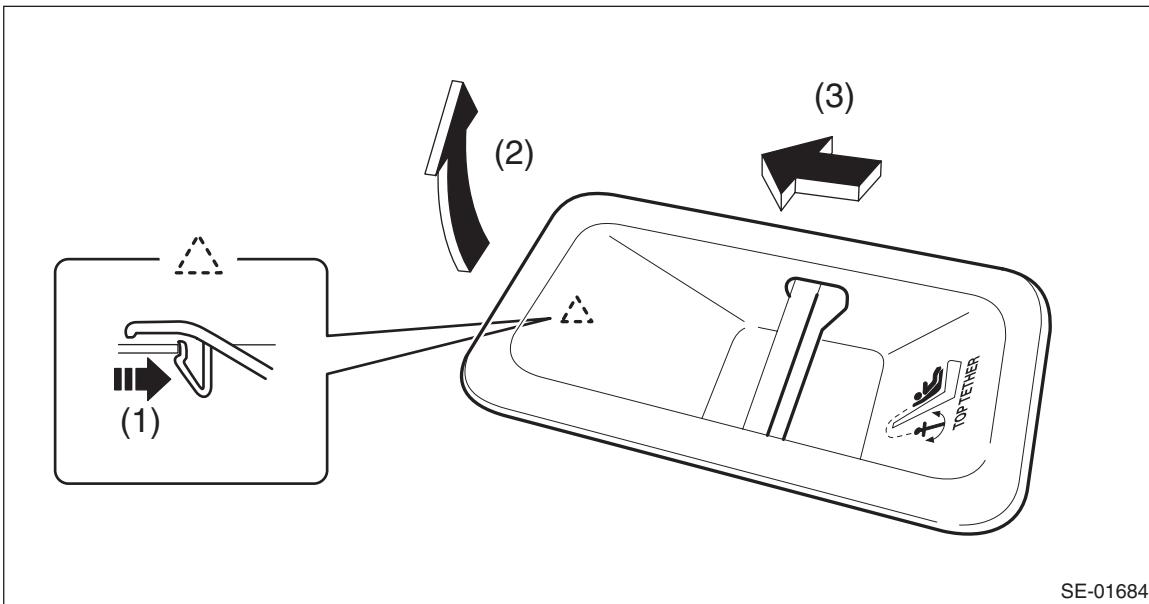


SE-01684

9) Remove the lock assembly - rear backrest rear LH.

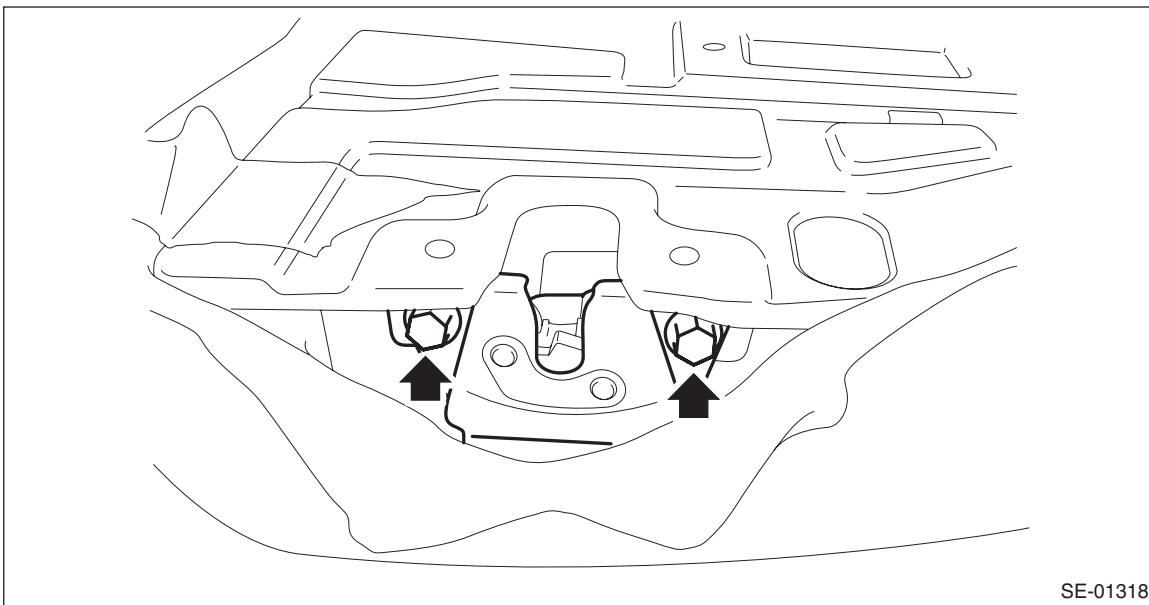


SE-01318

- 10) Detach the bushing - headrest and the bushing - lock assembly, and remove the frame assembly - rear backrest LH from the pad assembly - main LH.

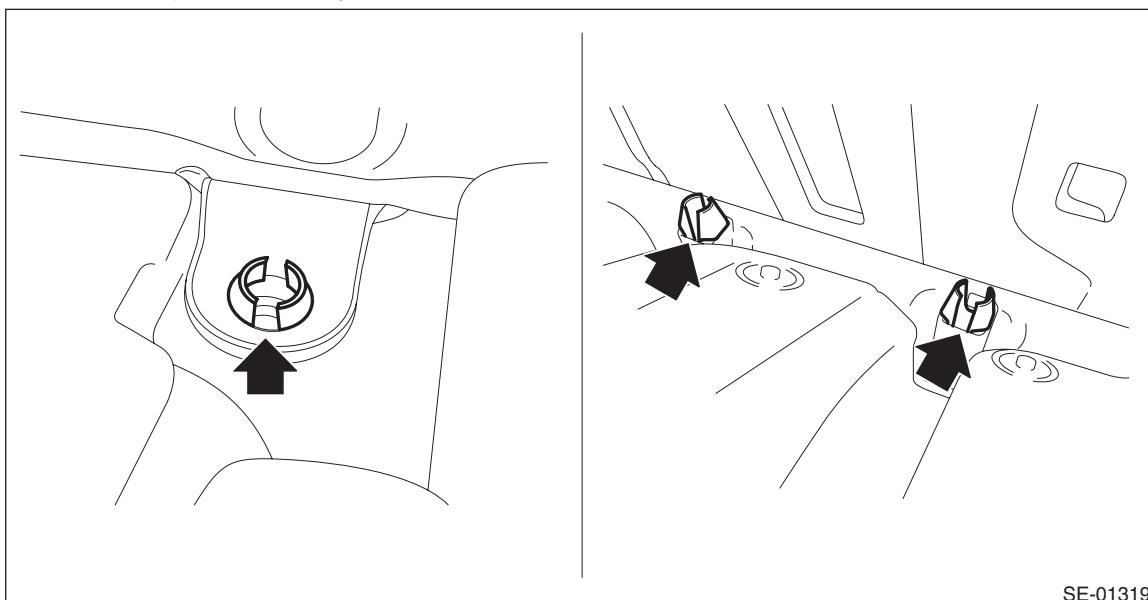


- 11) Remove the hog rings (A) and wire clip (B), then remove the cover COMPL - rear backrest LH.
• LH side

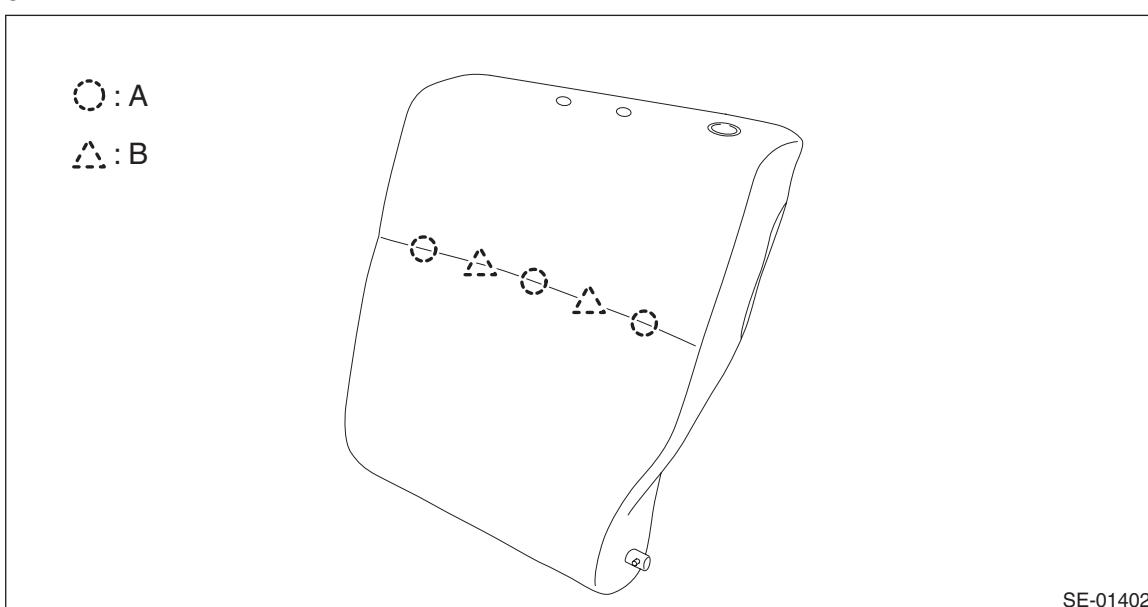

Rear Seat


SEATS

- RH side

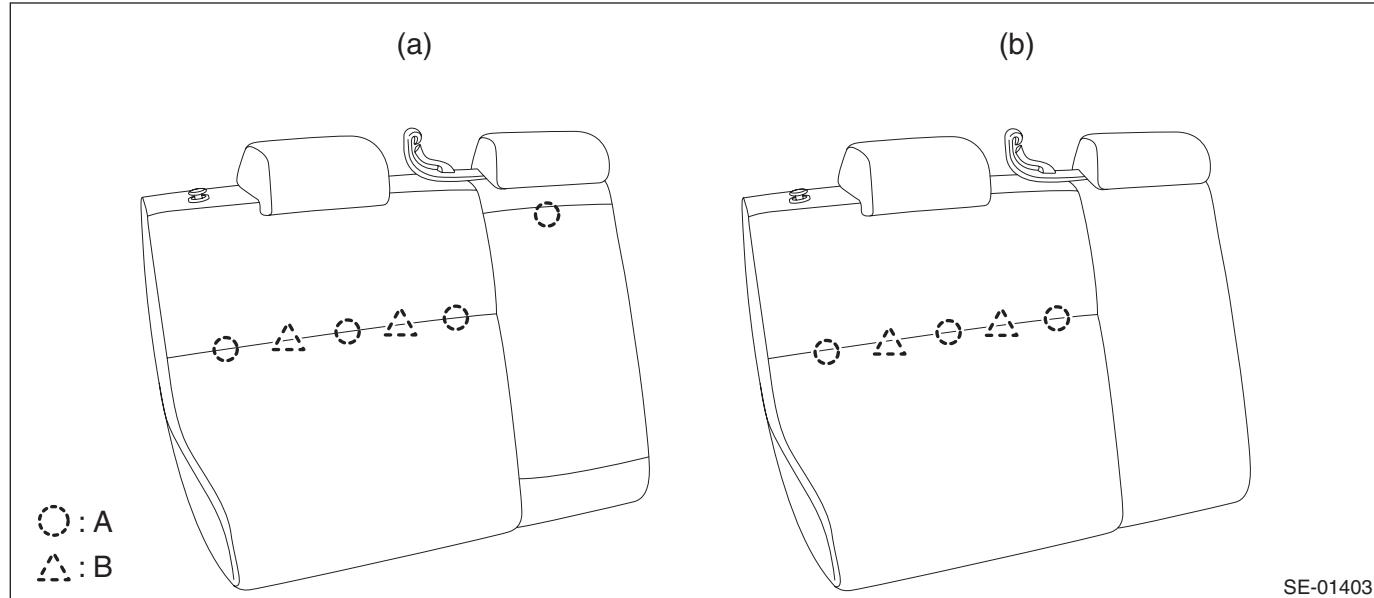


12) Referring to the above steps, disassemble the backrest assembly RH.


13) Detach the plastic fastener and hog ring, and then remove the headrest cover.

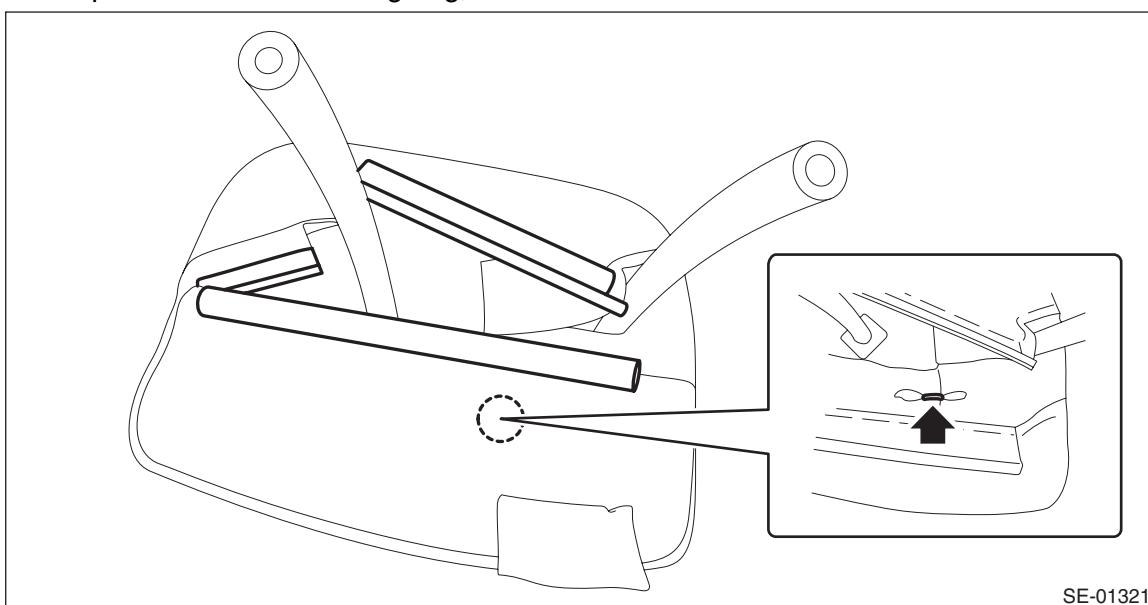

- 14) Remove the hog rings (A) on the back side of the rear seat cushion assembly.

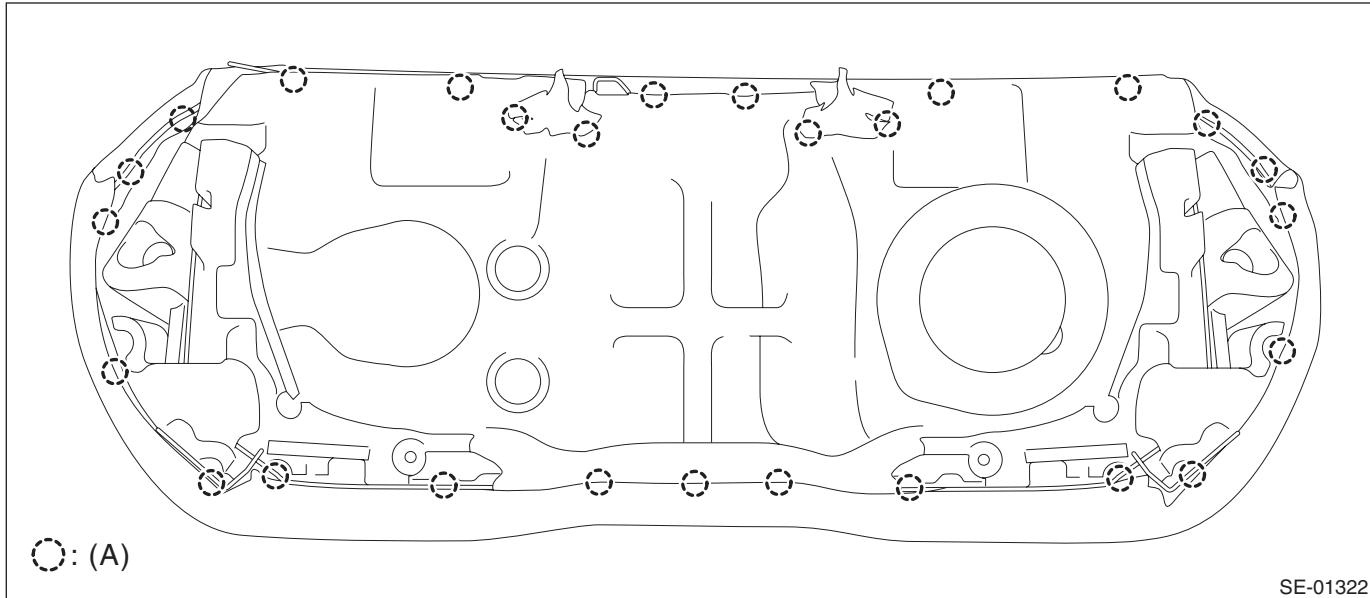

- 15) Remove the hog rings (A), then remove the cover - rear cushion.

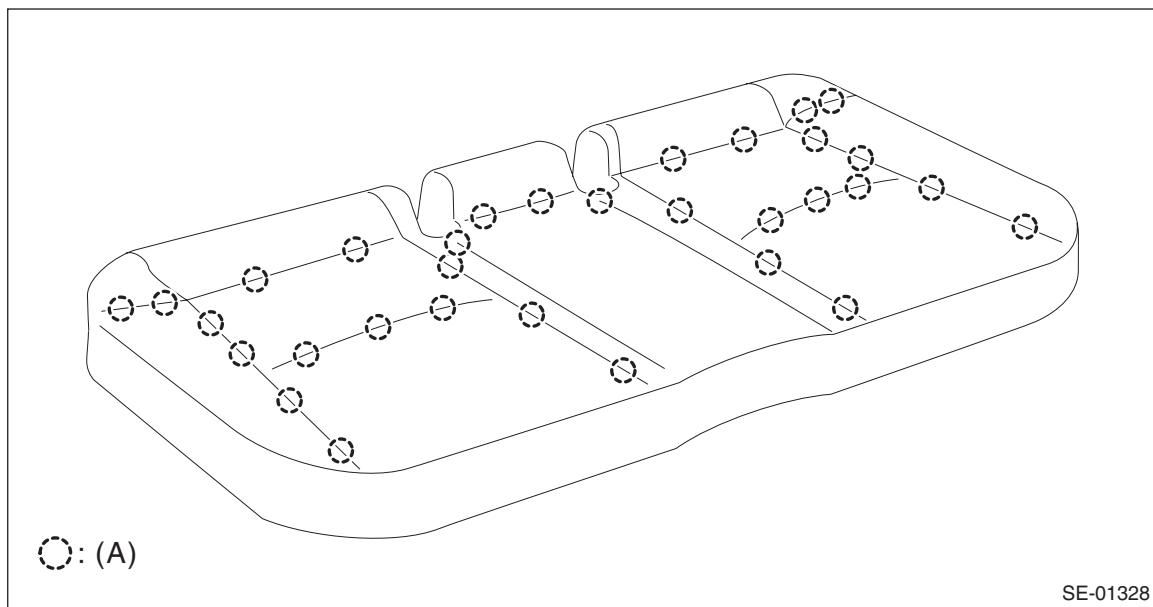


D: ASSEMBLY

CAUTION:

- Do not reuse hog rings.
- Secure the hog ring using hog ring pliers.
- Install the hog rings to the specified points securely and make sure that there is no wrinkle or twisting on the cover COMPL - rear backrest.

1) Assemble the cover COMPL - rear backrest and the cover - rear cushion in the same manner as for the front seat. <Ref. to SE-17, ASSEMBLY, Front Seat. >

2) Make sure that all hog rings (A) and wire clips (B) are attached securely.

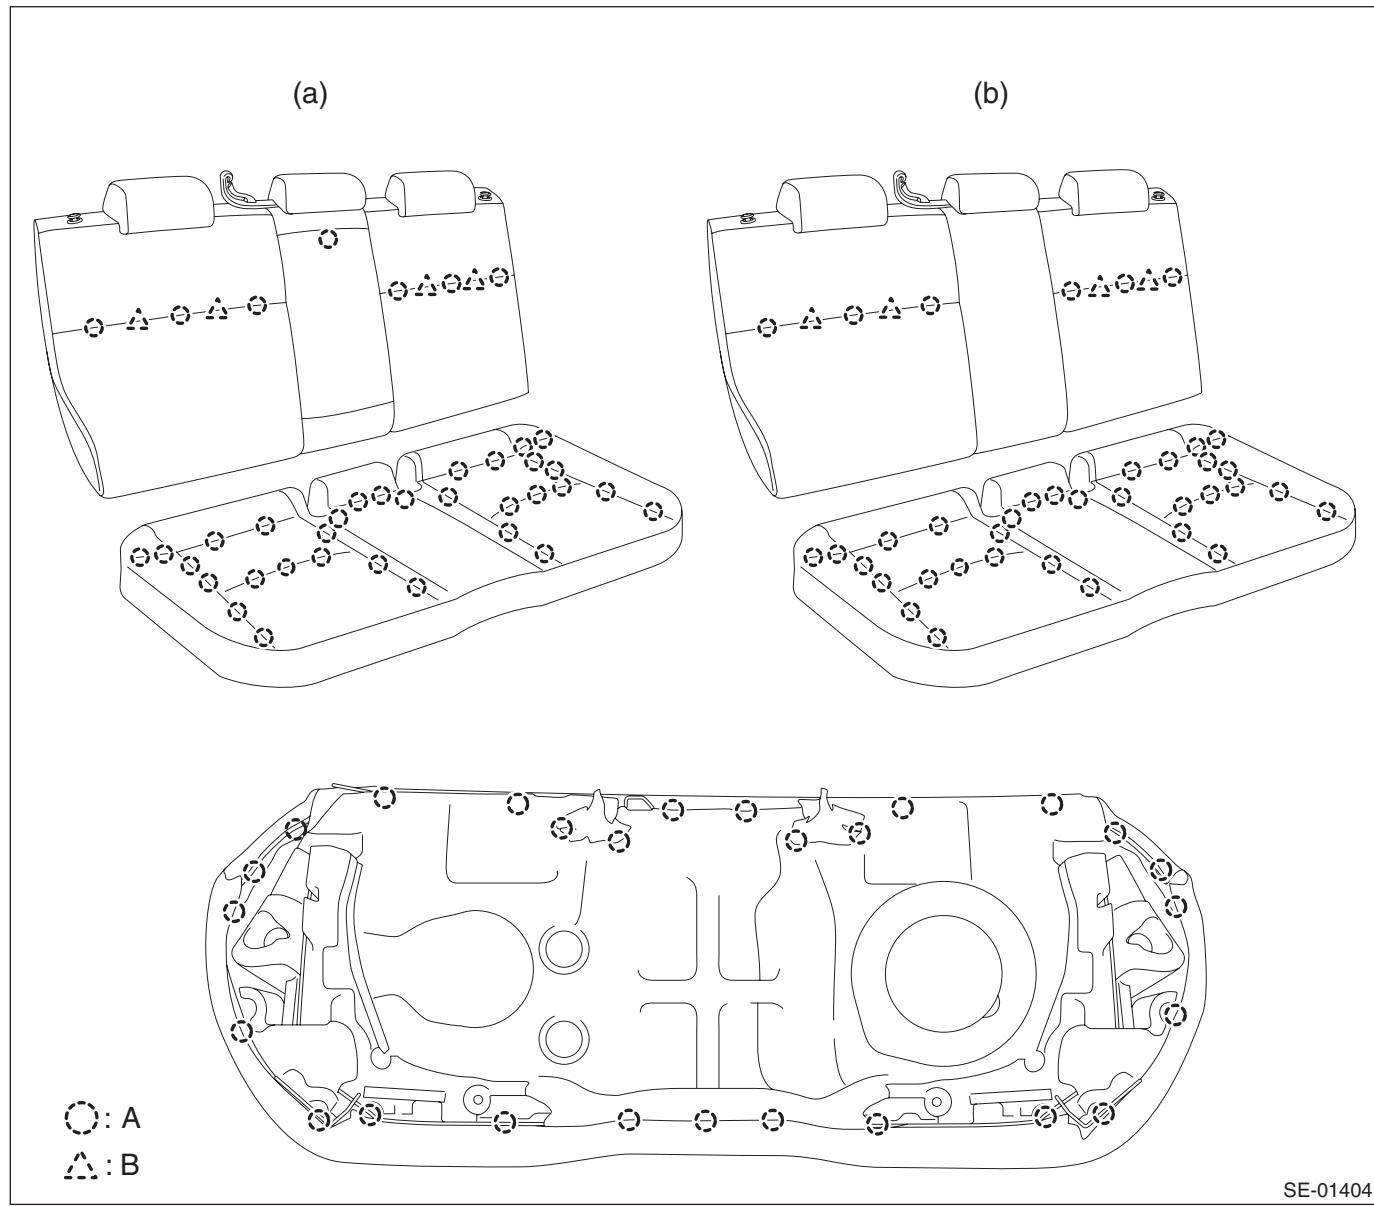

(a) Model with armrest assembly - rear center

(b) Model without armrest assembly - rear center

3) Assemble each part in the reverse order of disassembly.

NOTE:

- Do not contaminate or damage the cover COMPL - rear backrest and the cover - rear cushion.
- While installing the hog rings, prevent the cover COMPL - rear backrest and the cover - rear cushion from getting wrinkled.

Tightening torque:

Refer to “COMPONENT” of “General Description”. <Ref. to SE-5, REAR SEAT, COMPONENT, General Description.>

4) Before installation, check the following items.

- No tear and fray on the cover COMPL - rear backrest and the cover - rear cushion.
- No fray or deformation on each wire cable.

5) Install each part in the reverse order of removal.