

10. Fuel Sub Level Sensor

A: REMOVAL

For removal procedures, refer to the “FU (H4DO (HEV))” section. <Ref. to FU(H4DO(HEV))-131, REMOVAL, Fuel Sub Level Sensor.>

B: INSTALLATION

For installation procedures, refer to the “FU (H4DO (HEV))” section. <Ref. to FU(H4DO(HEV))-135, INSTALLATION, Fuel Sub Level Sensor.>

C: INSPECTION

For inspection procedures, refer to the “FU (H4DO (HEV))” section. <Ref. to FU(H4DO(HEV))-137, INSPECTION, Fuel Sub Level Sensor.>