

13.PCV Hose

A: REMOVAL

CAUTION:

Do not remove except when the PCV hose is broken.

- 1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For the 12 volt engine restart battery, disconnect the ground terminal from 12V engine restart battery sensor.


- 2) Remove the collector cover.

(1) Carefully pull up the front of collector cover at two positions (A).

(2) Carefully pull up the rear of collector cover at two positions (B) while moving it backward.


NOTE:

Be careful not to contact the fuel delivery tube when moving the collector cover rearward.

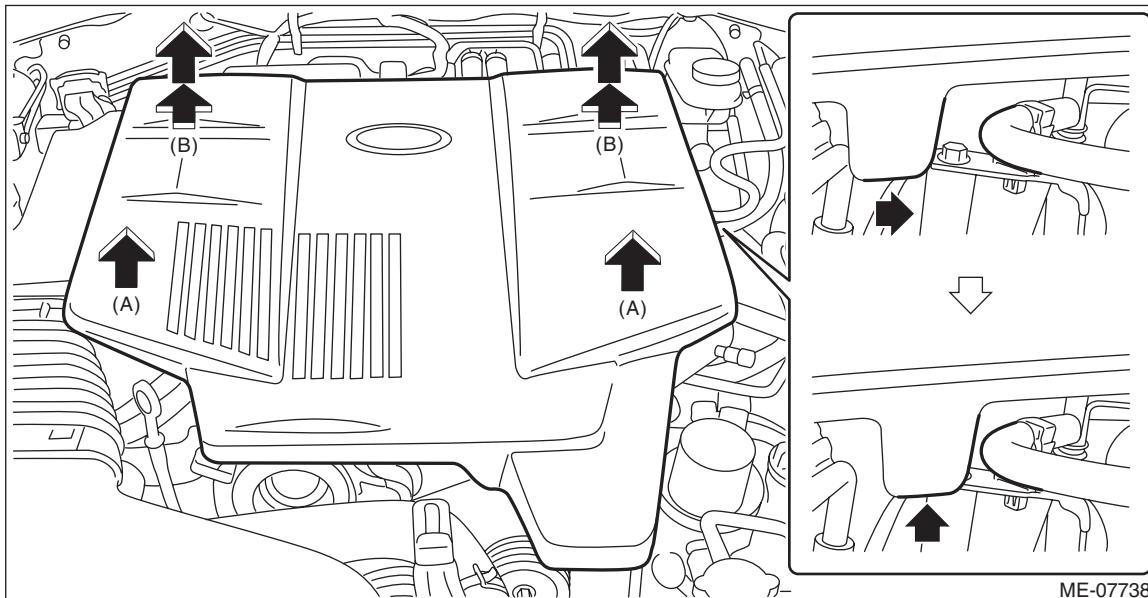

- 3) Remove the air cleaner case. <Ref. to IN(H4DO(HEV))-6, REMOVAL, Air Cleaner Case.>

- 4) Disconnect the PCV hose A from the intake manifold and the PCV valve, and then remove the PCV hose A.

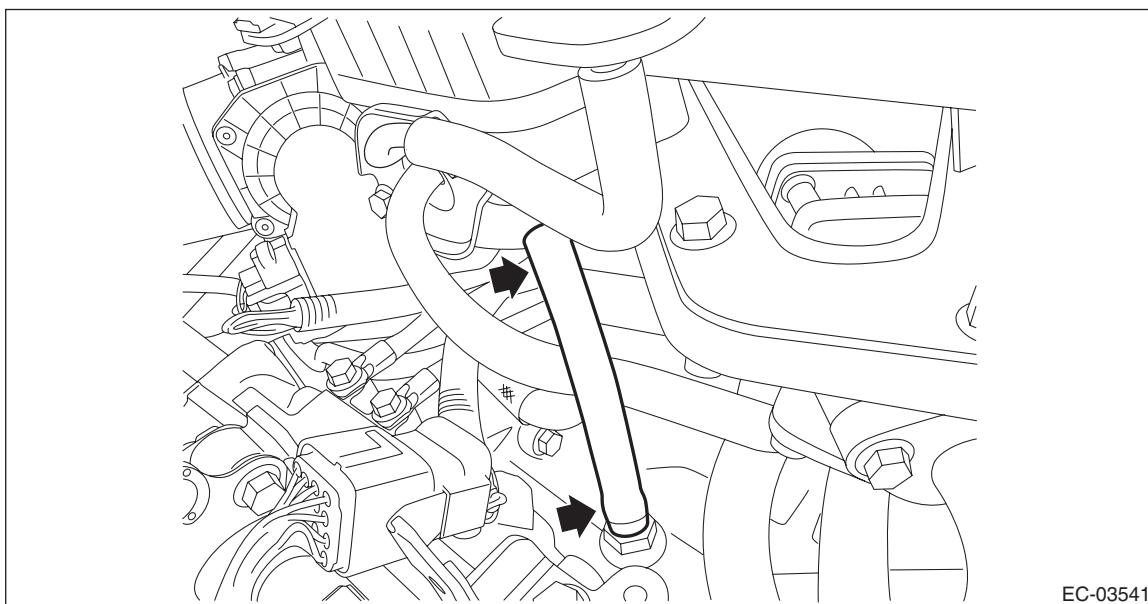


- 5) Remove the intake manifold. <Ref. to FU(H4DO(HEV))-19, REMOVAL, Intake Manifold.>

PCV Hose

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

- 6) Remove the PCV hose B from the PCV connector.

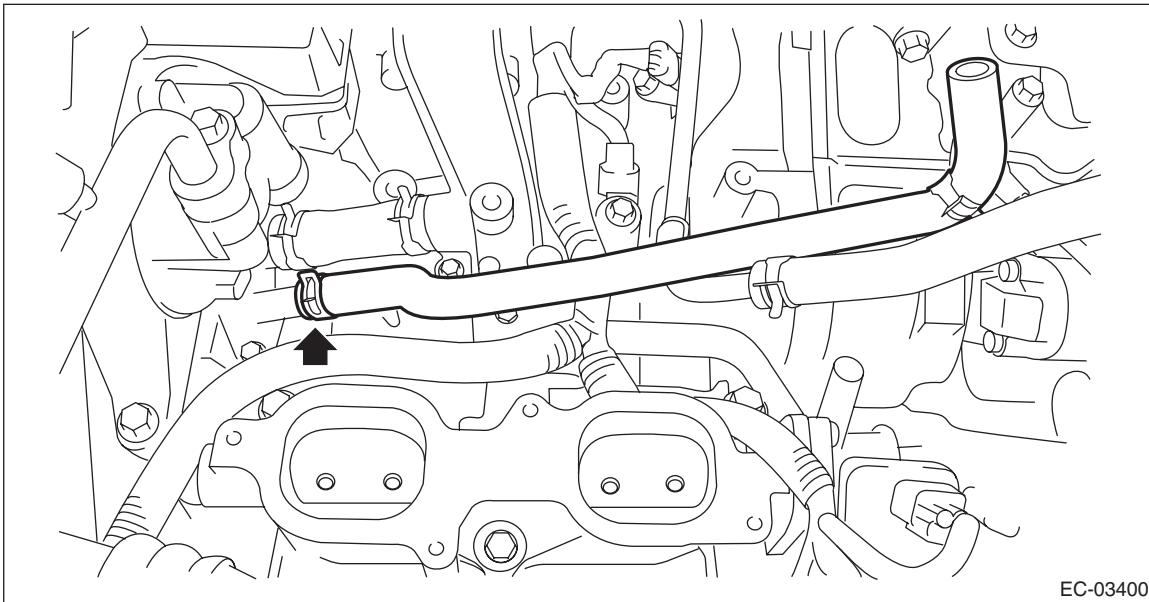

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Check that the PCV hose has no cracks, damage or loose part.