

### 9. Fuel Level Sensor

#### A: REMOVAL

For removal procedures, refer to the “FU (H4DO (HEV))” section. <Ref. to FU(H4DO(HEV))-128, REMOVAL, Fuel Level Sensor.>

#### B: INSTALLATION

For installation procedures, refer to the “FU (H4DO (HEV))” section. <Ref. to FU(H4DO(HEV))-129, INSTALLATION, Fuel Level Sensor.>

#### C: INSPECTION

For inspection procedures, refer to the “FU (H4DO (HEV))” section. <Ref. to FU(H4DO(HEV))-130, INSPECTION, Fuel Level Sensor.>