

## Front Oxygen (A/F) Sensor

FUEL INJECTION (FUEL SYSTEMS)

### 18. Front Oxygen (A/F) Sensor

#### A: REMOVAL

- 1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:


For the 12 volt engine restart battery, disconnect the ground terminal from 12V engine restart battery sensor.

- 2) Remove the radiator sub fan and fan motor assembly. <Ref. to CO(H4DO(w/o HEV))-93, REMOVAL, Radiator Sub Fan and Fan Motor.>

- 3) Lift up the vehicle.

- 4) Remove the under cover. <Ref. to EI-32, REMOVAL, Front Under Cover.>

- 5) Disconnect the front oxygen (A/F) sensor connector, and remove the clip (A) holding the front oxygen (A/F) sensor harness.

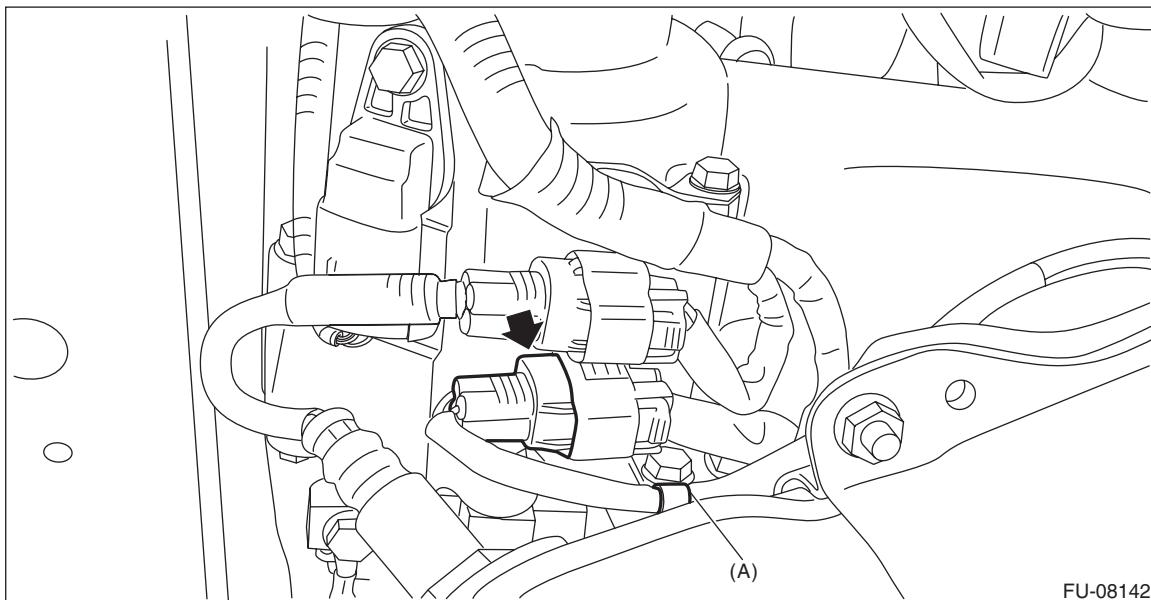

- 6) Lower the vehicle.

- 7) Apply spray-type lubricant to the threaded portion of front oxygen (A/F) sensor, and leave it for one minute or more.


## Front Oxygen (A/F) Sensor

FUEL INJECTION (FUEL SYSTEMS)

- 8) Remove the front oxygen (A/F) sensor.

**CAUTION:**

When removing the front oxygen (A/F) sensor, wait until exhaust pipe cools, otherwise it will damage the exhaust pipe.

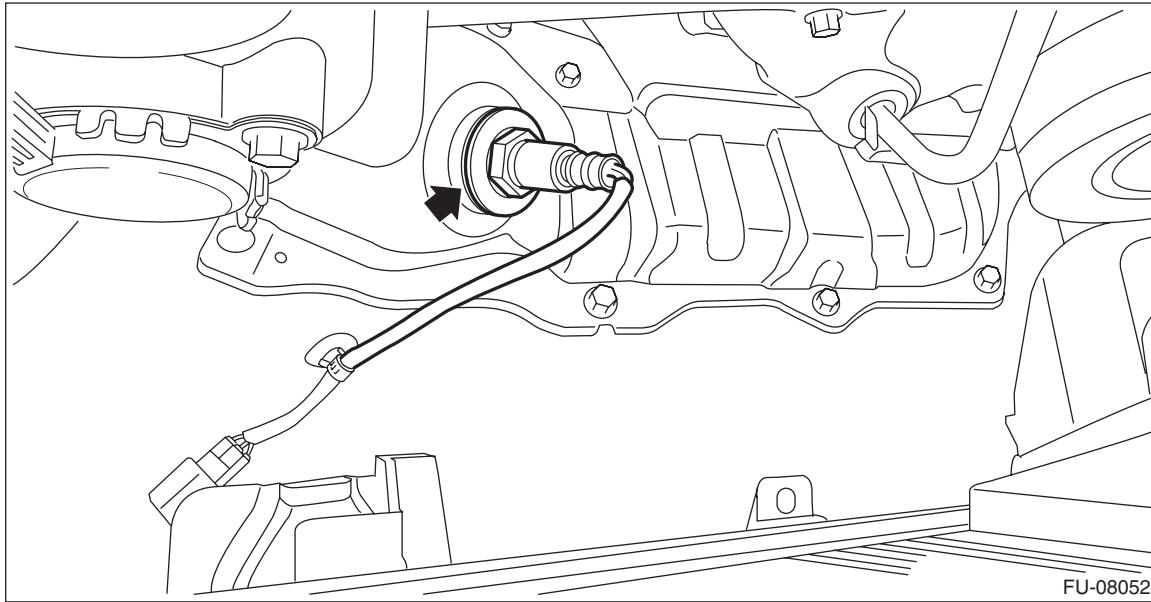

# Front Oxygen (A/F) Sensor

## FUEL INJECTION (FUEL SYSTEMS)

### B: INSTALLATION

#### CAUTION:

If lubricant is spilt over the exhaust pipe, wipe it off with cloth to avoid emission of smoke or causing a fire.

1) Before installing front oxygen (A/F) sensor, apply anti-seize compound only to the threaded portion of front oxygen (A/F) sensor to make the next removal easier.

#### CAUTION:

Never apply anti-seize compound to the protector of front oxygen (A/F) sensor.


#### Anti-seize compound:

**NEVER-SEEZ NSN, JET LUBE SS-30 or equivalent**

2) Install the front oxygen (A/F) sensor.


#### Tightening torque:

**21 N·m (2.1 kgf·m, 15.5 ft-lb)**

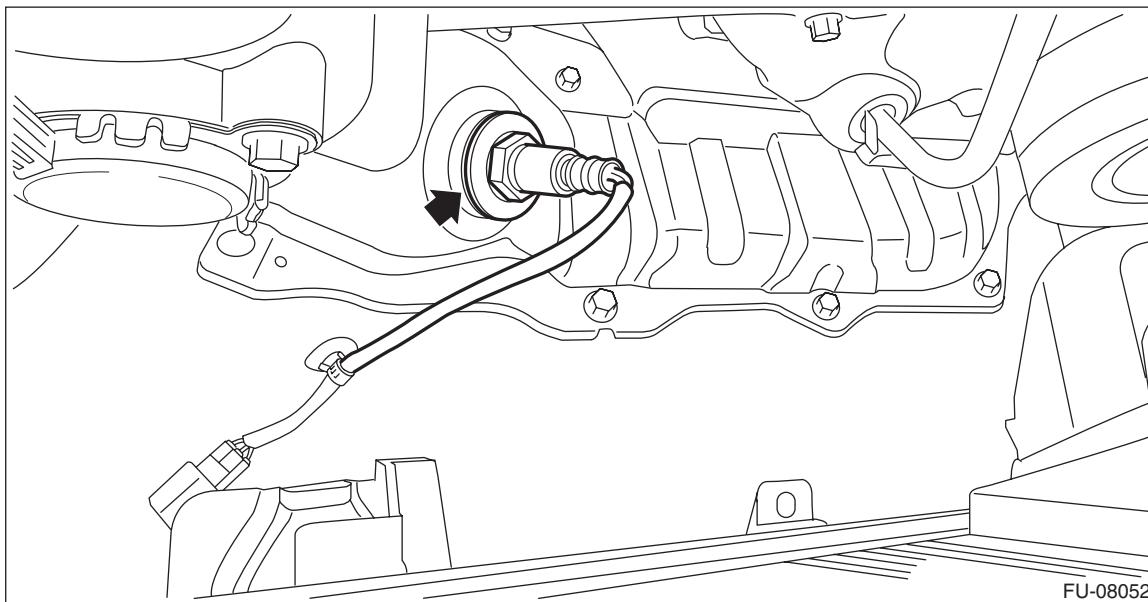

3) Lift up the vehicle.

4) Connect the front oxygen (A/F) sensor connector, and secure the front oxygen (A/F) sensor harness by using the clip (A).

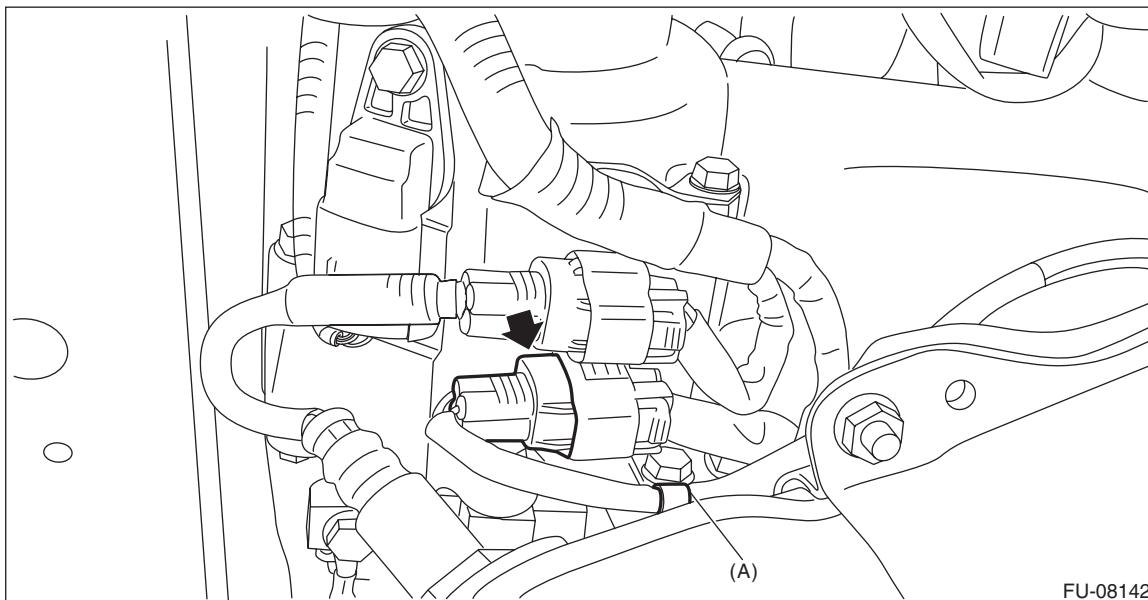


# Front Oxygen (A/F) Sensor

## FUEL INJECTION (FUEL SYSTEMS)

- 5) Install the under cover. <Ref. to EI-32, INSTALLATION, Front Under Cover.>
- 6) Lower the vehicle.
- 7) Install the radiator sub fan and fan motor assembly. <Ref. to CO(H4DO(w/o HEV))-94, INSTALLATION, Radiator Sub Fan and Fan Motor.>
- 8) Connect the battery ground terminal. <Ref. to NT-5, BATTERY, NOTE, Note.>

### C: INSPECTION

- 1) Check that the front oxygen (A/F) sensor has no deformation, cracks or other damages.
- 2) Measure the resistance between front oxygen (A/F) sensor terminals.

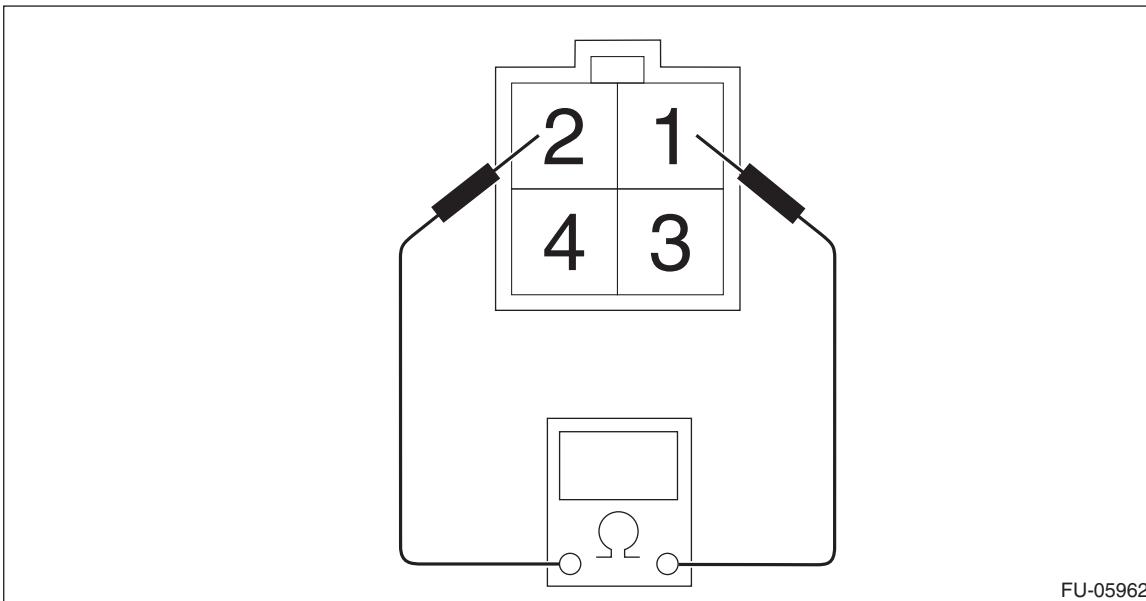

FU-05962

| Terminal No. | Standard                                       |
|--------------|--|
| 1 and 2      | $2.0^{+0.42}_{-0.2} \Omega$ (when 20°C (68°F)) |