

Main Relay

FUEL INJECTION (FUEL SYSTEMS)

21. Main Relay

A: REMOVAL


- 1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For the 12 volt engine restart battery, disconnect the ground terminal from 12V engine restart battery sensor.

- 2) Remove the glove box. <Ref. to EI-78, REMOVAL, Glove Box.>

- 3) Remove the main relay from relay block.

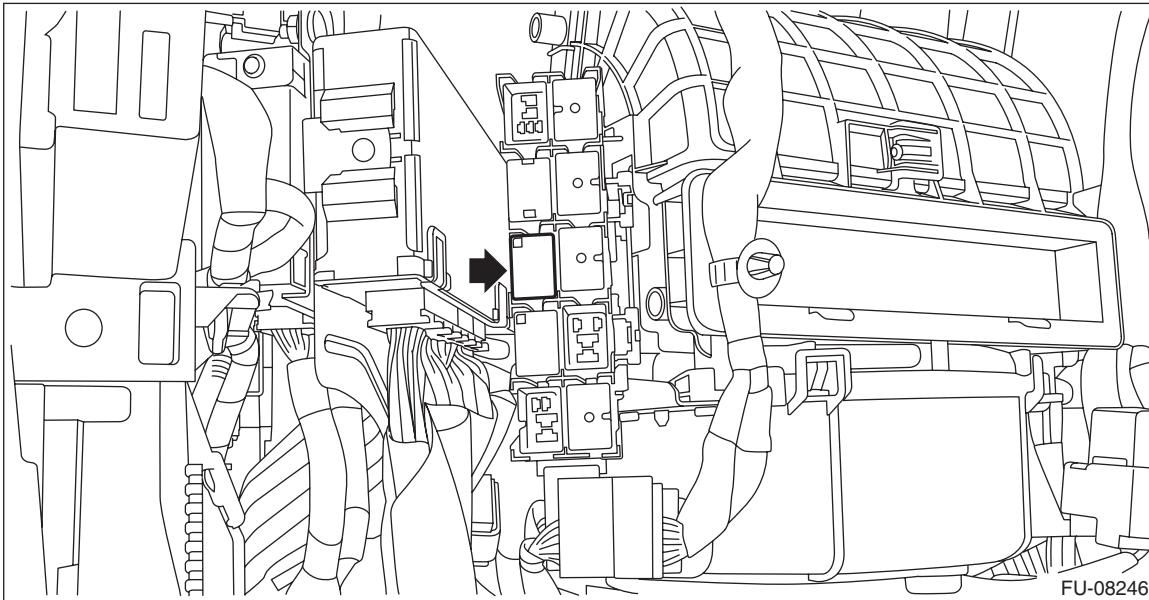


B: INSTALLATION

Install in the reverse order of removal.


C: INSPECTION

- 1) Check that the main relay has no deformation, cracks or other damages.
- 2) Measure the resistance between main relay terminals.

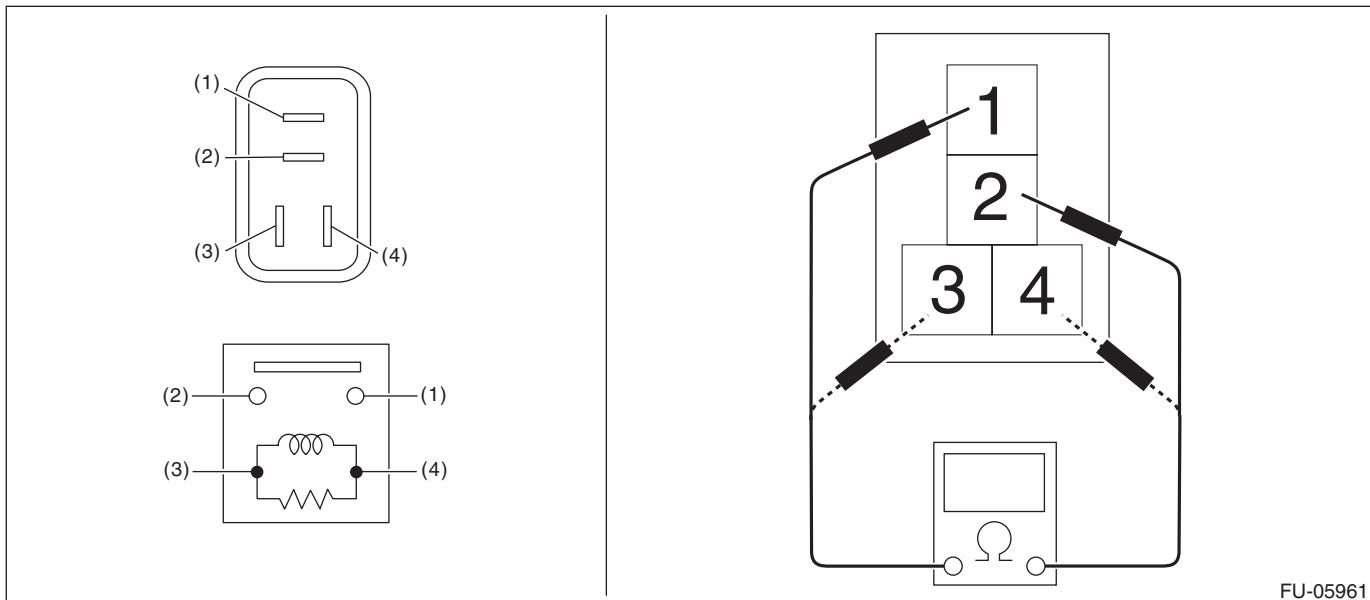

Terminal No.	Standard
1 and 2	1 MΩ or more
3 and 4	130.4 — 230.8 Ω (when 20°C (68°F))

- 3) Connect battery positive terminal to terminal No. 3 and battery ground terminal to terminal No. 4, and measure the resistance between the main relay terminals.

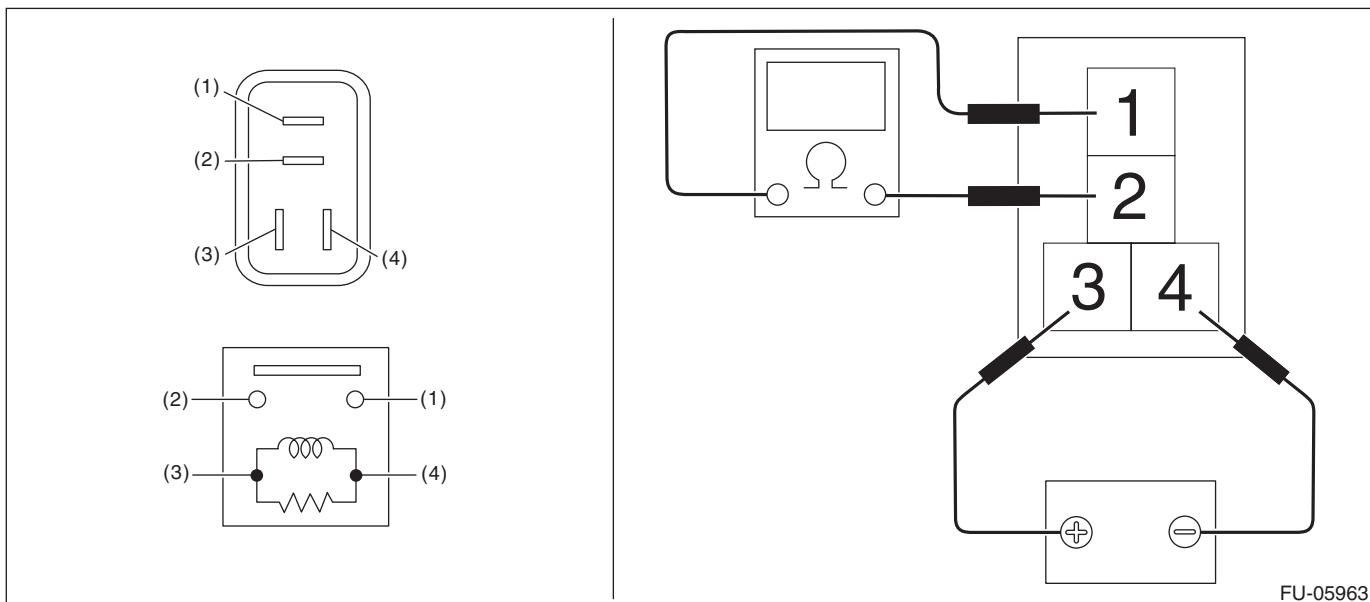

Terminal No.	Standard
1 and 2	Less than 1 Ω