

8. Crankshaft Position Sensor Plate

A: REMOVAL

The crankshaft position sensor plate is tightened together with the drive plate; therefore, refer to "Drive Plate" for removal procedure. <Ref. to CVT(TH58A)-175, REMOVAL, Drive Plate.>

B: INSTALLATION

The crankshaft position sensor plate is tightened together with the drive plate; therefore, refer to "Drive Plate" for installation procedure. <Ref. to CVT(TH58A)-176, INSTALLATION, Drive Plate.>

C: INSPECTION

Check that the crankshaft position sensor plate has no deformation, cracks or other damages.