


## 5. Air Intake Duct

### A: REMOVAL

- 1) Turn the ignition switch to OFF.
- 2) Remove the clip (A) and the bolt (B) which hold the air intake duct.
- 3) Remove the protrusion on the air intake duct from the air intake boot No. 1, and remove the air intake duct.

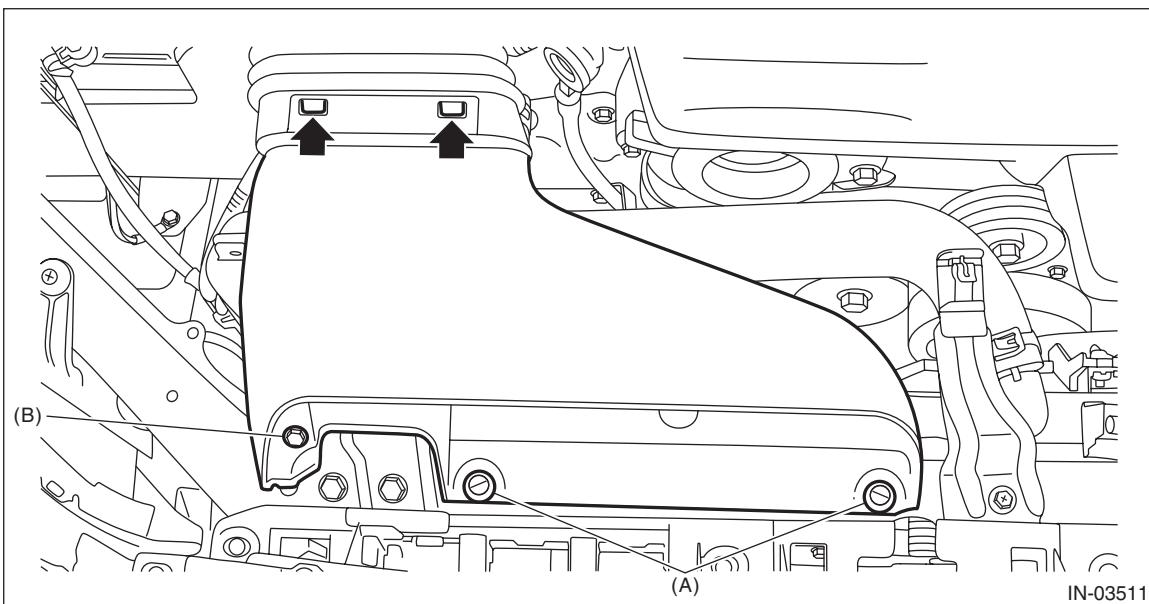

### B: INSTALLATION

Install in the reverse order of removal.

**NOTE:**

- Make sure that the air intake boot No. 1 is securely installed to the protrusion on the air intake duct.
- Check the air intake boot No. 1 for peel-off.

***Tightening torque:***

***7.5 N·m (0.8 kgf·m, 5.5 ft-lb)***

### C: INSPECTION

- 1) Check that the air intake duct has no deformation, cracks or other damages.
- 2) Inspect that no foreign objects are mixed in the air intake duct.