

# A GENERAL INFORMATION

PURPOSE OF THIS MANUAL-----	A-1
WHAT IS PDI?-----	A-1
MAIN POINTS OF INSPECTION -----	A-1
IMPORTANCE OF BEING VERSED IN OWNER'S MANUAL -----	A-1
NECESSITY OF CHECK PRIOR TO VE- HICLE DELIVERY TO USER -----	A-1
REPORT OF INSPECTION RESULTS---	A-1

## 1 PURPOSE OF THIS MANUAL

This manual has been prepared to help the distributors or dealers perform the PDI (Pre-Delivery Inspection) properly and promptly. This manual mainly describes the PDI operations (including inspection items, procedures and methods) to be conducted by servicemen as they perform the inspection for new vehicles.

Be sure to read this manual carefully and perform the PDI according to the instructions given below.

### 1-1 WHAT IS PDI?

In the PDI (Pre-Delivery Inspection), the distributors or dealers check to see if vehicles are in the proper conditions as new vehicles, and if functional parts or each section of the vehicle functions properly.

### 1-2 MAIN POINTS OF INSPECTION

The inspection covers all the items that can be checked visually or by hand.

#### 1. Visual inspection and hand inspection

- (1) Paint condition
- (2) Scratches
- (3) Rust
- (4) Mud
- (5) Discoloration
- (6) Deformation
- (7) Installing condition

#### 2. Functional check

- (1) Check to see if the part functions properly.
- (2) Check to see if the part functions smoothly.
- (3) Check to see if there is any abnormal noise or vibration.

If any problem is found as to the check items above, take necessary measures before the vehicle is delivered to the user.

### 1-3 IMPORTANCE OF BEING VERSED IN OWNER'S MANUAL

The equipment and functions differ, depending upon models. Even in the same model, the equipment and functions differ depending upon grades and destinations. Since this manual has been prepared for vehicles for all destinations, the PDI operations for general mechanisms and equipment are described. Moreover, some of the illustrations in this manual may show vehicles that are different from the vehicle that you are checking, as this manual covers all the models. Therefore, to perform the PDI perfectly, the servicemen must read the owner's manual carefully and be well versed in the basic mechanisms and functions of the vehicle and equipment that is going to be checked.

### 1-4 NECESSITY OF CHECK PRIOR TO VEHICLE DELIVERY TO USER

During the period between the completion of the PDI and the vehicle delivery to users, the vehicles are subject to various conditions when they are exhibited in a show room, stored in a warehouse or installed with optional equipment. During this period, the vehicle may be damaged in some ways. It is, therefore, imperative to perform an inspection prior to deliver to users, according to the section "VEHICLE DELIVERY INSPECTION ITEMS."

### 1-5 REPORT OF INSPECTION RESULTS

In order to incessantly improve the quality of new vehicles, please send the Field Technical Report to DMC through the distributor when you encounter some problems that occur frequently due to poor quality of vehicles shipped from the factory.

# B PDI

OPERATION PRIOR TO CHECK-----	B-1
ARTICLES TO BE PREPARED -----	B-1
FUSE INSTALLATION-----	B-1
REMOVAL OF TOWING HOOK-----	B-1
CHECK FROM OUTSIDE OF VEHICLE-----	B-1
WARNING LIGHTS, BUZZER-----	B-1
ENGINE OPERATION DURING WARM- ING-UP PERIOD WHEN COLD -----	B-1
ENGINE IMMOBILIZER SYSTEM -----	B-2
LAMPS, ELECTRICAL DEVICES -----	B-2
MIRRORS -----	B-6
TILT STEERING-----	B-7
GLOVE BOX, ASHTRAY-----	B-7
SEAT, SEAT BELT -----	B-7
FUEL LID, BACK DOOR OPENER AND HOOD LOCK HANDLE -----	B-9
WINDOWS -----	B-10
DOORS, DOOR LOCK-----	B-11
CHILD SAFETY-----	B-12
LUGGAGE ROOM LIGHT-----	B-13
LUGGAGE ROOM TRIM AND FLOOR MAT -----	B-13
SPARE TIRE PRESSURE AND INSTAL- LATION -----	B-13
JACK AND TOOL INSTALLATION -----	B-14
ENGINE COMPARTMENT-----	B-14
OIL AND FLUID LEVEL-----	B-14
FUEL, OIL, COOLANT OR OTHERS	
FLUID LEAK-----	B-16
BATTERY TERMINAL TIGHTNESS-----	B-16
BATTERY ELECTROLYTE AND CHARGE LEVEL-----	B-16
UNDER VEHICLE -----	B-17
WHEEL HUB NUT TORQUE-----	B-17
TIRE PRESSURE-----	B-17
TIRE DEFICIENCY, DAMAGE-----	B-18
FUEL, OIL, COOLANT OR OTHERS	
FLUID LEAK-----	B-18
TIGHTNESS OF BOLTS AND NUTS ON CHASSIS AND POWER TRAIN -----	B-20
UNDER VEHICLE CONDITION FOR DAMAGE, RUST, ETC-----	B-21
ROAD TEST-----	B-21
PEDAL HEIGHT, FREE PLAY, RESERVE TRAVEL-----	B-22
ENGINE OPERATION WHEN HOT, OR AFTER WARMING-UP PERIOD -----	B-22
ENGINE PERFORMANCE, DRIV- ABILITY -----	B-22
COMBINATION METER-----	B-23
CLUTCH AND TRANSMISSION -----	B-23
BRAKE, PARKING BRAKE -----	B-23
STEERING -----	B-24
ABNORMAL NOISE, VIBRATION -----	B-24
HEATER, AIR CONDITIONER -----	B-24
FINAL CHECK, CLEANING -----	B-25
REMOVAL OF UNNECESSARY LABEL, TAG AND STICKER-----	B-25
VISUAL CHECK O INTERIOR PARTS OF INSTALLATION STATE, DAMAGE OR SMEAR-----	B-26
OWNER'S MANUAL/WARRANTY IN- FORMATION BOOK -----	B-26
FACTORY INSTALLATION PARTS-----	B-26
CAR WASH, CLEANING -----	B-26
SCRATCH, SPINOSE PAINTING, DAM- AGE ETC. OF PAINTING FINISH SUR- FACE -----	B-27
EXTERIOR PARTS -----	B-28
VEHICLE DELIVERY INSPECTION-----	B-28
CHECK -----	B-28
PREPARATION FOR VEHICLE DELIV- ERY-----	B-28

## 1 OPERATION PRIOR TO CHECK

### 1-1 ARTICLES TO BE PREPARED

1. Prepare the following instruments, covers and so forth indicated below.


- (1) Battery hydrometer
- (2) Voltmeter
- (3) Tire pressure gauge
- (4) Seat cover
- (5) Fender cover
- (6) Floor cover

### 1-2 FUSE INSTALLATION

1. Install the fuse prior to the check.

#### NOTE

- The fuse to be installed is the backup fuse inside the relay box.

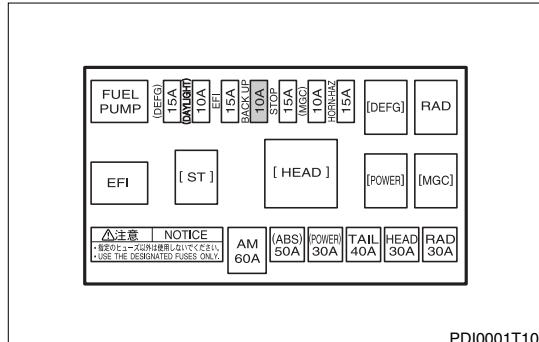


### 1-3 REMOVAL OF TOWING HOOK

1. Remove the towing hook from the front bumper.

2. Install the whole cover on the bumper.

#### NOTE

- Discard the removed hook.

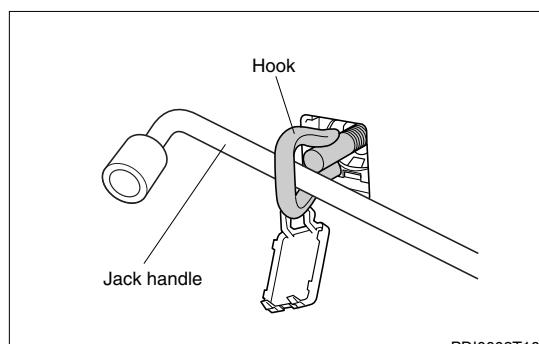


## 2 CHECK FROM OUTSIDE OF VEHICLE

### 2-1 WARNING LIGHTS, BUZZER

1. Turn ON the ignition switch. Ensure that the warning lamp goes on and it goes out when the engine has started.


2. Check the buzzer for operation.

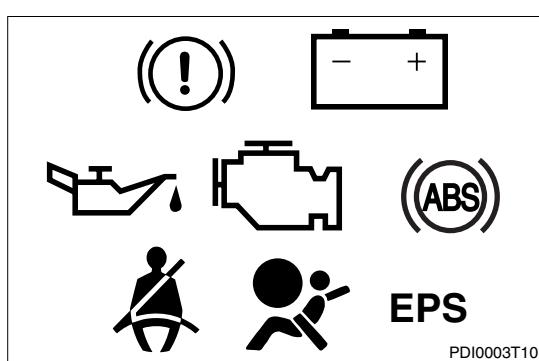

### 2-2 ENGINE OPERATION DURING WARMING-UP PERIOD WHEN COLD


1. Check that the engine runs smoothly.

- (1) Startability of engine
- (2) Abnormal noise, vibration
- (3) Rough idling

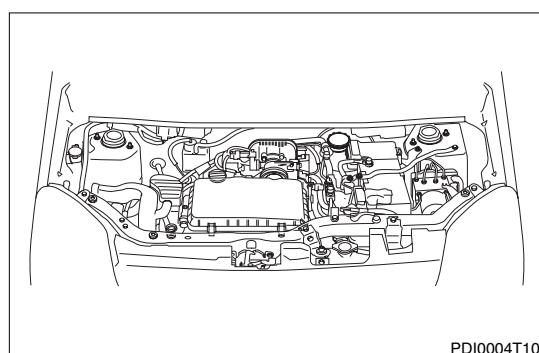

## 2-3 ENGINE IMMOBILIZER SYSTEM

- When the ignition key is not inserted into the ignition switch, check that the immobilizer indicator is flashing. (Indicator-equipped vehicle)
- Check that the engine can start, using any ignition key (master key or sub-key)..
- When the ignition key is inserted into the ignition switch, check that the immobilizer indicator goes out. (Indicator-equipped vehicle) .

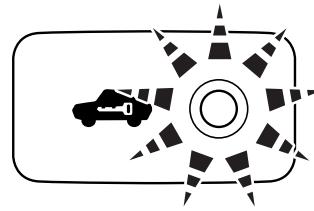

PDI0005T10

## 2-4 LAMPS, ELECTRICAL DEVICES

### CAUTION


- When the electrical devices are checked, keep the engine running so that the battery may not become dead.

### NOTE

- When you check the lamps, use a mirror or perform the check together with other person.

### 2-4-1 HEAD LIGHTS, FOG LIGHTS AND INSTRUMENT PANEL LIGHTS


- When the switches for the headlights and fog lights are turned ON, make sure that the headlights, fog lights and clearance lights are illuminated.

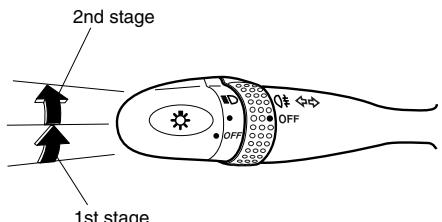

Light	Position	1st stage	2nd stage
Headlights	OFF	ON	
Clearance lights	ON	ON	
Tail lights	ON	ON	
License plate lights	ON	ON	
Instrument panel lights	ON	ON	


PDI0007T15

- When the headlights are turned ON, check that the instrument panel lights (combination meter, heater panel, radio, and so forth) are illuminated.

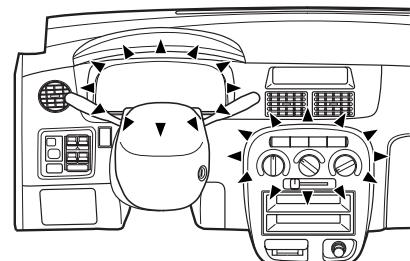


PDI0008T10

- When the headlight switch is set to the high beam position, check that the indicator is illuminated.
- On the daytime running light specification vehicles, check that the headlights and tail lights are illuminated automatically when the engine is started.

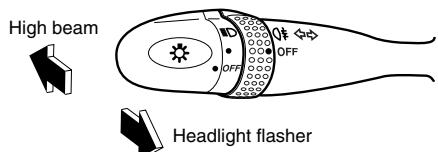


PDI0009T10

5. Check that the brightness of the instrument panel light varies when the instrument panel light control switch is turned.

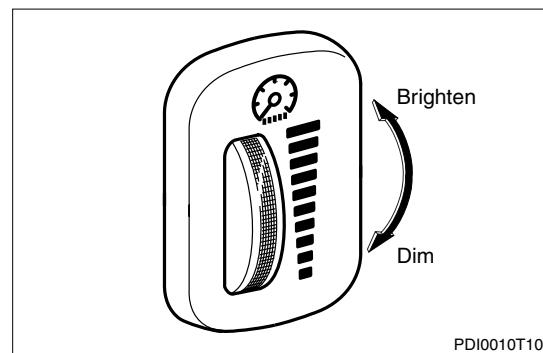

PDI0010T10


6. Check that the headlight leveling control system is functioning.

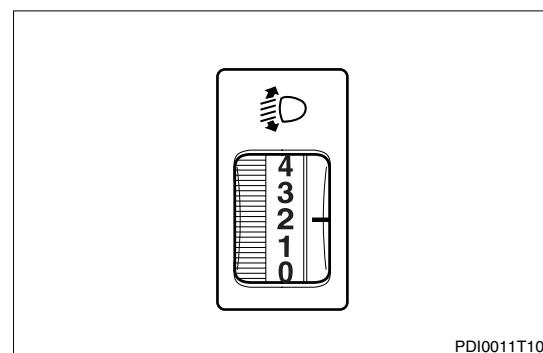

PDI0011T10

### 2-4-2 TAIL LIGHTS, LICENSE PLATE LIGHTS AND REAR FOG LIGHTS

1. When the headlights are turned ON, check that the tail light and license plate lights are illuminated.

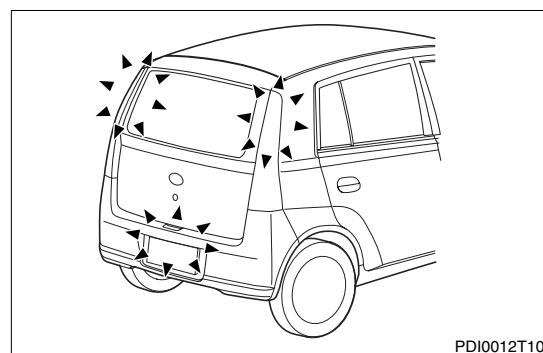


PDI0012T10

2. When the rear fog light switch is turned ON, check that the rear fog lights and indicator are illuminated.

#### NOTE


- When the headlights are turned ON, the rear fog lights are illuminated.

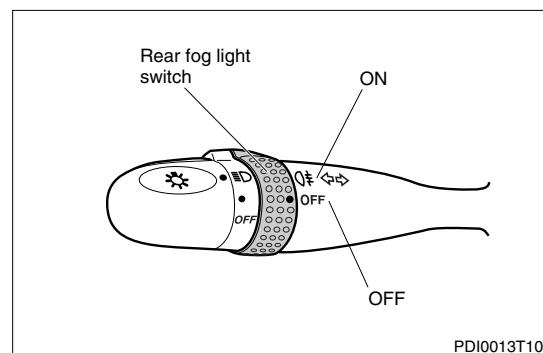

PDI0013T10

### 2-4-3 STOP LIGHTS, BACK-UP LIGHTS


- When the brake pedal is depressed, check the stop light is illuminated.
- When the shift lever is shifted to the reverse position, check that the back-up light is illuminated.

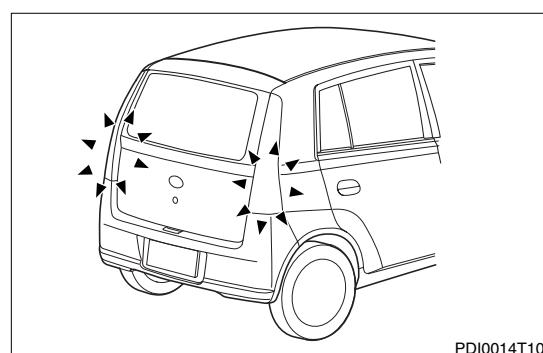


PDI0014T10

#### 2-4-4 TURN SIGNAL LIGHTS, HAZARD WARNING SIGNAL LIGHTS AND HORN


1. Check that the turn signal light control lever is functioning properly.
2. Check the turn lights and indicator are flashing.

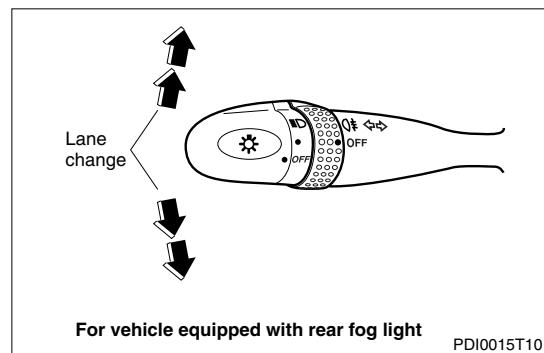


3. When the steering wheel is turned, check that the canceller of the turn signal light control lever is functioning properly.

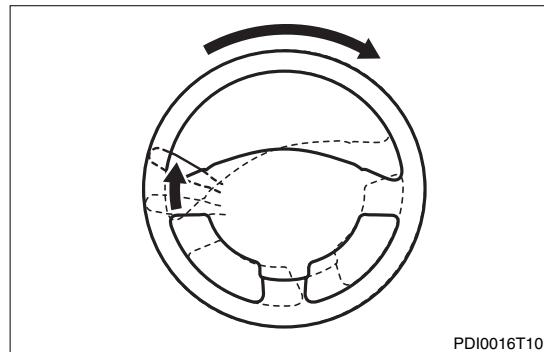

4. When the hazard warning signal switch is turned ON, check that the turn signal lights and indicator are flashing.

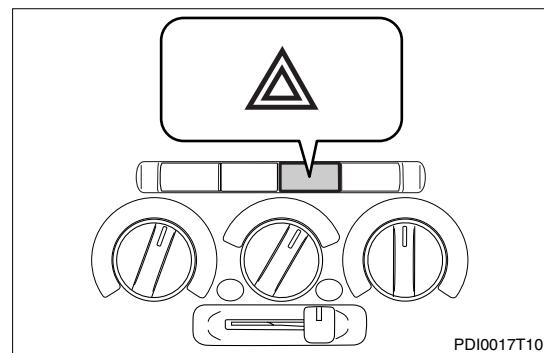


5. Check that the horn is functioning.

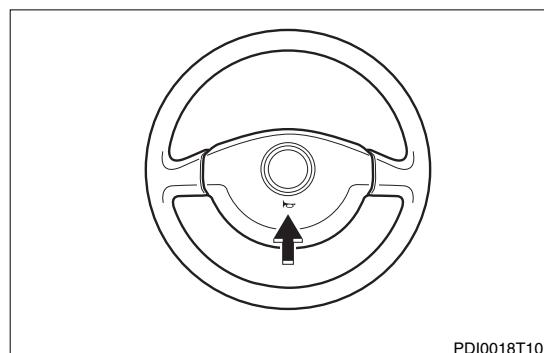


#### 2-4-5 WIPERS, WASHER (FRONT AND REAR)

1. Check that the washer fluid is squirted properly on the front windshield (or the rear window glass).

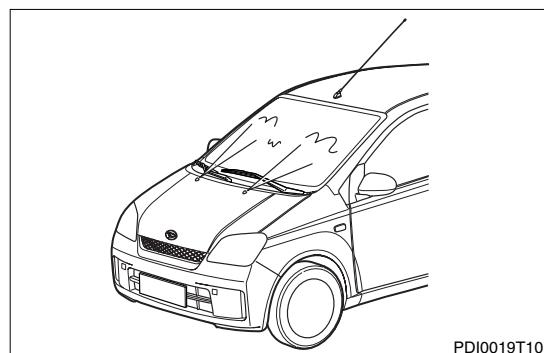


2. Check the wiper for proper operation (intermittent, low speed, high speed, demist).
3. Check that the wiper blades wipe off thoroughly.
4. Check that there are no abnormal noise when the wiper is functioning.
5. Check that the wiper arm is not contacting with the outer molding section of the windshield.

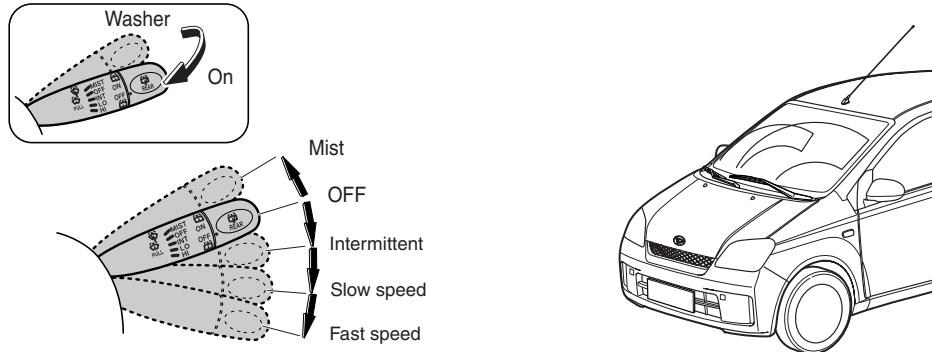

PDI0020S16


## 2-4-6 REAR WINDOW DEFOGGER, CIGARETTE LIGHTER

1. When the rear window defogger switch is pushed in, check that indicator light of the switch is illuminated.

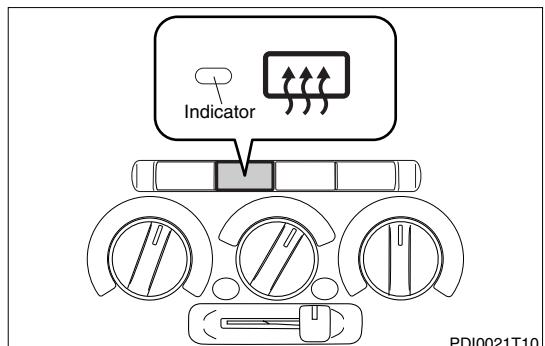

PDI0021T10


2. When the cigarette lighter is pushed in, the light will pop out automatically and the coil is red-heated.

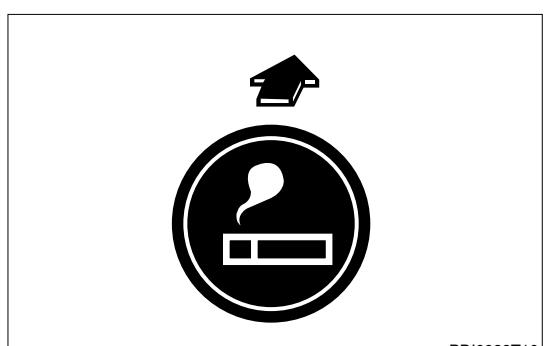

PDI0022T10

## 2-4-7 AUDIO, CLOCK

1. When the power volume switch is turned ON, check that it is functioning properly.
2. Set the frequency of the radio to each channel.
3. Check the cassette tape player for operation.

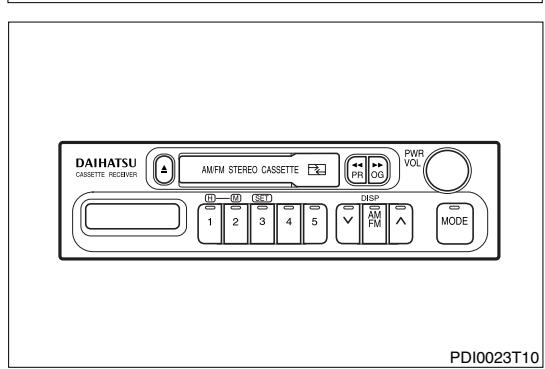

PDI0023T10

4. Check that the clock is functioning properly and set it to the correct time.

**NOTE**

- For the operating method, refer to the owner's manual.




PDI0024T10

#### 2-4-8 INTERIOR LIGHTS


1. Check the interior lights given below.

- (1) Dome light
- (2) Room light
- (3) Others

Room light

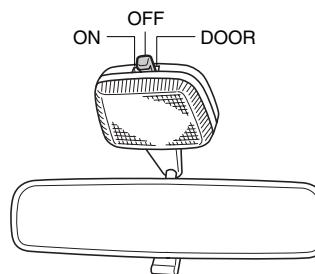


Dome light

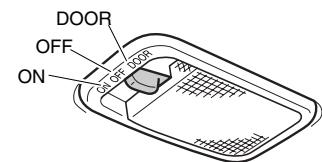

PDI0025T20


#### 2-5 MIRRORS

1. Check that the interior mirror can be adjusted smoothly.

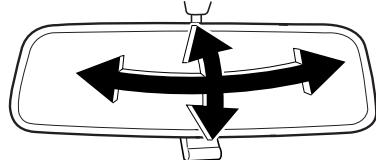


PDI0027T10

2. When the day/night change lever is operated, check that the glare from the rear lights is reduced. (For night side)

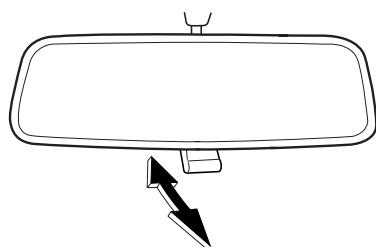


PDI0028T10

3. Check that the interior mirror can be adjusted smoothly.
4. When the external mirror is functioning, check that there is no abnormal noise.

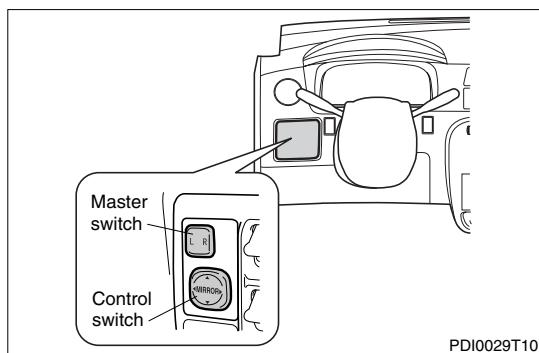


## 2-6 TILT STEERING

1. Check that the tilt steering moves smoothly and it can be secured positively at any position.

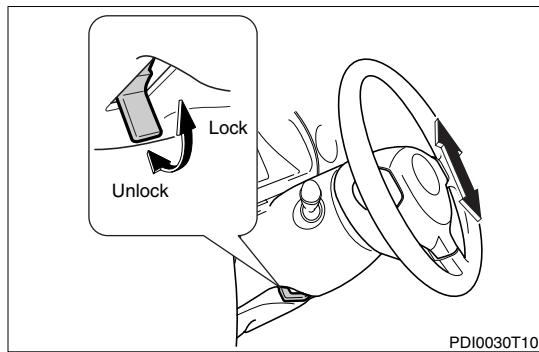


## 2-7 GLOVE BOX, ASHTRAY

1. Check that the glove compartment door can open or close smoothly.

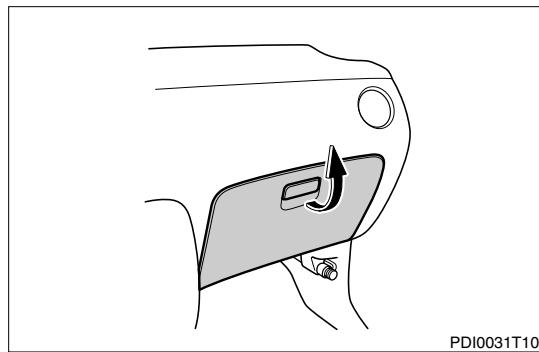

2. Check that the ash tray can open or close smoothly.

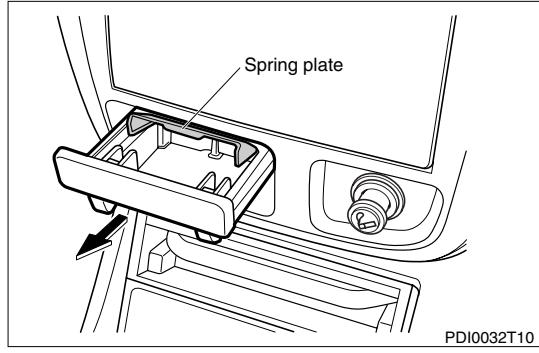


## 2-8 SEAT, SEAT BELT

1. Check that the seat slide and reclining can function smoothly, folding/removal can be carried out properly, and can be locked at any position.
  - (1) · Driver's seat
  - Adjustment of seat slide
  - Adjustment of reclining
  - Adjustment of seat lifter
  - Adjustment of headrest

(2) Passenger's seat


- Adjustment of seat slide
- Adjustment of reclining
- Walk-in mechanism
- Adjustment of headrest

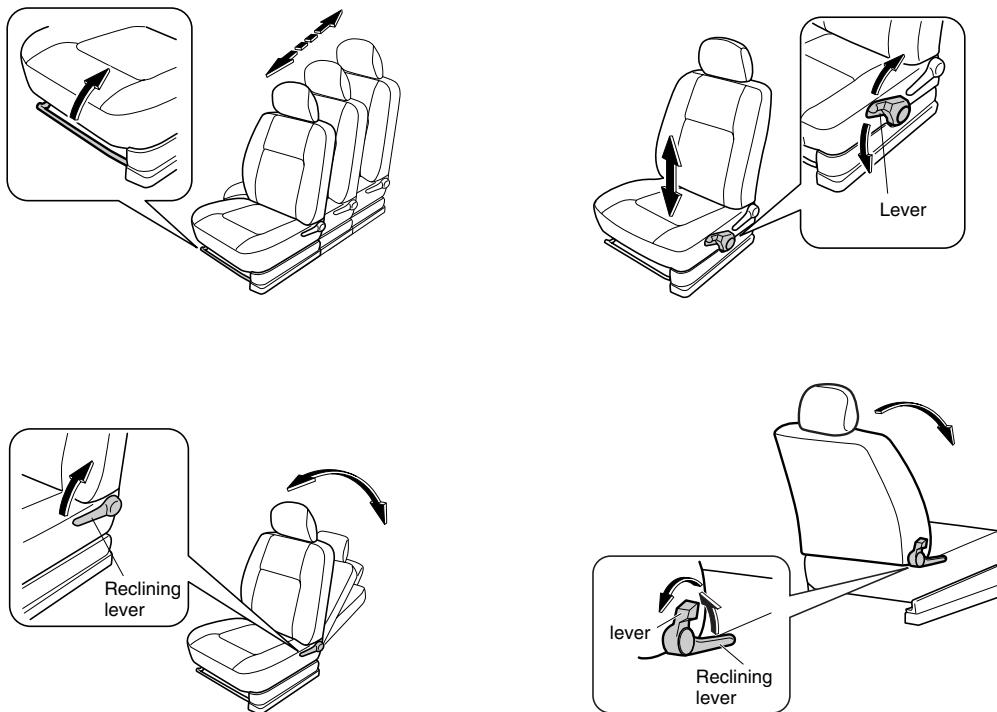

PDI0033S25

(3) Rear seat


- Adjustment of seat slide
- Adjustment of reclining
- Adjustment of headrest
- Folding mechanism or removal

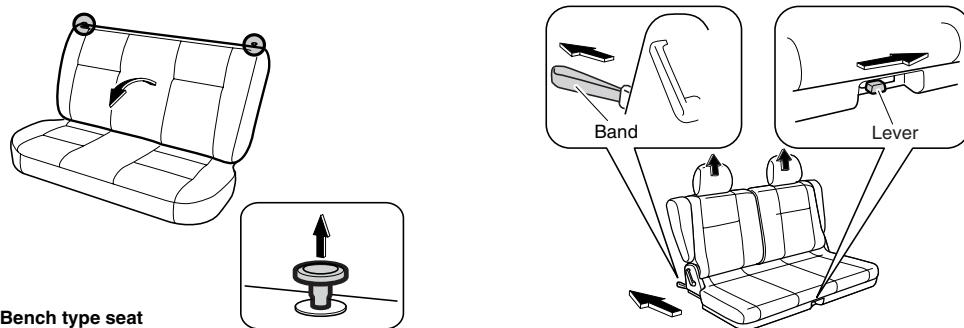


PDI0034S13

2. Check the seat belts for appearance. Also, check that they function smoothly.


- (1) Check that there are no twist, smear or damage.

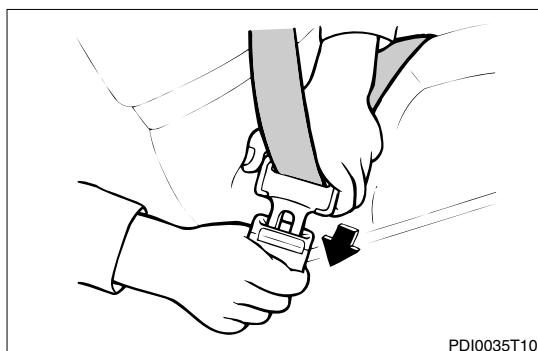

- (2) Check that there is no binding while the belt is pulled out or retracted.
- (3) Check that the belt is locked securely and released smoothly.

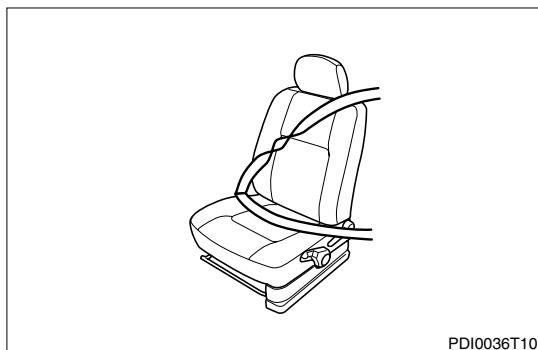


3. Check that the adjustable shoulder anchor can function smoothly and can be locked securely.

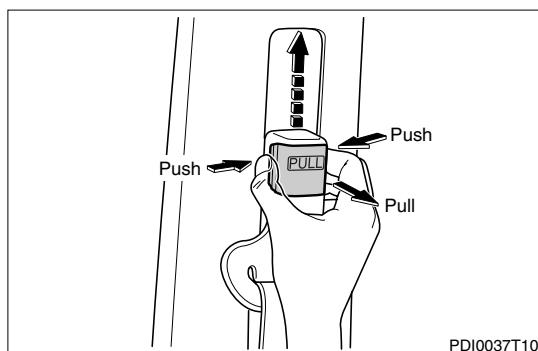

4. Check that the belt is locked securely when hard braking is applied.


**NOTE**

- This check is conducted during road test.

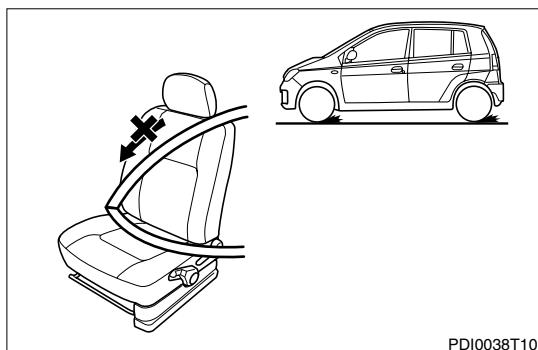


## 2-9 FUEL LID, BACK DOOR OPENER AND HOOD LOCK HANDLE

1. Check that the fuel lid can be opened smoothly, using the opener or the key.

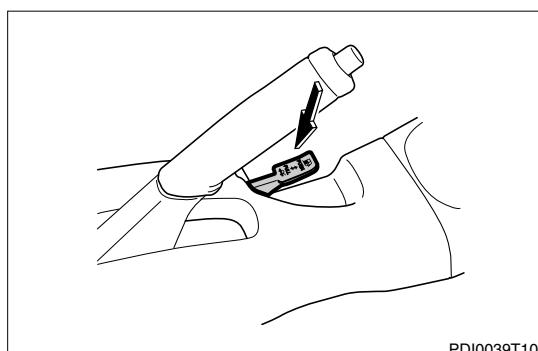


2. Check that the back door can be opened smoothly, using the opener or the key.

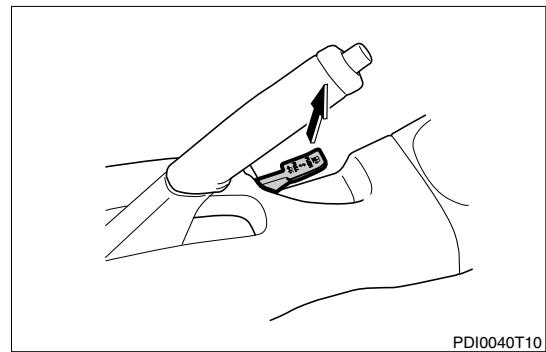

PDI0040T10


3. When the hood lock handle is pulled, check that the engine hood pops up smoothly.  
 4. Check that the auxiliary catch is working so that the hood may not be raised.  
 5. When the hood is closed by pushing the hood's edge by hand, check that the hood is locked firmly.

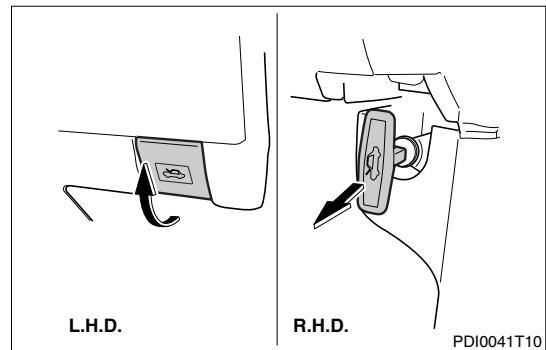

PDI0041T10


## 2-10 WINDOWS

1. Check that the window of each door can be opened or closed smoothly by using the power window switch or the regulator.

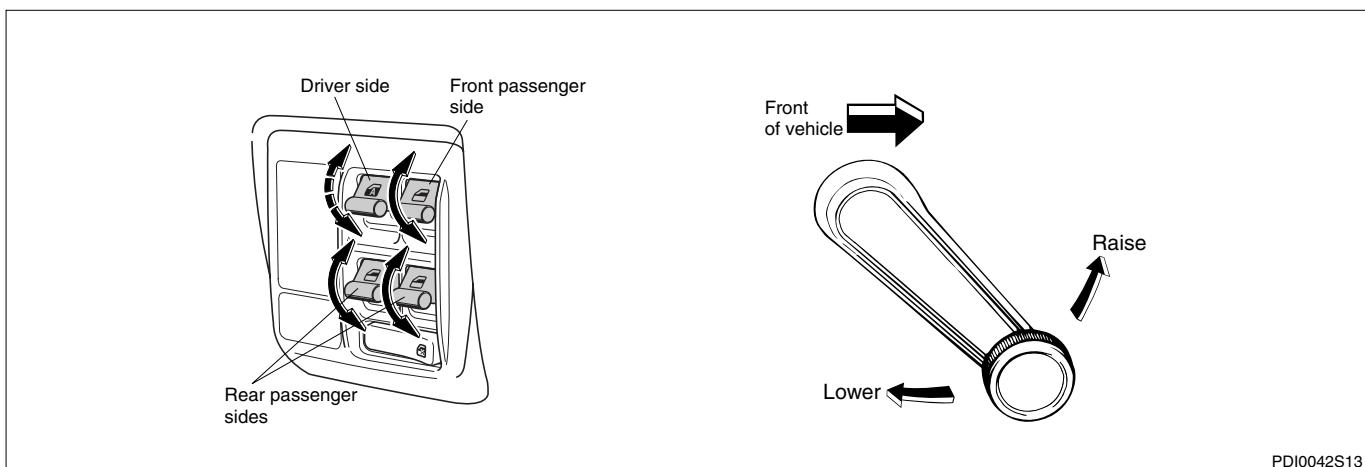


PDI0042S13

2. Check that the window lock switch is functioning properly.

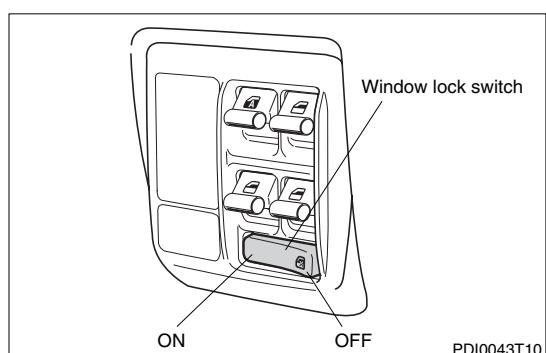

PDI0043T10

3. Check that no abnormal noise is emitted while the window is being opened or closed.

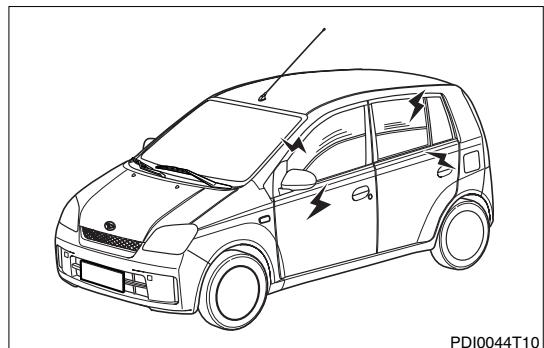


PDI0044T10

## 2-11 DOORS, DOOR LOCK

### 2-11-1 DOORS

1. Check that all doors can be opened or closed smoothly.

- (1) Front and rear doors
- (2) Back door or trunk lid
- (3) Engine hood
- (4) Slide door
- (5) Deck gate

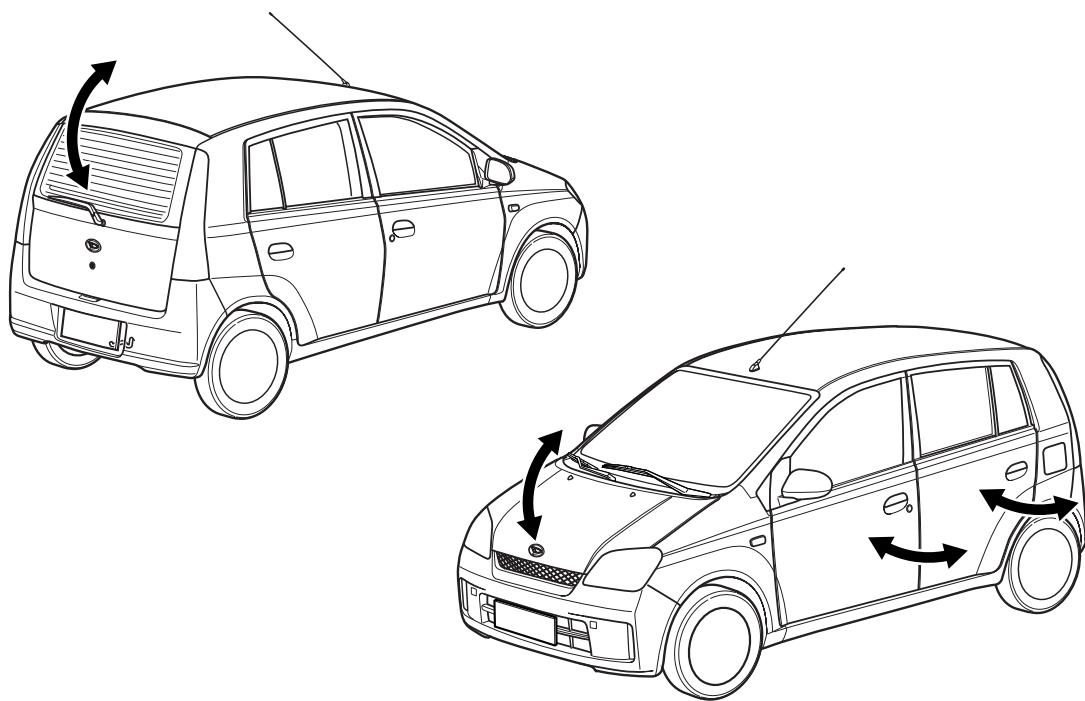


PDI0045S25

### 2-11-2 MANUAL DOOR LOCK

#### NOTE

- When the operation of the door lock is checked, make sure that all windows be opened and the ignition key is not left inside the vehicle.

1. Check that the doors can be opened or closed by using the inside and outside handles.

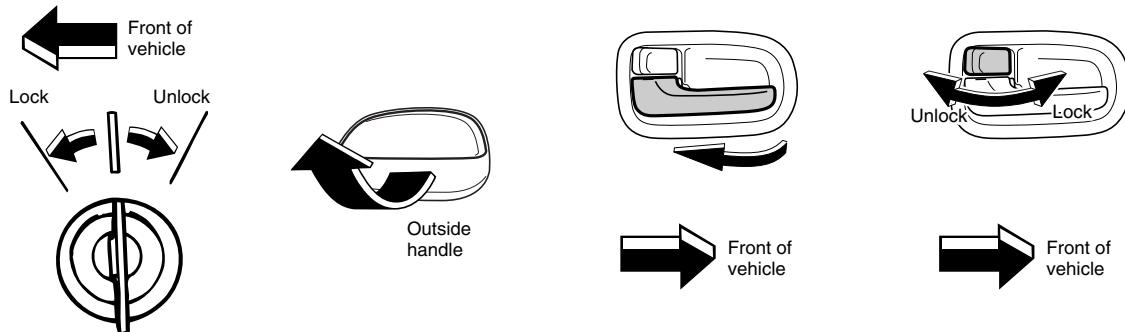

PDI0047S12


2. Check that the door will not open when the lock button is set to the lock position.

3. Check that the front and back doors can be locked or unlocked, using the key.

### 2-11-3 POWER DOOR LOCK

1. Check that the power door lock system is functioning properly.


- (1) Check that all doors can be locked or unlocked, using the key.
- (2) Check that all doors can be locked or unlocked, using the lock button at the driver's seat side.

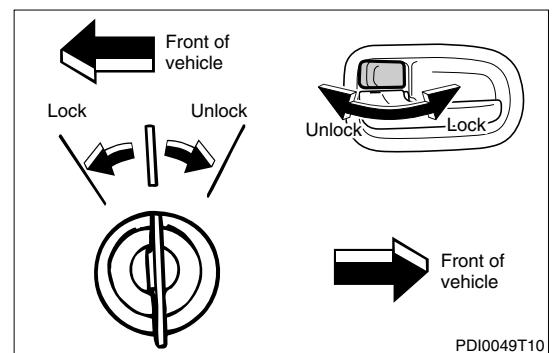

PDI0049T10

### 2-11-4 KEYLESS ENTRY SYSTEM


1. Check that the keyless entry system is functioning properly.

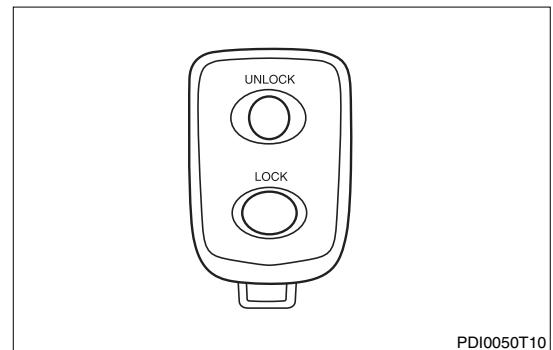

PDI0050T10

### 2-12 CHILD SAFETY


1. When the child safety knob is set to the lock position, check that the rear door can not be opened by means of the door handle inside the vehicle, and that the door can be opened by means of the door handle outside the vehicle.

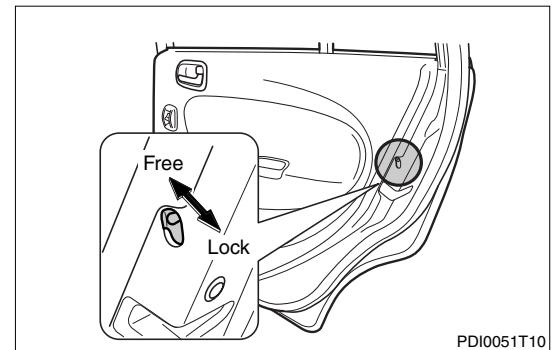

PDI0051T10

## 2-13 LUGGAGE ROOM LIGHT


1. When the back door is opened, check that the luggage room light is illuminated.

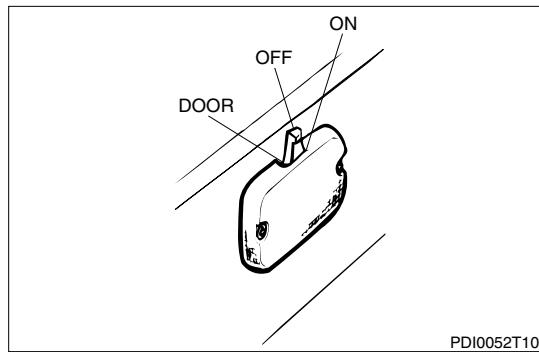

PDI0052T10

## 2-14 LUGGAGE ROOM TRIM AND FLOOR MAT

1. Visually or by hand check that the trim and floor mat of the luggage room are fitted properly in place.
2. Check that the rear package tray can move without any binding.

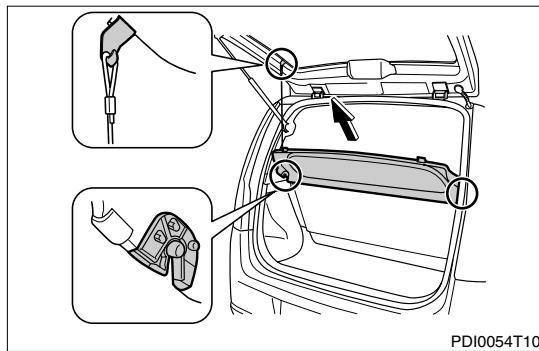

PDI0054T10

## 2-15 SPARE TIRE PRESSURE AND INSTALLATION

1. Check that the air inflation pressure complies with the specified value. Adjust, as required.


### NOTE

- For the adjustment, refer to the Owner's Manual.

2. Check that the spare tire is secured at the specified position firmly.

### NOTE

- For details, refer to the Owner's Manual.

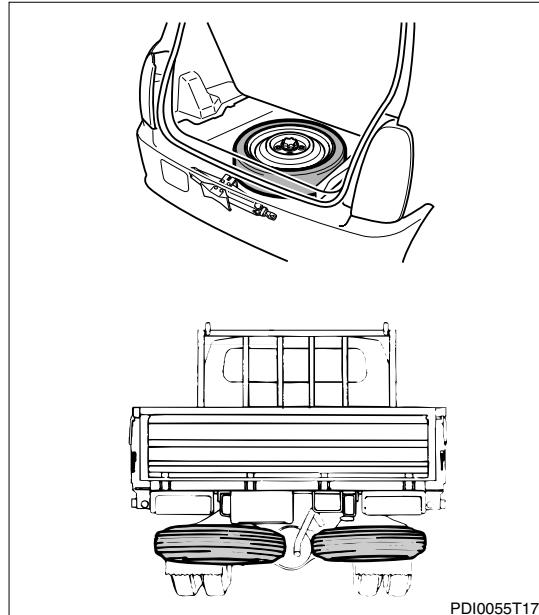


PDI0055T17

## 2-16 JACK AND TOOL INSTALLATION

1. Check that the jack and tools are accommodated at the specified positions.

### NOTE

- For details, refer to the Owner's Manual.

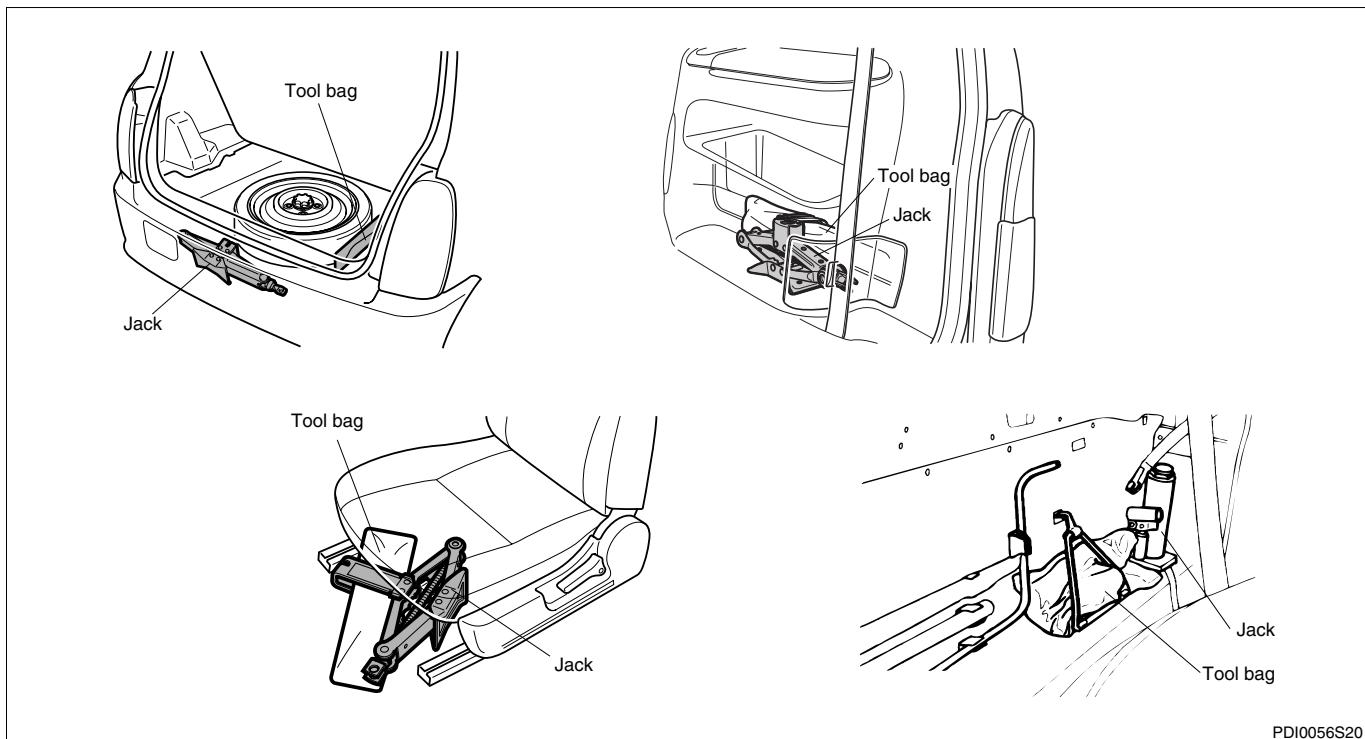

PDI0056S20

## 3 ENGINE COMPARTMENT

### CAUTION

- Make sure to use covers so as to prevent the painting finish surface from being scratched.


### 3-1 OIL AND FLUID LEVEL

#### NOTE

- When the oil or fluid levels are significantly low, perform leak check. Replenish the oil or fluid, as required.

#### 3-1-1 ENGINE OIL



1. After warming up the engine, stop the engine and leave it for five minutes. Check the oil level.
2. Check that the oil contains no dirt or impurity.

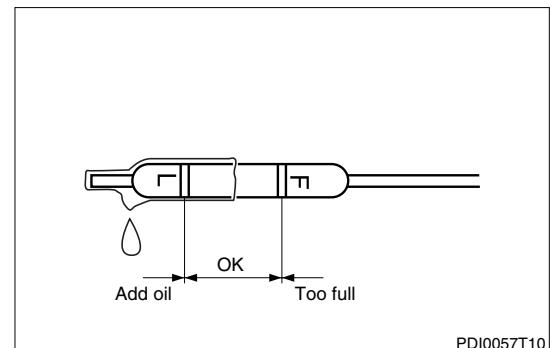

PDI0057T10

## 3-1-2 POWER STEERING FLUID


1. Check the fluid level of the reservoir tank.
  - (1) Read the scale of the HOT range when the fluid is hot (60 – 80°C) .
  - (2) Read the scale of the COLD range when the fluid is cold (10 – 30°C).

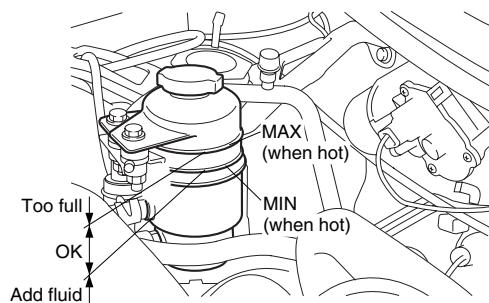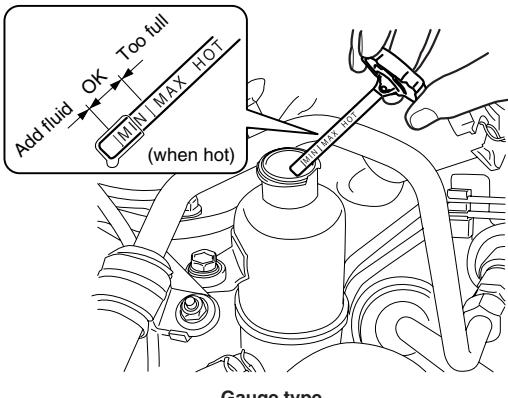

PDI0058S13


## 3-1-3 BRAKE AND CLUTCH FLUID

1. Visually check the fluid level of the reservoir tank.

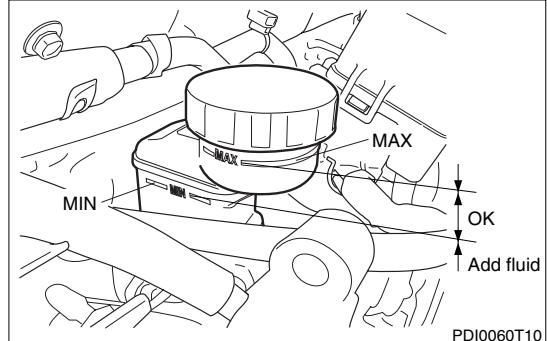

### NOTE


- When the reservoir tank is located inside the vehicle interior, this check should be conducted at the time of the "Check from Outside of Vehicle."

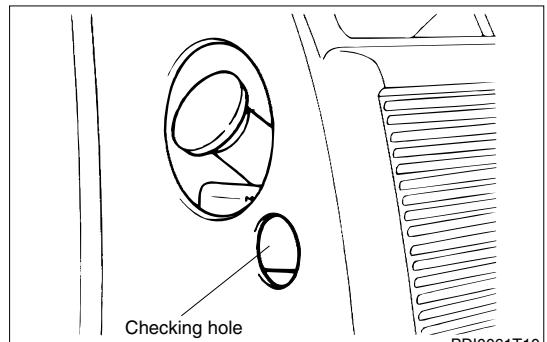

## 3-1-4 WASHER FLUID AND COOLANT


### (1) WASHER FLUID

1. Check the fluid level of the washer tank.

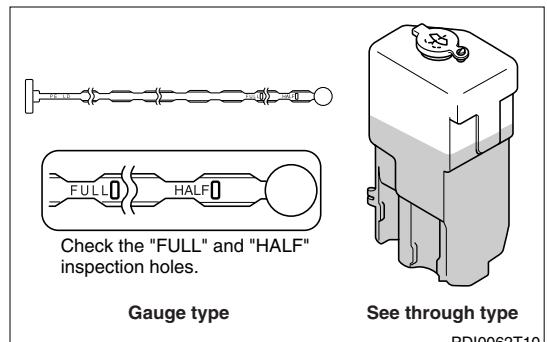


**NOTE**


- When the washer tank is located inside the vehicle interior, this check should be conducted at the time of the "Check from Outside of Vehicle."

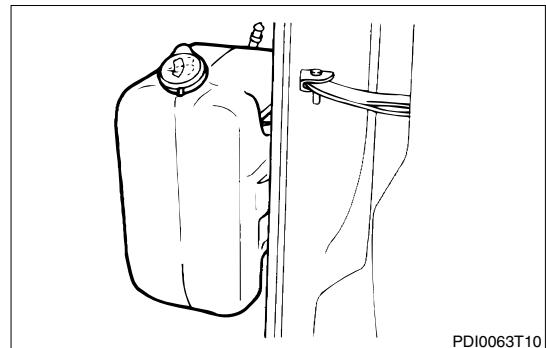**(2) COOLANT**


1. Visually check the fluid level of the reservoir tank.

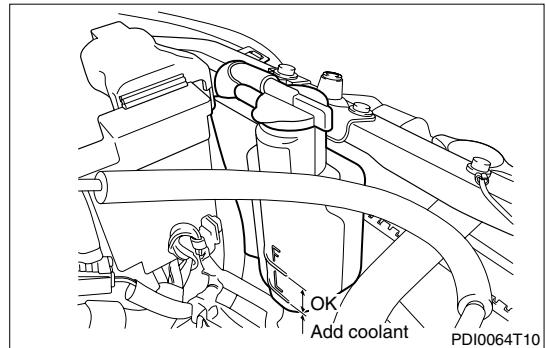**3-2 FUEL, OIL, COOLANT OR OTHERS FLUID LEAK**


1. Visually check the connections of hoses, pipes for slackness.
2. If there are any leakage in the fuel, oil and cooling systems, repair the leakage.
  - (1) Engine
  - (2) Power steering related pipes and hoses
  - (3) Brake related pipes and hoses
  - (4) Hydraulic clutch related pipes and hoses
  - (5) Radiator and hoses
  - (6) Pipes and hoses of the fuel system

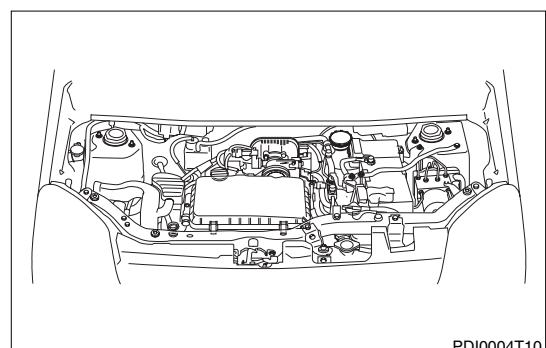**3-3 BATTERY TERMINAL TIGHTNESS**

1. Check that the cables are connected securely to the battery terminals. Also, check that they are clamped correctly.

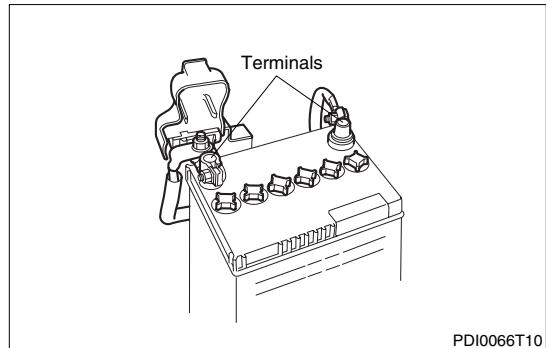**3-4 BATTERY ELECTROLYTE AND CHARGE LEVEL**

1. Check the battery electrolyte level.

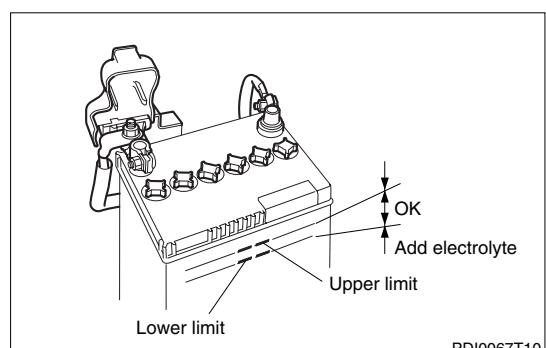


2. Check the battery charging state, based on the specific gravity or the voltage.

(1) Measure the specific gravity, using a hydrometer.

**NOTE**

- Perform the check for all cells. If the gravity is less than 1.27 at 20°C, recharge the battery.


(2) Measure the voltage, using a tester.

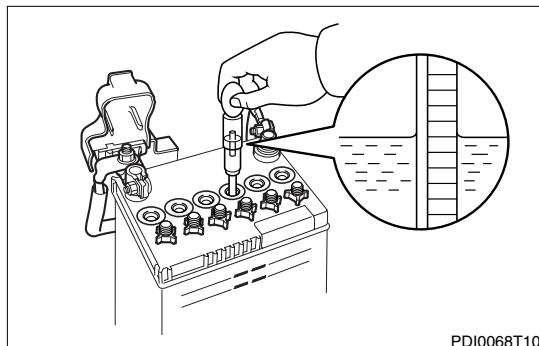

PDI0068T10

**NOTE**


- If the voltage is 12.2V or less, recharge the battery.

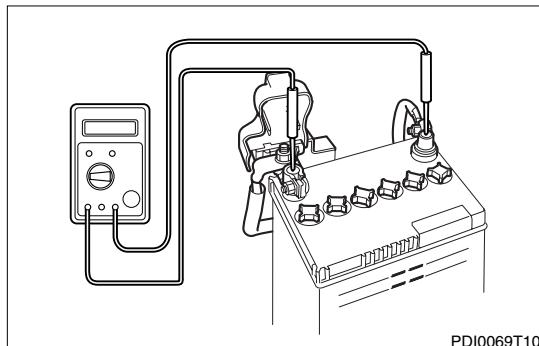

PDI0069T10

**CAUTION**

- Before the voltage is measured, pull out the ignition key and turn OFF the switches of all electric devices. Leave the systems under this state for at least 60 seconds so as to remove the surface electric charge. When you want to run the engine prior to the voltage measurement, leave the engine in a stopped state at least 20 minutes after stopping the engine. In this way, you can remove the surface electric charge.

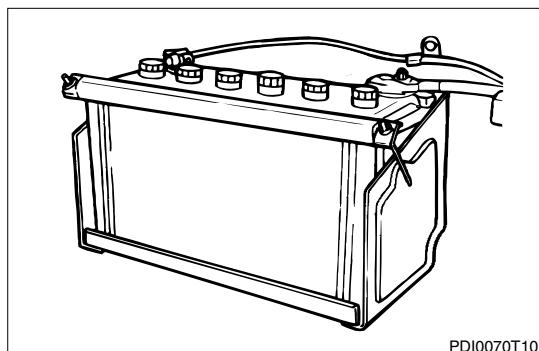

PDI0070T10


**NOTE**

- When the battery is not located inside the engine compartment, this check should be conducted at the time of the "Check from Outside of Vehicle."

## 4 UNDER VEHICLE

### 4-1 WHEEL HUB NUT TORQUE

1. Check that the hub nuts of all wheels are tightened to the specified torque, using a torque wrench.

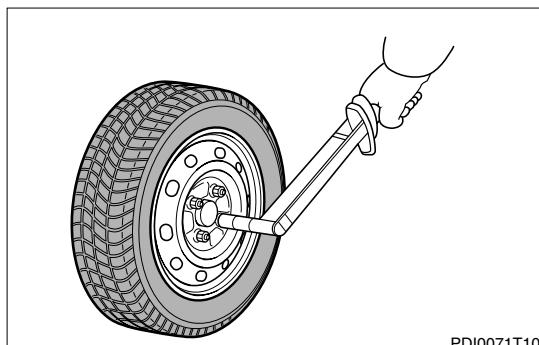


PDI0071T10

### 4-2 TIRE PRESSURE

1. Adjust the air pressure to the specified value, using a pressure gauge.

**NOTE**


- Perform the check while cold.

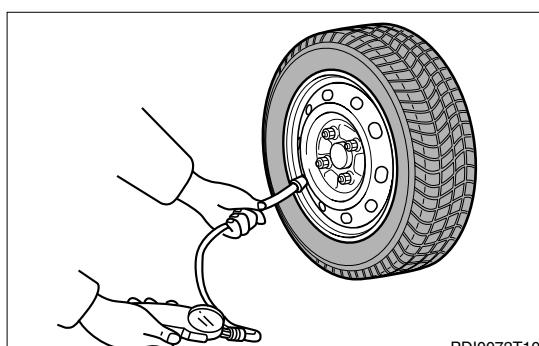

PDI0072T10

### 4-3 TIRE DEFICIENCY, DAMAGE


1. Check that all tires exhibit no deficiency or damage.

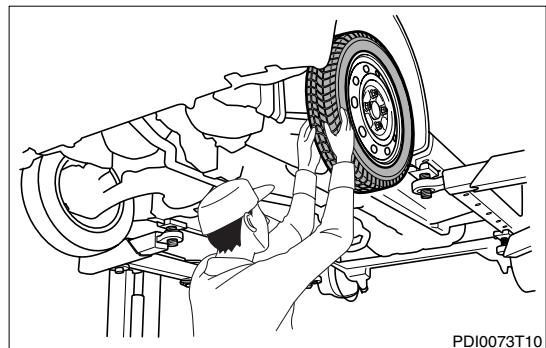


### 4-4 FUEL, OIL, COOLANT OR OTHERS FLUID LEAK

1. Visually check the fuel, oil and cooling systems for leakage.

(1) Brake pipe line

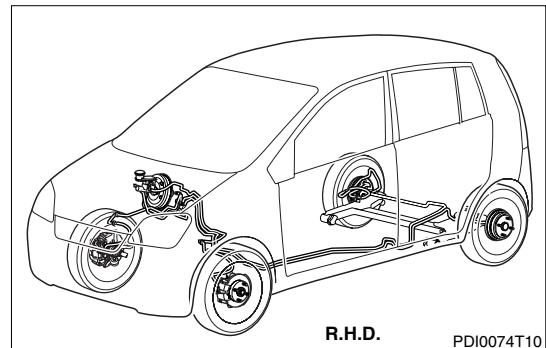


(2) Fuel pipe line

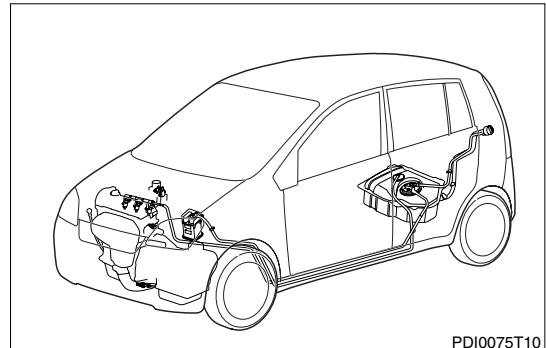


(3) Engine

- Cylinder head cover, oil pan, drain plug
- Oil pump cover

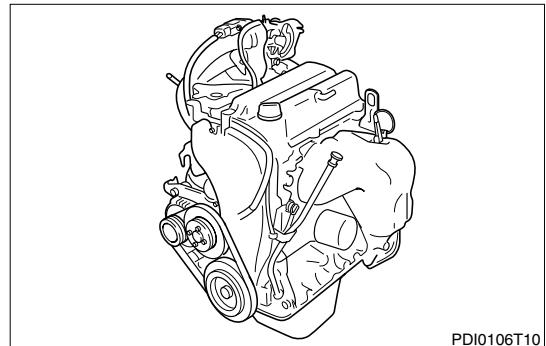


(4) Transmission

- Mating surface with engine
- Mating surface with case
- Driveshaft oil seal section
- Filler plug, drain plug
- Oil cooler piping

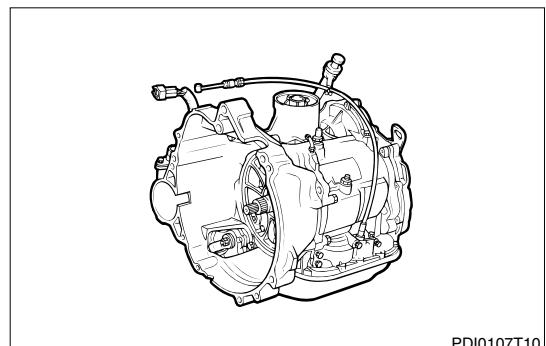

- (5) Steering gear
- Oil tube installing section

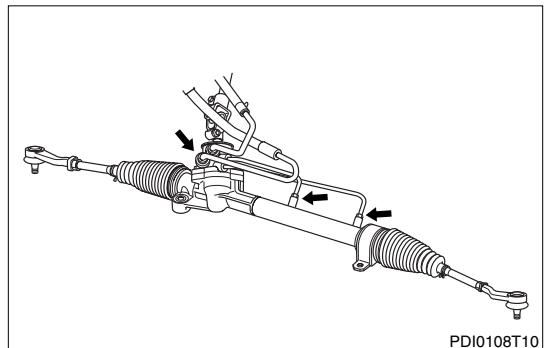


PDI0108T10

## 4-5 TIGHTNESS OF BOLTS AND NUTS ON CHASSIS AND POWER TRAIN


1. Check the tightening state of the bolts and nuts related to the chassis and power train system.

### SUSPENSION

#### FRONT


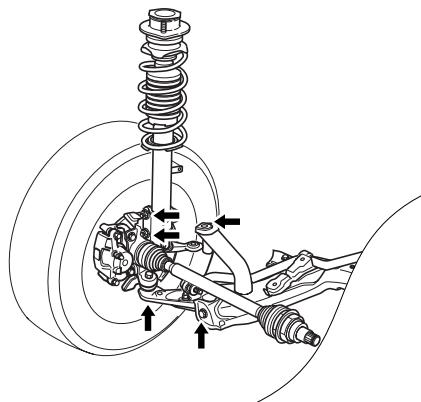


Mac Pherson strut type

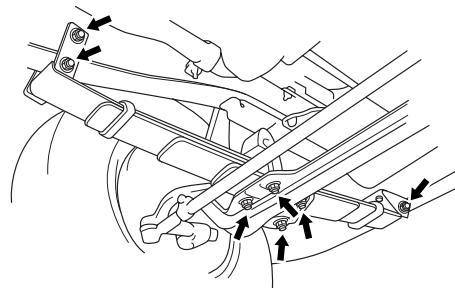


Leaf spring rigid type


#### REAR

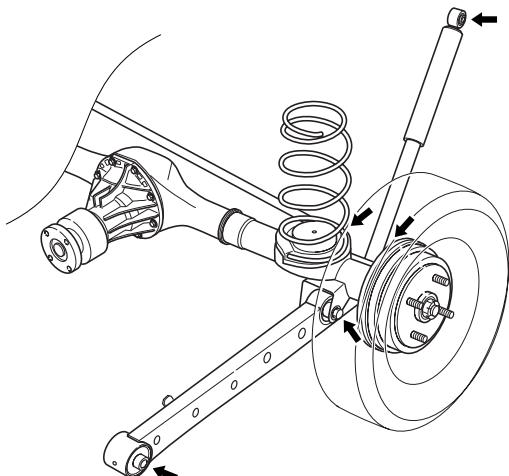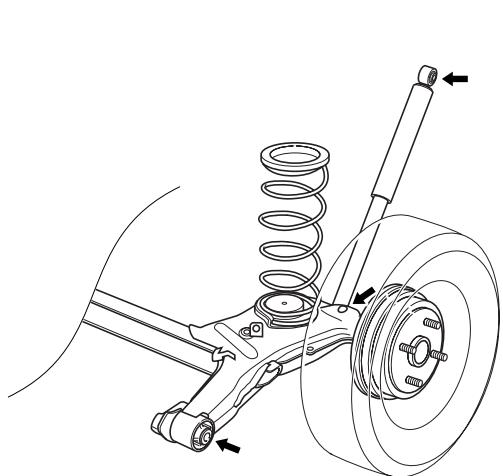

3-Link type


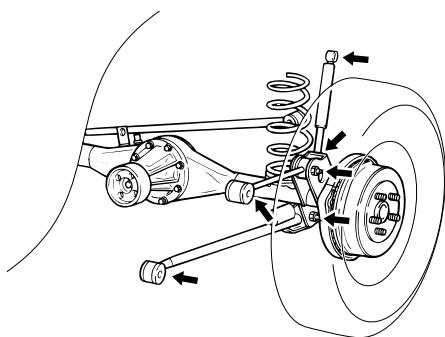


5-Link type

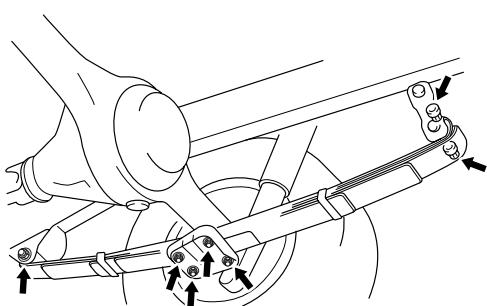


Leaf spring rigid type

## STEERING

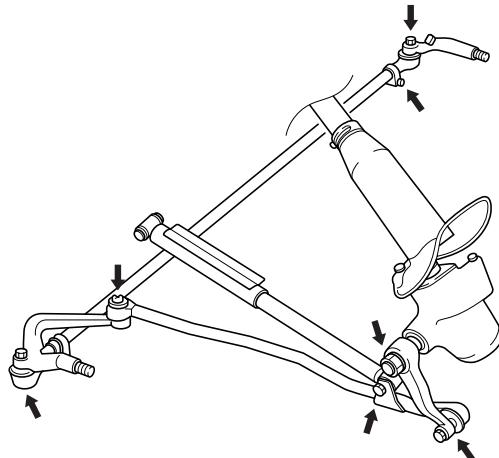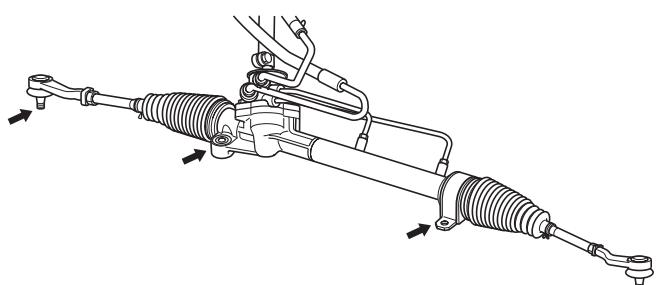


## POWER TRAIN

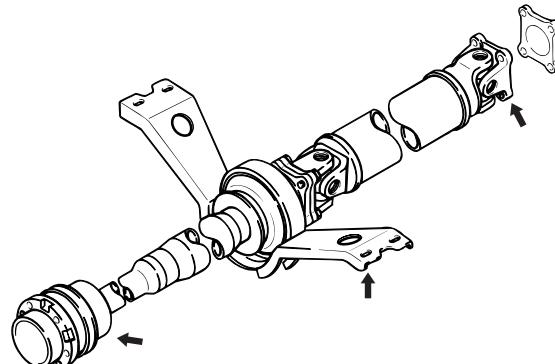

PDI0078S25

## 4-6 UNDER VEHICLE CONDITION FOR DAMAGE, RUST, ETC

1. Visually or by hand check that the floor panels, exhaust pipes, etc. exhibit no damage or rust.
2. Visually or by hand check the pipes, cables, boots, etc. for connecting state or damage.
  - (1) Brake pipe, hose, protector
  - (2) Fuel pipe, hose, protector
  - (3) Boot related to steering link
  - (4) Drive shaft boot
  - (5) Parking brake cable

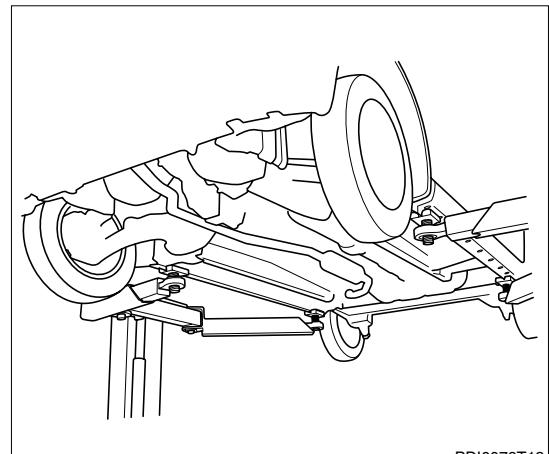

PDI0079T13

## 5 ROAD TEST

### CAUTION


- Prior to test, apply protective covers to the seat and carpet.

## 5-1 PEDAL HEIGHT, FREE PLAY, RESERVE TRAVEL

1. Check the heights of the brake and clutch pedals.

**NOTE**

- For the checking method, refer to the service manual.

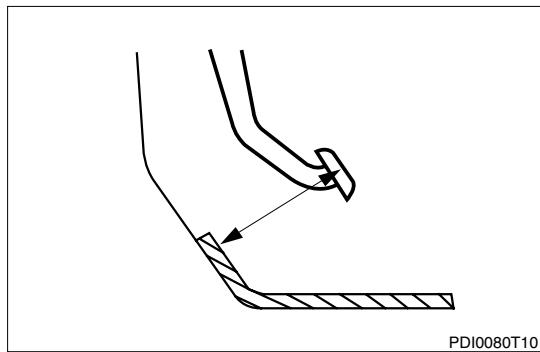


PDI0080T10

2. Check the pedal free travel.

**NOTE**

- For the checking method, refer to the service manual.

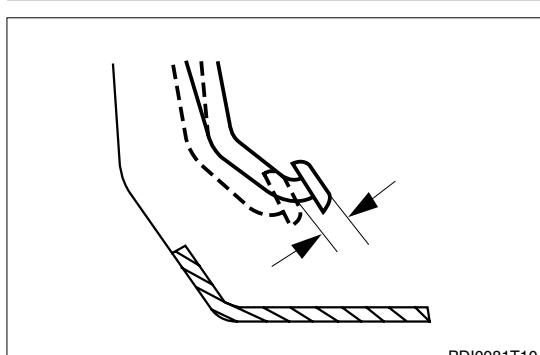


PDI0081T10

3. Check the reserve travel of the brake pedal.

**NOTE**

- For the checking method, refer to the service manual.

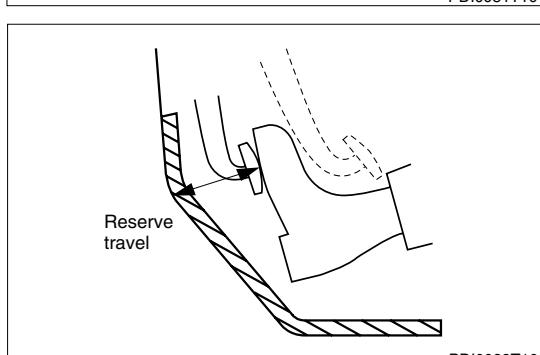


PDI0082T10

## 5-2 ENGINE OPERATION WHEN HOT, OR AFTER WARMING-UP PERIOD

1. Check that the engine is running smoothly when hot (the time during which the water temperature has reached a normal state).

- Abnormal noise, vibration
- Rough idling

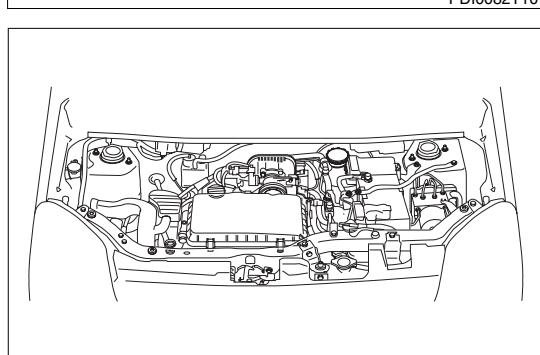


PDI0004T10

## 5-3 ENGINE PERFORMANCE, DRIVABILITY

1. Check the engine power under various running states, such as acceleration, deceleration and low-speed running.

2. Check that the engine is running without any trouble and responses smoothly.

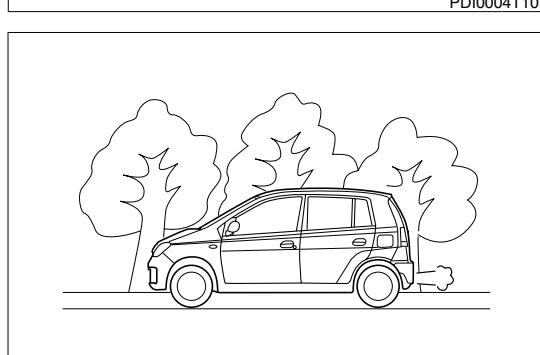


PDI0084T10

## 5-4 COMBINATION METER


### 5-4-1 METERS, GAUGES (SPEEDOMETER, TACHOMETER, WATER TEMPERATURE METER)

1. Check that the meters and gauges are operating normally and the pointers are moving smoothly.

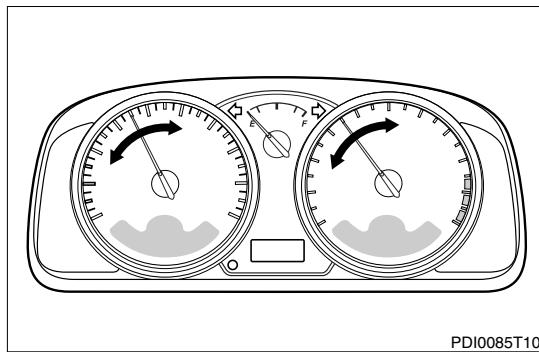

### 5-4-2 INDICATION LIGHTS


1. Check that each indicator is illuminated properly.

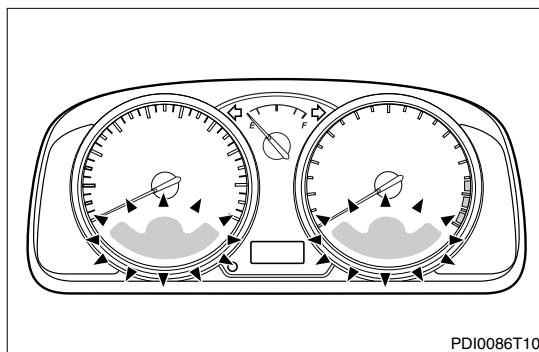

## 5-5 CLUTCH AND TRANSMISSION


### 5-5-1 MANUAL TRANSMISSION

1. Ensure that the clutch can be disengaged normally and there is no chattering or abnormal noise.
2. Check that the shift lever can be shifted smoothly.

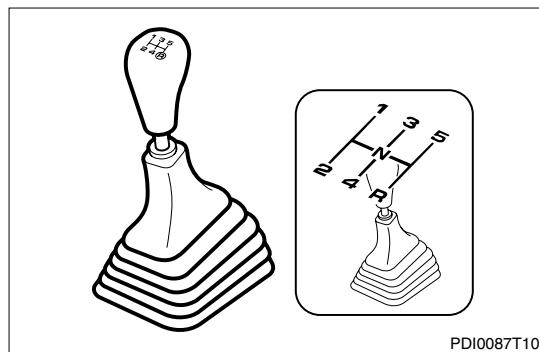


## 5-6 BRAKE, PARKING BRAKE

1. Check the brake for effective operation. Also, check that there is no unequal braking or squeaking noise.

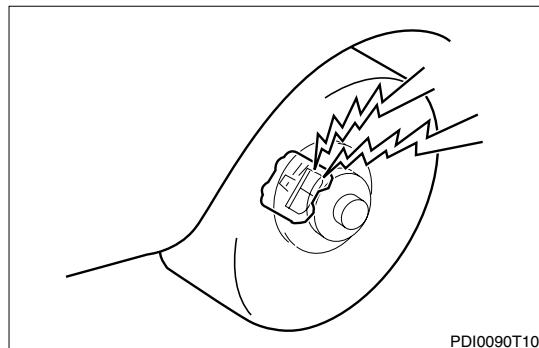


2. Check the parking brake.

- (1) Check the operation of the warning light.
- (2) Check the pulling amount of the parking brake.

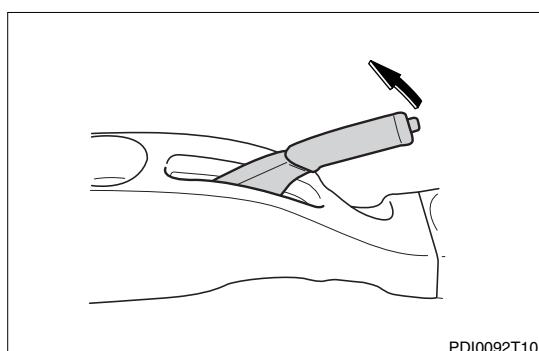


## 5-7 STEERING

1. Check that it turns lightly and there is no abnormal noise.

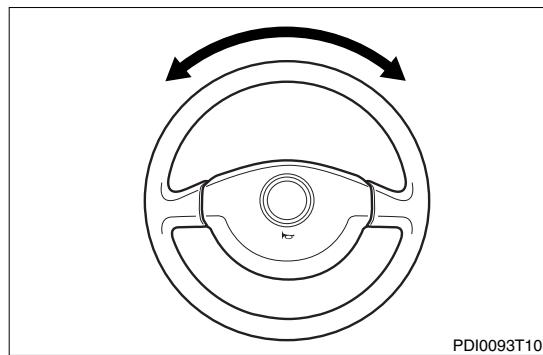

PDI0093T10


2. When the vehicle is running straight on a flat road, check that the steering wheel directs straight.
3. Run the vehicle on a flat road. Check that the vehicle has running straight.

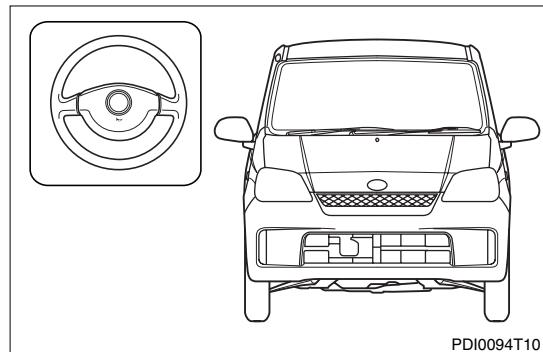

PDI0094T10


## 5-8 ABNORMAL NOISE, VIBRATION

1. Check that there is no squeaking or rattling noise.
  - (1) Instrument panel
  - (2) Door
  - (3) Trim
  - (4) Others

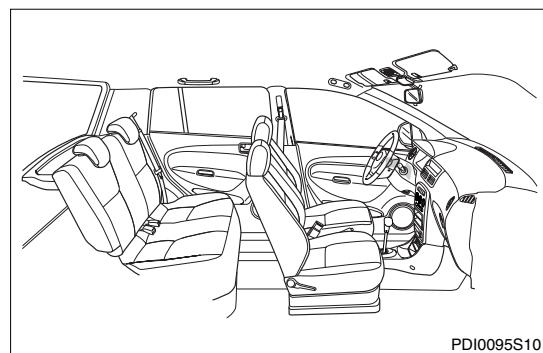

PDI0095S10


2. Check for abnormal noise or vibration during vehicle running.
  - (1) Related to power train (engine, transmission, differential, drive shaft and so forth)
  - (2) Wind noise

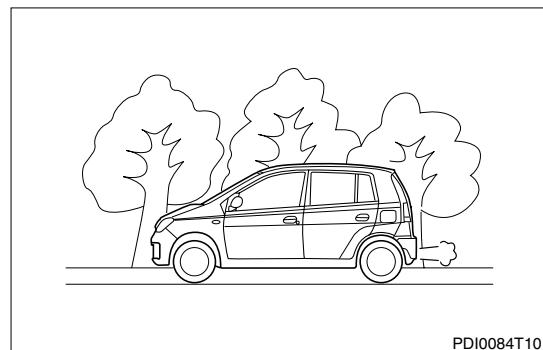

PDI0084T10


## 5-9 HEATER, AIR CONDITIONER

1. Check that the respective controls are functioning smoothly.
  - (1) Temperature control dial
  - (2) Blower fan switch
  - (3) Air outlet control dial
  - (4) Air conditioner switch
  - (5) Air intake control lever

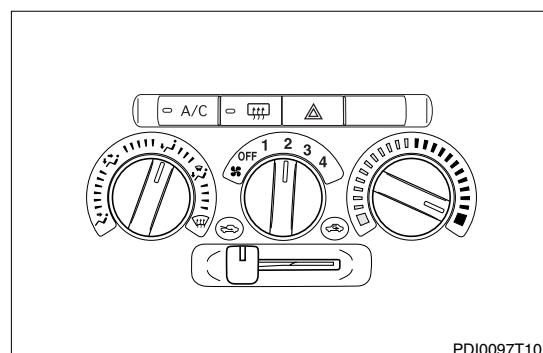

PDI0097T10

2. Check that the outlet port air changes according to the dial position of the air outlet control dial.

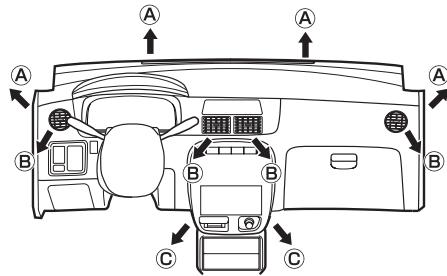

Dial position	②	③	④	⑤	⑥
Air outlet	② ③	③ ④	④ ⑤	⑤ ⑥	⑥

PDI0098S14

## 6 FINAL CHECK, CLEANING


### 6-1 REMOVAL OF UNNECESSARY LABEL, TAG AND STICKER

#### NOTE

- Remove protective covers immediately before the delivery.

## 6-2 VISUAL CHECK O INTERIOR PARTS OF INSTALLATION STATE, DAMAGE OR SMEAR

1. Visually or by hand check the appearance of the interior parts.
  - (1) Smear
  - (2) Scratch
  - (3) Damage
  - (4) Installation state

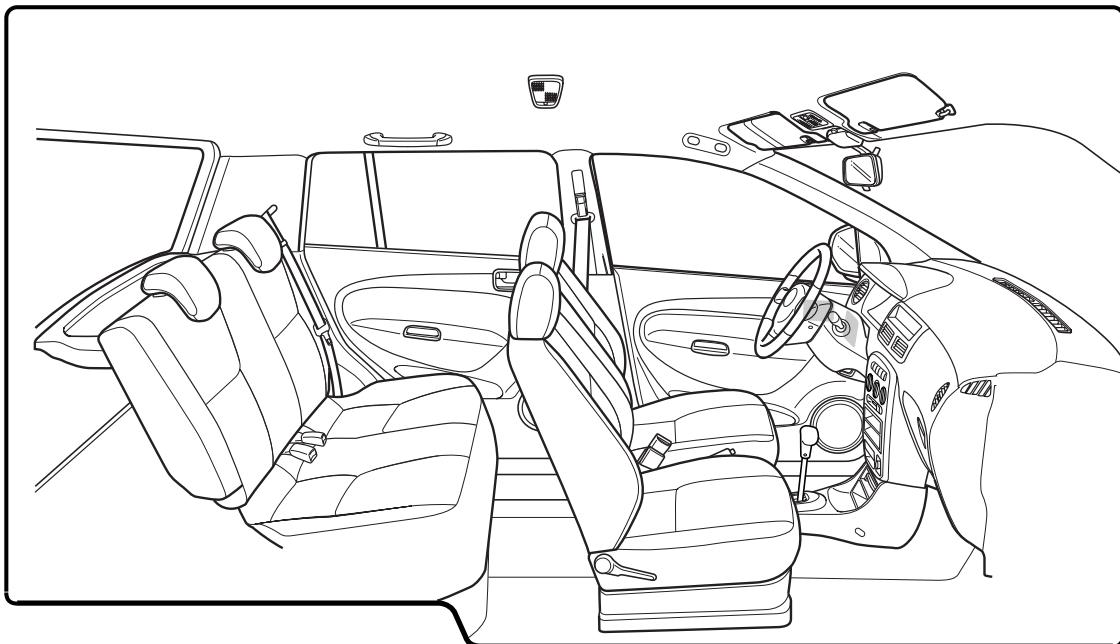


PDI0099S25

## 6-3 OWNER'S MANUAL/WARRANTY INFORMATION BOOK

1. Check that the glove compartment contains the following articles given below.
  - (1) Owner's Manual
  - (2) Warranty Information Book

## 6-4 FACTORY INSTALLATION PARTS

1. Install wheel caps and center caps.

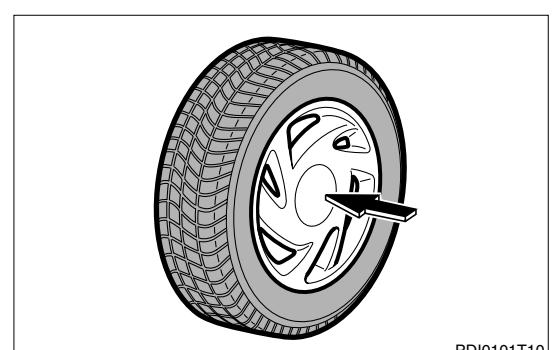


PDI0101T10

## 6-5 CAR WASH, CLEANING

1. Clean the body exterior and interior.

## NOTE


- Washing hands is recommended.

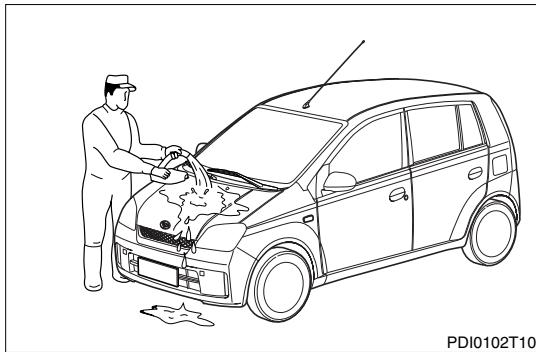

PDI0102T10

## 6-6 SCRATCH, SPINOSE PAINTING, DAMAGE ETC. OF PAINTING FINISH SURFACE

1. Apply light in such a way that the body upper surface or side surface may receive brightness of 800 lux or more.
2. Visually or by hand check each panel.
  - (1) Scratch
  - (2) Dent
  - (3) Smear

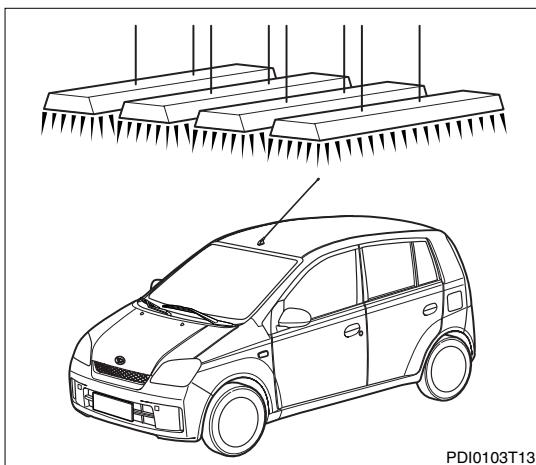

PDI0103T13

## NOTE


- Damage of the panel may be detected easily when viewed diagonally.



PDI0104T10

## 6-7 EXTERIOR PARTS

1. Visually or by hand check all exterior parts.

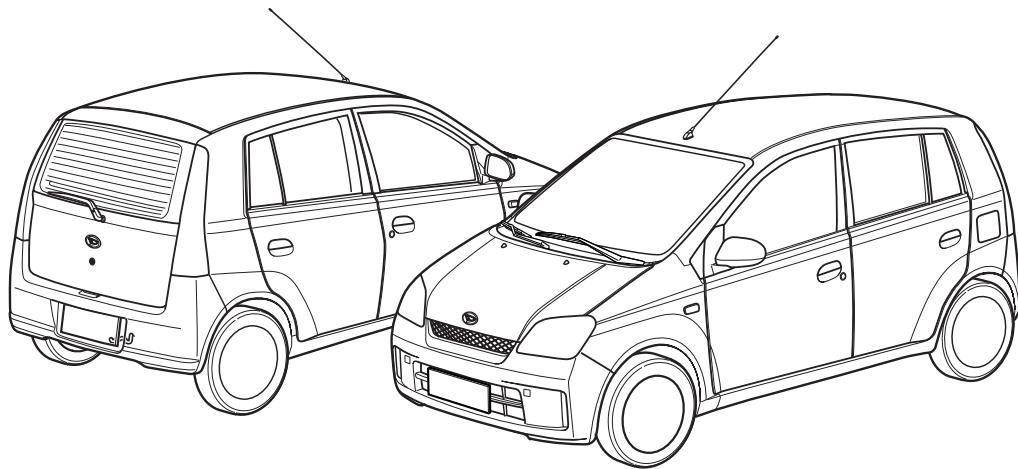

PDI0105S25

- (1) Scratch
- (2) Moulding, bumper's damage, floating, looseness

## 7 VEHICLE DELIVERY INSPECTION

### 7-1 CHECK

1. Installation of fuse
2. Washer fluid level
3. Engine startability (battery charging state)

#### NOTE

- When the vehicle is stored for more than one month, check the specific gravity of battery.

4. Setting of radio and clock
5. Smear and scores of interior appointments
6. Scores and rust of exterior appointments
7. Deformation and deficiency of tire
8. Dealer-installation parts
9. Articles to be mounted on vehicle (jack, tools, manuals, and so forth)

### 7-2 PREPARATION FOR VEHICLE DELIVERY

1. Removal of the following parts given below
  - (1) Door edge protector
  - (2) Protection covers, etc. of seat and door trim
  - (3) Step cover
2. Cleaning of vehicle interior

Check that any related parts become deteriorated after PDI.