

Engine Cooling System Trouble in General

COOLING

12.Engine Cooling System Trouble in General

A: INSPECTION

Trouble	Possible cause	Corrective action
Over-heating	a. Insufficient engine coolant	Replenish engine coolant, inspect for leakage, and repair it if necessary.
	b. Loose timing belt	Repair or replace timing belt tensioner.
	c. Oil on drive belt	Replace.
	d. Malfunction of thermostat	Replace.
	e. Malfunction of water pump	Replace.
	f. Clogged engine coolant passage	Clean.
	g. Improper ignition timing	Inspect and repair ignition control system. <Ref. to EN(H4DOTC)(diag)-2, PROCEDURE, Basic Diagnostic Procedure.>
	h. Clogged or leaking radiator	Clean, repair or replace.
	i. Engine oil mixed in engine coolant	Replace the engine coolant. If it is ineffective, inspect and repair the engine side.
	j. Air/fuel mixture ratio too lean	Inspect and repair the fuel injection system. <Ref. to EN(H4DOTC)(diag)-2, PROCEDURE, Basic Diagnostic Procedure.>
	k. Excessive back pressure in exhaust system	Clean or replace.
	l. Insufficient clearance between piston and cylinder	Adjust or replace.
	m. Slipping clutch	Correct or replace.
	n. Dragging brake	Adjust.
Over-cooling	o. Defective radiator fan	Inspect the radiator fan relay, engine coolant temperature sensor or fan motor and replace them.
	a. Ambient temperature extremely low	Partly cover radiator front area.
Engine coolant leaks	b. Defective thermostat	Replace.
	a. Loosened or damaged connecting units on hoses	Correct or replace.
	b. Leakage from water pump	Replace.
	c. Leakage from water pipe	Correct or replace.
	d. Leakage around cylinder head gasket	Retighten cylinder head bolts or replace gasket.
	e. Damaged or cracked cylinder head and cylinder block	Correct or replace.
	f. Damaged or cracked thermostat case	Correct or replace.
Noise	g. Leakage from radiator	Correct or replace.
	a. Timing belt problem	Replace.
	b. Defective radiator fan	Replace.
	c. Defective water pump bearing	Replace water pump.
	d. Defective water pump mechanical seal	Replace water pump.

LUBRICATION

LU(H4DOTC)

	Page
1. General Description	2
2. Oil Pressure System	7
3. Engine Oil	9
4. Oil Pump	11
5. Oil Pan and Strainer	16
6. Oil Pressure Switch	20
7. Oil Pipe	21
8. Engine Oil Cooler	25
9. Engine Oil Filter	26
10. Engine Lubrication System Trouble in General	27