


## 8. Front Washer Nozzle

### A: REMOVAL

1) Remove the front hood insulator. <Ref. to EB-13, FRONT HOOD INSULATOR, REMOVAL, Front Hood.>

2) Hold the claw (A) of the washer nozzle towards the direction of the arrow, and remove the washer nozzle.

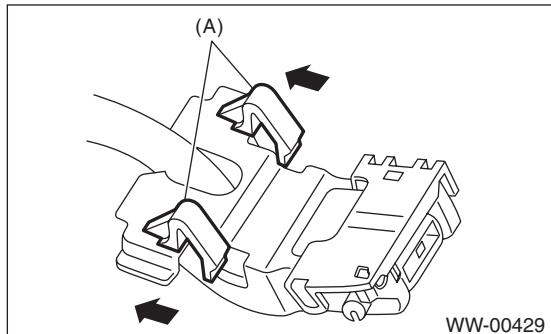

3) Remove the washer hose from the washer nozzle.

### B: INSTALLATION

1) Install in the reverse order of removal.

2) Adjust the washer nozzle position.


### C: INSPECTION

- Make sure the nozzle and hose are not clogged.
- Make sure the hose is not bent.
- While the vehicle is at a standstill and the wiper switch is turned OFF, make sure that the washer injection position is as shown in the figure.

#### *Spray position:*

**A: 250 mm (9.84 in)**

**B: 535 mm (21.06 in)**

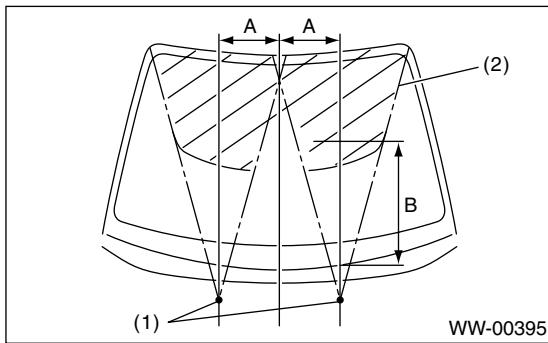

(1) Nozzle

(2) Spray area (shaded area)