

## 2. Schedule

### A: MAINTENANCE SCHEDULE 1

#### 1. U.S.

- Other than U5 model

			Maintenance interval [Number of months or km (miles), whichever occurs first]																	
	Months		3	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120	Remarks
	x 1,000 km		4.8	12	24	36	48	60	72	81.4	96	108	120	132	144	156	168	180	192	
	x 1,000 miles		3	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120	
1	Engine oil	3.6 L	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	Turbo model Note 6.
		2.5 L		R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
2	Engine oil filter	3.6 L	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	Turbo model Note 6.
		2.5 L		R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
3	Spark plug									R									R	
4	Drive belt(s)					I				I					I		R			
5	Camshaft drive belt					I				I					I		R			
6	Fuel line					(I)				(I)					(I)				I	Note 1.
7	Air cleaner element					R				R					R				R	Note 2.
8	Cooling system					I				I					I				I	
9	Engine coolant		Replace after the first 11 years or 220,000 km (137,500 miles), and every six years or 120,000 km (75,000 miles) thereafter																	
10	Clutch system		I		I		I		I		I		I		I		I		I	
11	Transmission oil				I				I				I						I	
12	ATF and CVTF				I				I				I						I	Note 3.
13	Front and rear differential oil				I				I				I			I			I	
14	Brake line		I		I		I		I		I		I		I		I		I	
15	Brake fluid				R				R				R					R		
16	Disc brake pad and disc		I		I		I		I		I		I		I		I		I	
17	Parking brake		I		I		I		I		I		I		I		I		I	
18	Suspension		I		I		I		I		I		I		I		I		I	
19	Wheel bearing								(I)										(I)	
20	Axle boots and joints		I		I		I		I		I		I		I		I		I	
21	Tire rotation		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	Note 4.	
22	Steering system (Power steering)		I		I		I		I		I		I		I		I		I	
23	A/C filter		Replace every 12 months or 15,000 km (9,300 miles).																Note 5.	

Symbols used:

R: Replace

I: Inspection

(R) or (I): Recommended service for safe vehicle operation.

## Schedule

### PERIODIC MAINTENANCE SERVICES

---

#### NOTE:

1. This inspection is not required to maintain emission warranty eligibility and it does not affect the manufacturer's obligations under EPA.
2. When the vehicle is used in extremely dusty conditions, the air cleaner element should be replaced more often.
3. When CVTF is used under severe condition, to replace every 40,000 km (24,855 miles) is recommended.
4. A tire should be replaced when the tread wear indicator appears as a solid band across the tread. The indicator appears when the remaining amount of tread is less than 1.6 mm (0.063 in).
5. When the A/C filter is installed.
6. For 2.5L turbo model, replace every 3.75 months or 6,000 km (3,750 miles).

# Schedule

## PERIODIC MAINTENANCE SERVICES

- U5 model

			Maintenance interval [Number of months or km (miles), whichever occurs first]												Remarks
Months			3	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	To be continued to the next table.	Remarks
x 1,000 km			4.8	12	24	36	48	60	72	81.4	96	108	120		
x 1,000 miles			3	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75		
1	Engine oil	3.6 L	R	R	R	R	R	R	R	R	R	R	R		
		2.5 L		R	R	R	R	R	R	R	R	R	R		
2	Engine oil filter	3.6 L	R	R	R	R	R	R	R	R	R	R	R		
		2.5 L		R	R	R	R	R	R	R	R	R	R		
3	Spark plug										R				
4	Drive belt(s)						I				I				
5	Camshaft drive belt						I				I				
6	Fuel line						(I)				(I)				Note 1.
7	Air cleaner element						R				R				Note 2.
8	Cooling system						I				I				
9	Engine coolant		Replace after the first 11 years or 220,000 km (137,500 miles), and every six years or 120,000 km (75,000 miles) thereafter												
10	Clutch system			I		I		I		I		I			
11	Transmission oil					I				I					
12	ATF and CVTF					I				I					Note 3.
13	Front and rear differential oil					I				I					
14	Brake line			I		I		I		I		I			
15	Brake fluid					R				R					
16	Disc brake pad and disc			I		I		I		I		I			
17	Parking brake			I		I		I		I		I			
18	Suspension			I		I		I		I		I			
19	Wheel bearing									(I)					
20	Axe boots and joints			I		I		I		I		I			
21	Tire rotation		I	I	I	I	I	I	I	I	I	I	I		Note 4.
22	Steering system (Power steering)			I		I		I		I		I			
23	A/C filter		Replace every 12 months or 15,000 km (9,300 miles).												Note 5.

Symbols used:

R: Replace

I: Inspection

(R) or (I): Recommended service for safe vehicle operation.

NOTE:

- This inspection is not required to maintain emission warranty eligibility and it does not affect the manufacturer's obligations under EPA.
- When the vehicle is used in extremely dusty conditions, the air cleaner element should be replaced more often.
- When CVTF is used under severe condition, to replace every 40,000 km (24,855 miles) is recommended.
- A tire should be replaced when the tread wear indicator appears as a solid band across the tread. The indicator appears when the remaining amount of tread is less than 1.6 mm (0.063 in).
- When the A/C filter is installed.

# Schedule

## PERIODIC MAINTENANCE SERVICES

		Maintenance interval [Number of months or km (miles), whichever occurs first]											
Months	Continued from previous table	82.5	90	97.5	105	112.5	120	127.5	135	142.5	150	Remarks	
	× 1,000 km	132	144	156	168	180	192	204	216	228	240		
	× 1,000 miles	82.5	90	97.5	105	112.5	120	127.5	135	142.5	150		
1	Engine oil	R	R	R	R	R	R	R	R	R	R		
2	Engine oil filter	R	R	R	R	R	R	R	R	R	R		
3	Spark plug						R						
4	Drive belt(s)		I		R				I				
5	Camshaft drive belt		I		R				I				
6	Fuel line		(I)				I			(I)	Note 1.		
7	Air cleaner element		R				R			R	Note 2.		
8	Cooling system		I				I				I		
9	Engine coolant	Replace after the first 11 years or 220,000 km (137,500 miles), and every six years or 120,000 km (75,000 miles) thereafter											
10	Clutch system		I		I		I				I		
11	Transmission oil		I				I				I		
12	ATF and CVTF		I				I				I	Note 3.	
13	Front and rear differential oil		I				I				I		
14	Brake line		I		I		I		I		I		
15	Brake fluid		R				R				R		
16	Disc brake pad and disc		I		I		I		I		I		
17	Parking brake		I		I		I		I		I		
18	Suspension		I		I		I		I		I		
19	Wheel bearing					(I)				(I)			
20	Axle boots and joints		I		I		I		I		I		
21	Tire rotation	I	I	I	I	I	I	I	I	I	I	Note 4.	
22	Steering system (Power steering)		I		I		I		I		I		
23	A/C filter	Replace every 12 months or 15,000 km (9,300 miles).											

Symbols used:

R: Replace

I: Inspection

(R) or (I): Recommended service for safe vehicle operation.

### NOTE:

1. This inspection is not required to maintain emission warranty eligibility and it does not affect the manufacturer's obligations under EPA.
2. When the vehicle is used in extremely dusty conditions, the air cleaner element should be replaced more often.
3. When CVTF is used under severe condition, to replace every 40,000 km (24,855 miles) is recommended.
4. A tire should be replaced when the tread wear indicator appears as a solid band across the tread. The indicator appears when the remaining amount of tread is less than 1.6 mm (0.063 in).
5. When the A/C filter is installed.

# Schedule

## PERIODIC MAINTENANCE SERVICES

### 2. CANADA

			Maintenance interval [Number of months or km (miles), whichever occurs first]																	
Months			3	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120	Remarks
x 1,000 km			4.8	12	24	36	48	60	72	81.4	96	108	120	132	144	156	168	180	192	
x 1,000 miles			3	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120	
1	Engine oil	3.6 L	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
		2.5 L	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
2	Engine oil filter	3.6 L	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
		2.5 L	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
3	Spark plug									R									R	
4	Drive belt(s)					I				I				I		R				
5	Camshaft drive belt					I				I				I		R				
6	Fuel line					(I)				(I)				(I)				I	Note 1.	
7	Air cleaner element					R				R				R				R	Note 2.	
8	Cooling system					I			I				I				I			
9	Engine coolant		Replace after the first 11 years or 220,000 km (137,500 miles), and every six years or 120,000 km (75,000 miles) thereafter																	
10	Clutch system			I		I		I		I		I		I		I		I		
11	Transmission oil					I				I				I				I		
12	ATF and CVTF					I			I				I				I	Note 3.		
13	Front and rear differential oil					I			I				I				I			
14	Brake line			I		I		I		I		I		I		I		I		
15	Brake fluid					R			R			R				R				
16	Disc brake pad and disc			I		I		I		I		I		I		I		I		
17	Parking brake			I		I		I		I		I		I		I		I		
18	Suspension			I		I		I		I		I		I		I		I		
19	Wheel bearing								(I)									(I)		
20	Axle boots and joints			I		I		I		I		I		I		I		I		
21	Tire rotation		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	Note 4.		
22	Steering system (Power steering)		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I			
23	A/C filter		Replace every 12 months or 15,000 km (9,300 miles).																Note 5.	

Symbols used:

R: Replace

I: Inspection

(R) or (I): Recommended service for safe vehicle operation.

#### NOTE:

- This inspection is not required to maintain emission warranty eligibility and it does not affect the manufacturer's obligations under EPA.
- When the vehicle is used in extremely dusty conditions, the air cleaner element should be replaced more often.
- When CVTF is used under severe condition, to replace every 40,000 km (24,855 miles) is recommended.
- A tire should be replaced when the tread wear indicator appears as a solid band across the tread. The indicator appears when the remaining amount of tread is less than 1.6 mm (0.063 in).
- When the A/C filter is installed.

# Schedule

## PERIODIC MAINTENANCE SERVICES

### B: MAINTENANCE SCHEDULE 2

Item	Maintenance interval	Repeat short distance drive	Repeat rough/muddy road drive	Extremely cold weather area	Salt or other corrosive used or coastal area	High humidity or mountain area	Repeat towing trailer
Engine oil	3.75 months	R		R			R
	6,000 km						
	3,750 miles						
Engine oil filter	3.75 months	R		R			R
	6,000 km						
	3,750 miles						
Fuel line	7.5 months				I		
	12,000 km						
	7,500 miles						
Transmission oil	15 months						R
	24,000 km						
	15,000 miles						
ATF	15 months						R
	24,000 km						
	15,000 miles						
CVTF	40,000 km						R
	24,855 miles						
Front & rear differential gear oil	15 months						R
	24,000 km						
	15,000 miles						
Brake line	7.5 months				I		
	12,000 km						
	7,500 miles						
Brake fluid	15 months					R	
	24,000 km						
	15,000 miles						
Disc brake pad and disc	7.5 months	I	I		I		I
	12,000 km						
	7,500 miles						
Parking brake	7.5 months	I	I		I		I
	12,000 km						
	7,500 miles						
Suspension	7.5 months		I	I	I		
	12,000 km						
	7,500 miles						
A axle boots and joints	7.5 months	I	I	I	I		I
	12,000 km						
	7,500 miles						
Steering system (Power steering)	7.5 months		I	I	I		
	12,000 km						
	7,500 miles						