

3. Engine Oil

A: INSPECTION

Refer to "LU" section for engine oil inspection.

<Ref. to LU(H4SO)-12, INSPECTION, Engine Oil.>

<Ref. to LU(H6DO)-9, INSPECTION, Engine Oil.>

B: REPLACEMENT

Refer to "LU" section for engine oil replacement.

<Ref. to LU(H4SO)-12, REPLACEMENT, Engine

Oil.> <Ref. to LU(H6DO)-9, REPLACEMENT, En-
gine Oil.>