

# General Description

## INSTRUMENTATION/DRIVER INFO

### 1. General Description

#### A: SPECIFICATION

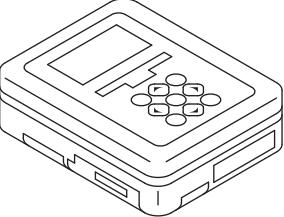
Combination meter	Speedometer	Stepping motor type
	Tachometer	
	ECO gauge	
	Fuel gauge	
	Malfunction indicator light	
	Oil pressure warning light	
	AT oil temperature warning light (except for MT model)	
	ABS warning light	
	Engine coolant temperature indicator light	
	Engine coolant temperature warning light	
	Airbag warning light	
	Seat belt warning light	
	Door open warning light	
	Brake fluid/parking brake warning light (C6 model)	
	Brake fluid/parking brake/EPB warning light (except for C6 model)	
	Low fuel warning light	
	Charge warning light	
	AWD warning light (except for MT model)	
	Hill hold warning light	LED
	EPB warning light (C6 model)	
	Low washer warning light	
	Low engine oil warning light	
	Tire air pressure warning light (except for C5 and C6 models)	
	VDC OFF indicator light	
	VDC warning light/VDC operation indicator light	
	Turn signal indicator light	
	High beam/passing indicator light	
	Security/immobilizer indicator light	
	Front fog light indicator light	
	Lighting indicator light	
	Meter illumination back-up light	LCD
	LCD back light	
	Odo/trip meter	
	Shift position indicator	
	AT select lever position indicator (AT model)	
Clock	Door open/vehicle frame indicator	VFD
	Cruise mode indicator	
	Cruising distance, average fuel economy, instantaneous fuel economy, ambient temperature, current time	
	Passenger's airbag ON indicator	
	Passenger's airbag OFF indicator	LED
	Passenger's seat belt warning light	

## B: CAUTION

- Before disassembling or reassembling parts, always disconnect the battery ground cable from battery. When replacing the radio, control module, and other parts provided with memory functions, record the memory contents before disconnecting the battery ground cable. Otherwise, the memory is cleared.
- Reassemble the parts in the reverse order of disassembly procedure unless otherwise indicated.
- Use gloves to avoid damage and getting fingerprints on the glass surface and meter surfaces.
- Do not apply an excessive force on the printed circuit.
- Do not drop or otherwise apply impact.
- Connect the connectors securely when reassembling.
- After reassembly, make sure that the functional parts operate normally.
- When the combination meter of model with immobilizer has been replaced, be sure to perform the registration of immobilizer.

## C: PREPARATION TOOL

### 1. SPECIAL TOOL

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST1B022XU0	1B022XU0	SUBARU SELECT MONITOR III KIT	Used for troubleshooting the electrical system.

### 2. GENERAL TOOL

TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance and voltage.