


2. Relay and Fuse

A: LOCATION

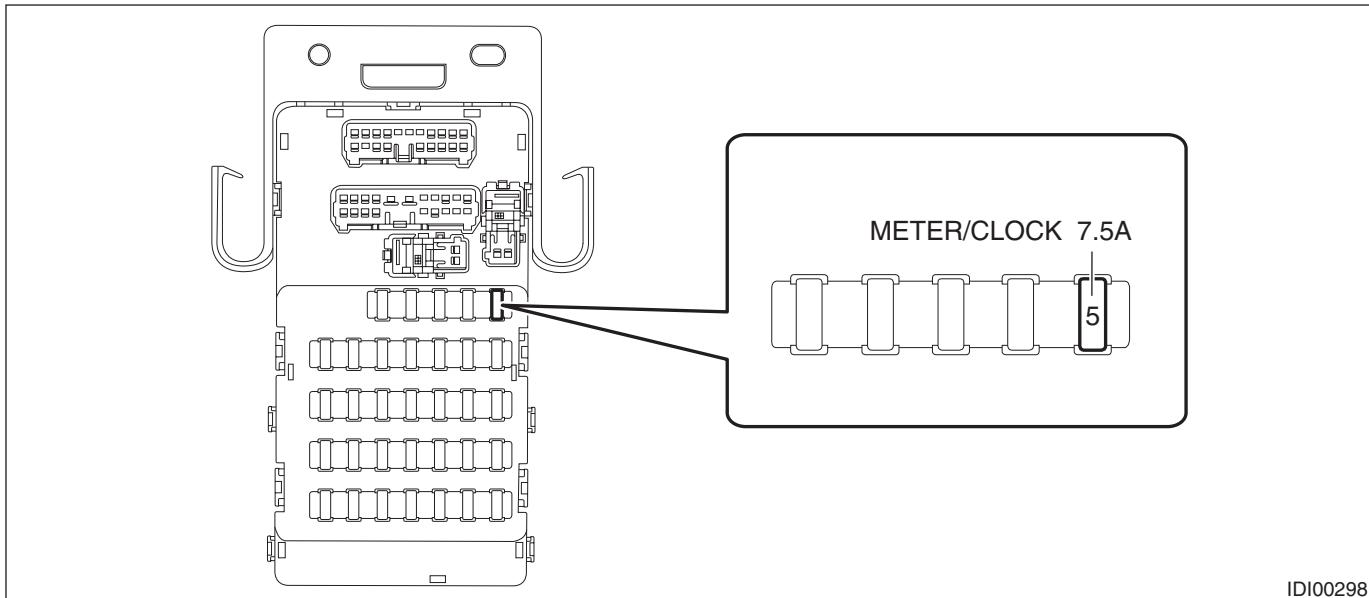

IDI00298

B: INSPECTION

1. CHECK FUSE.

- 1) Remove the fuse and check visually.
- 2) If the fuse is blown out, replace the fuse.