


17. Engine Control Module (ECM)


A: REMOVAL

- 1) Disconnect the ground cable from battery.

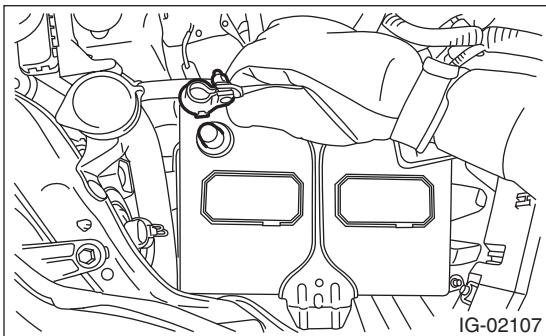


- 2) Remove the glove box lid assembly, glove box lower cover, instrument panel side cover LH and glove box back panel. <Ref. to EI-65, REMOVAL, Glove Box.>

- 3) Remove the connectors from ECM.

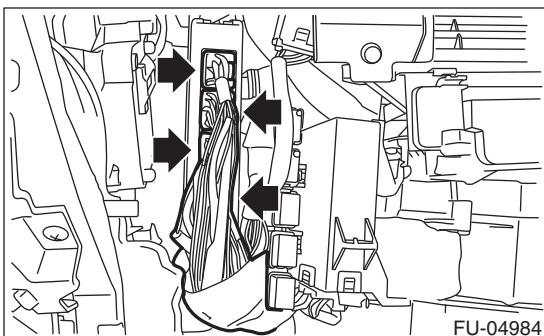

- 4) Remove the ECM from vehicle.

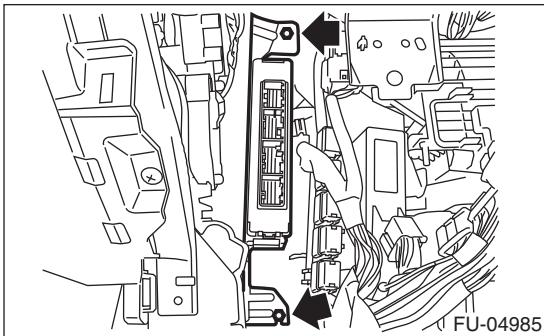

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:

- When the ECM of model with immobilizer has been replaced, be sure to perform the registration of immobilizer system. (Refer to "PC application help for Subaru Select Monitor".)
- If replacing ECM or the bracket, replace both parts with new parts at a time.
- After installing the bracket to ECM, do not separate the bracket.
- If the bracket has been installed to ECM in the wrong direction, replace both parts to new parts.

NOTE:

When replacing the ECM, be careful not to use the wrong spec. ECM to avoid any damage on the fuel injection system.

C: INSPECTION

Check that the ECM has no deformation, cracks or other damages.