


Electronic Throttle Control Relay

FUEL INJECTION (FUEL SYSTEMS)


20. Electronic Throttle Control Relay

A: REMOVAL

- 1) Disconnect the ground cable from battery.

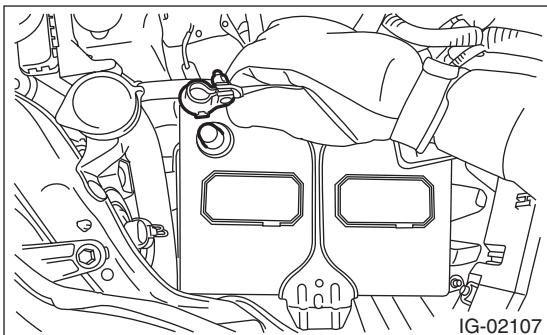

- 2) Remove the glove box lid assembly, glove box lower cover, instrument panel side cover LH and glove box back panel. <Ref. to EI-65, REMOVAL, Glove Box.>
- 3) Remove the electronic throttle control relay from the relay holder.

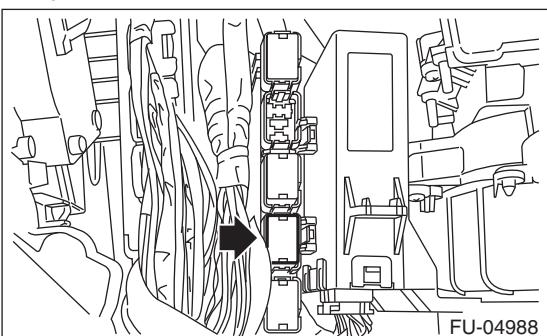


B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

- 1) Check that the electronic throttle control relay has no deformation, cracks or other damages.
- 2) Measure the resistance between electronic throttle control relay terminals.

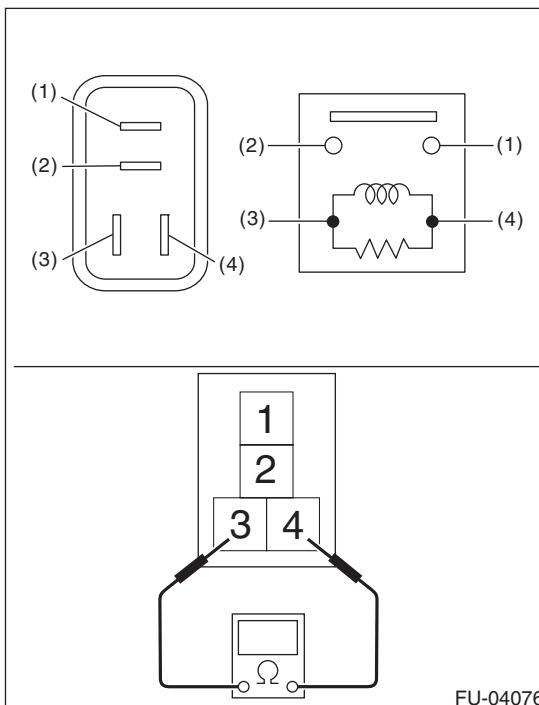


Terminal No.	Standard
1 and 2	1 MΩ or more
3 and 4	93.8 — 136.4 Ω (When 20°C (68°F))

Electronic Throttle Control Relay

FUEL INJECTION (FUEL SYSTEMS)

3) Connect battery positive terminal to terminal No. 3 and battery ground terminal to terminal No. 4, and measure the resistance between the electronic throttle control relay terminals.

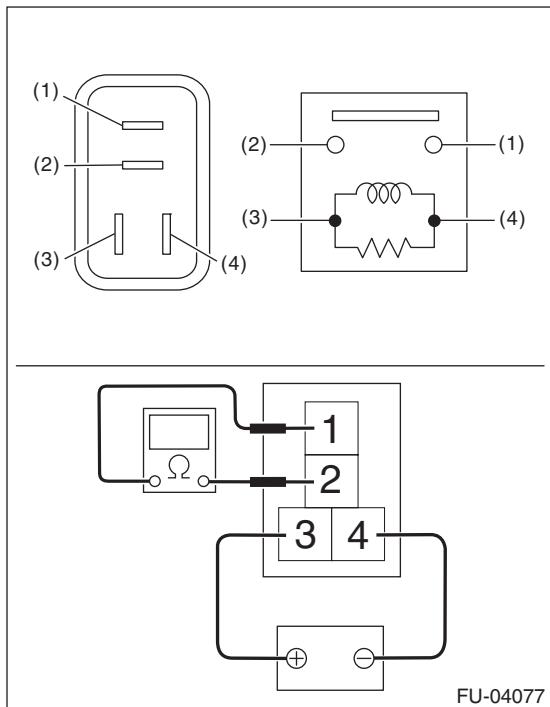

Terminal No.	Standard
1 and 2	Less than 1 Ω