






4. Electrical Component Location

A: LOCATION

1. CONTROL MODULE

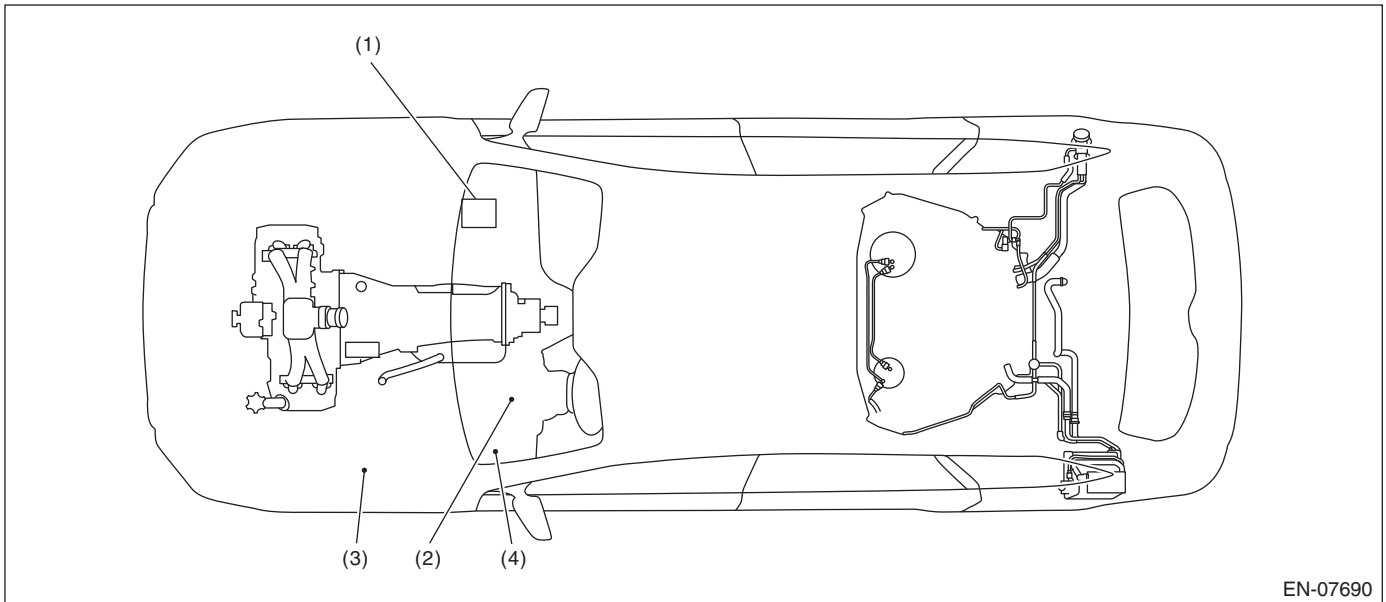


- (1) Engine control module (ECM) (3) Delivery (test) mode fuse (4) Data link connector
 (2) Malfunction indicator light

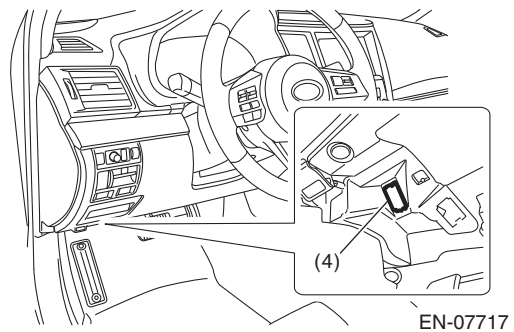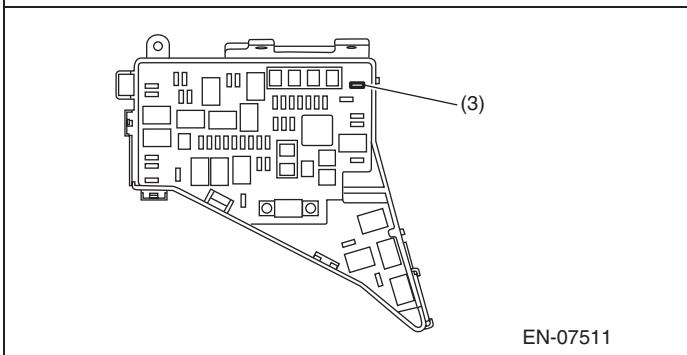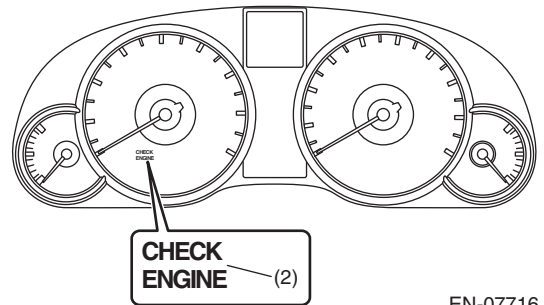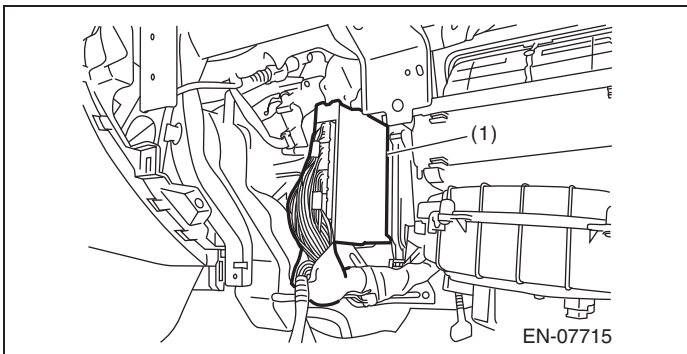

Electrical Component Location

ENGINE (DIAGNOSTICS)

2. SENSOR

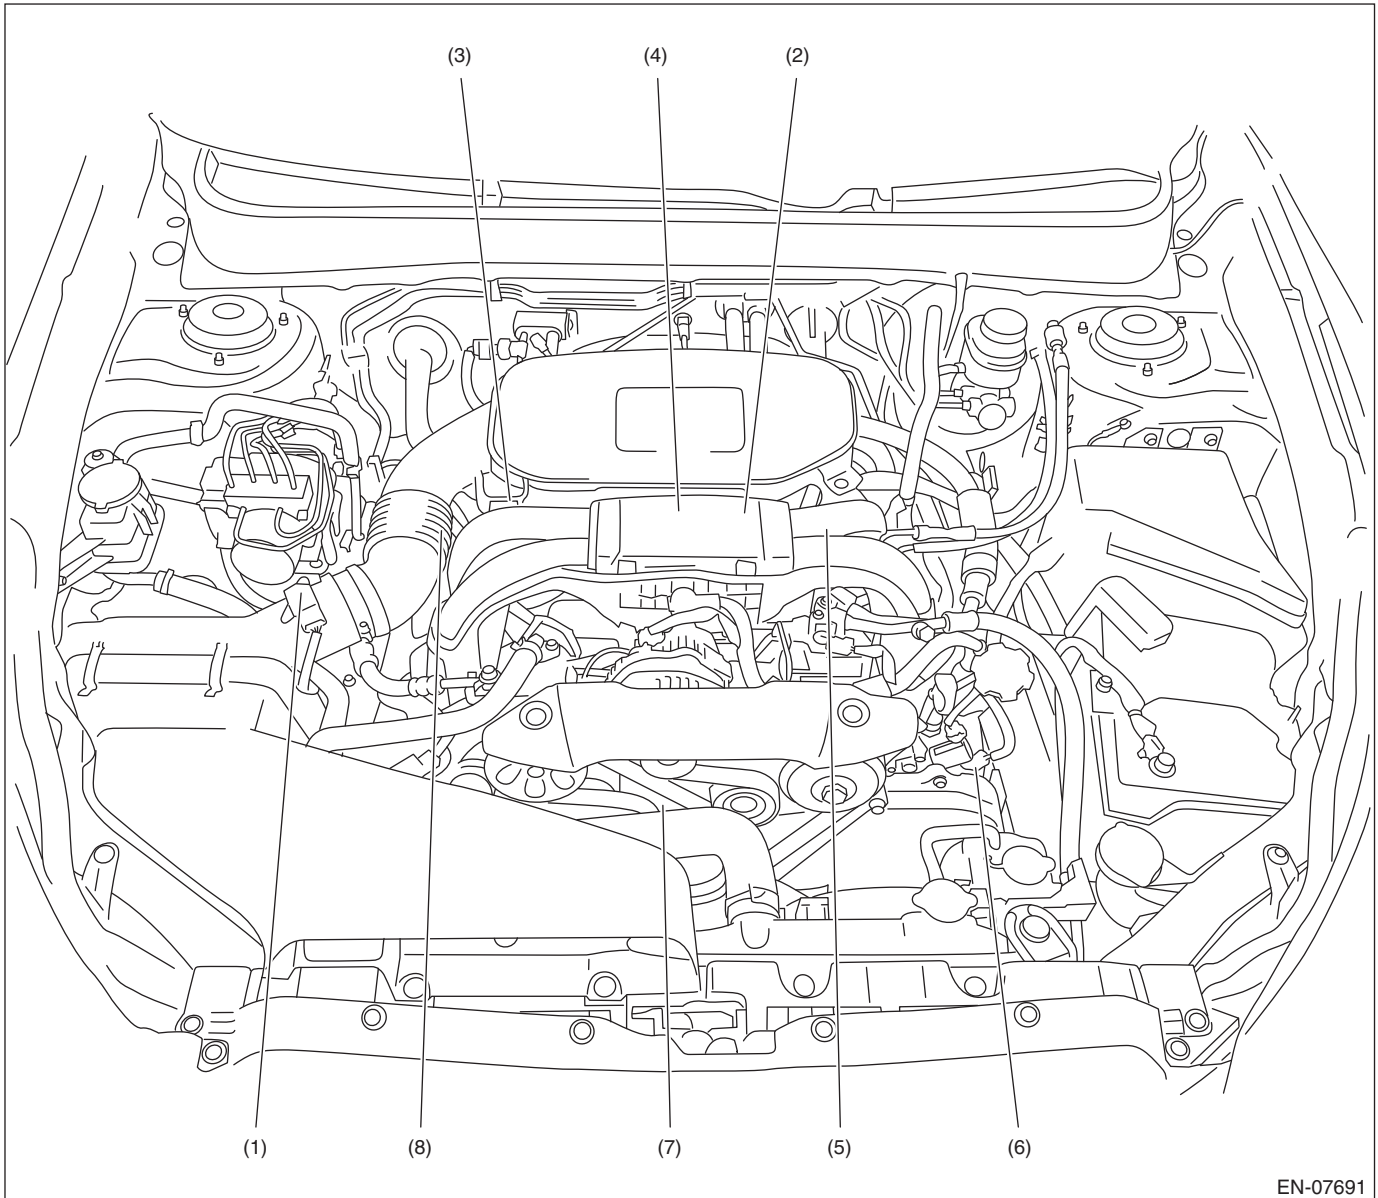


EN-07691


- | | | |
|---|---------------------------------|--------------------------------|
| (1) Mass air flow and intake air temperature sensor | (4) Electronic throttle control | (7) Crankshaft position sensor |
| (2) Manifold absolute pressure sensor | (5) Knock sensor | (8) Oil temperature sensor |
| (3) Engine coolant temperature sensor | (6) Camshaft position sensor | |

Electrical Component Location


ENGINE (DIAGNOSTICS)

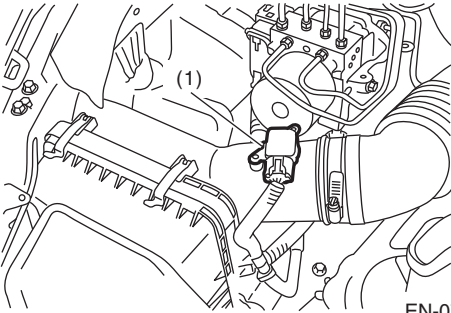


EN-07595

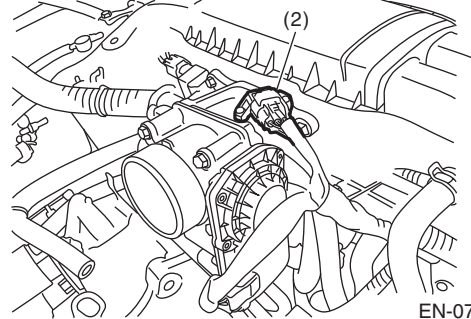


EN-07596

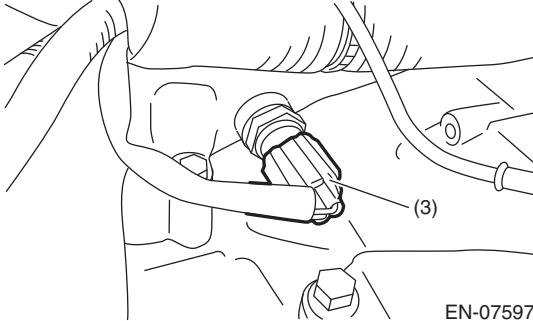


EN-07597

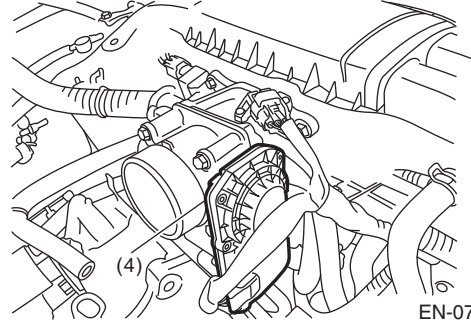


EN-07598

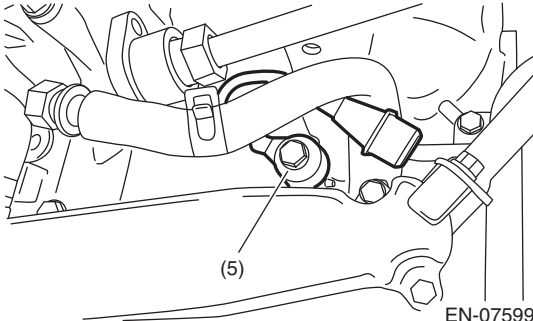


EN-07599

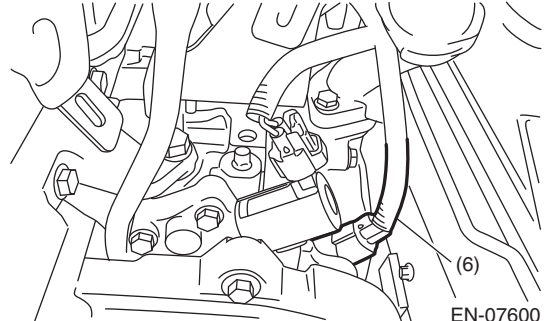

EN-07600

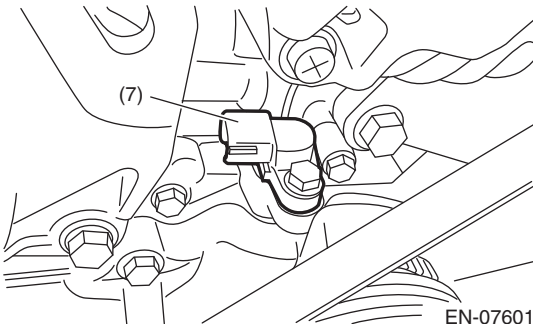


EN-07601

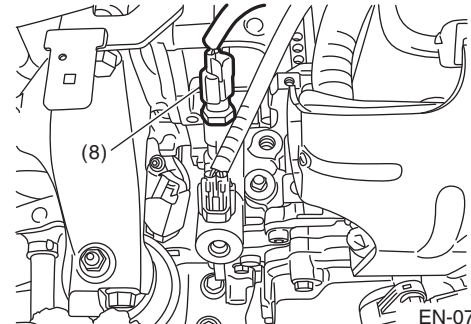


EN-07602

Electrical Component Location




ENGINE (DIAGNOSTICS)

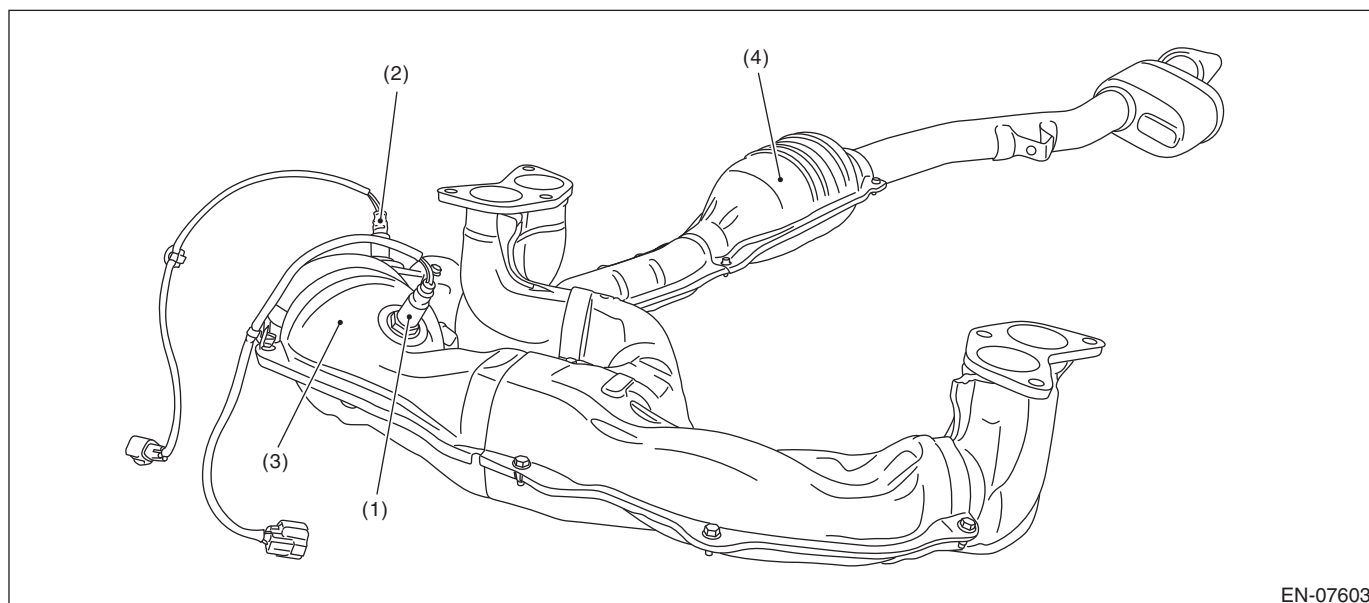

- (1) Front oxygen (A/F) sensor (3) Front catalytic converter (4) Rear catalytic converter
(2) Rear oxygen sensor

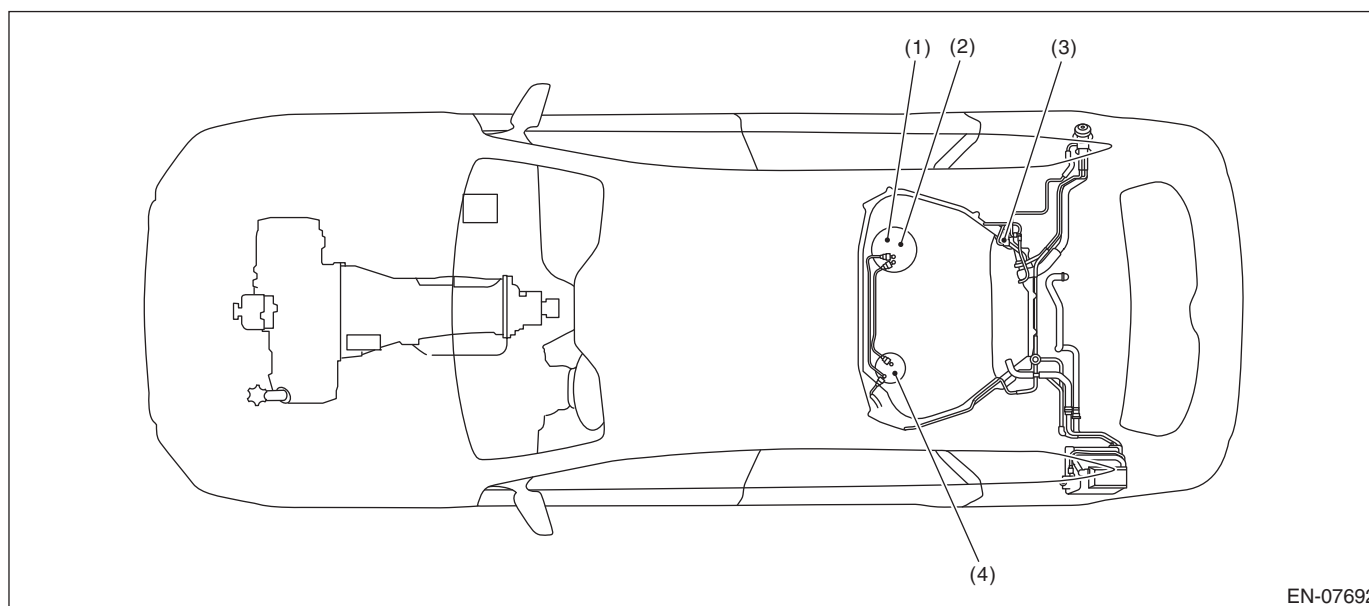


- (1) Fuel level sensor (3) Fuel tank pressure sensor (4) Fuel sub level sensor
(2) Fuel temperature sensor

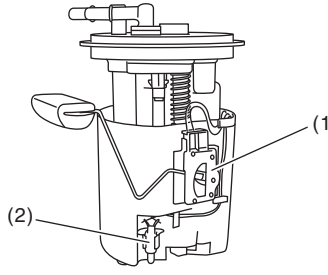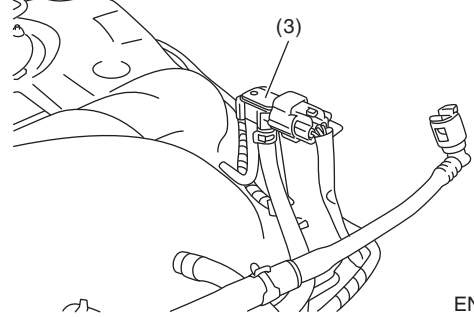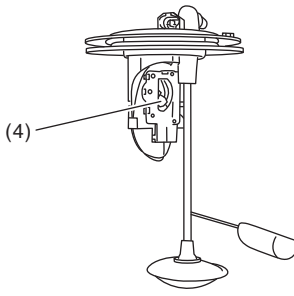 EN-07718	 EN-07719
 EN-07720	SUBARU.

Electrical Component Location

ENGINE (DIAGNOSTICS)

3. SOLENOID VALVE, ACTUATOR, EMISSION CONTROL SYSTEM PARTS AND IGNITION SYSTEM PARTS


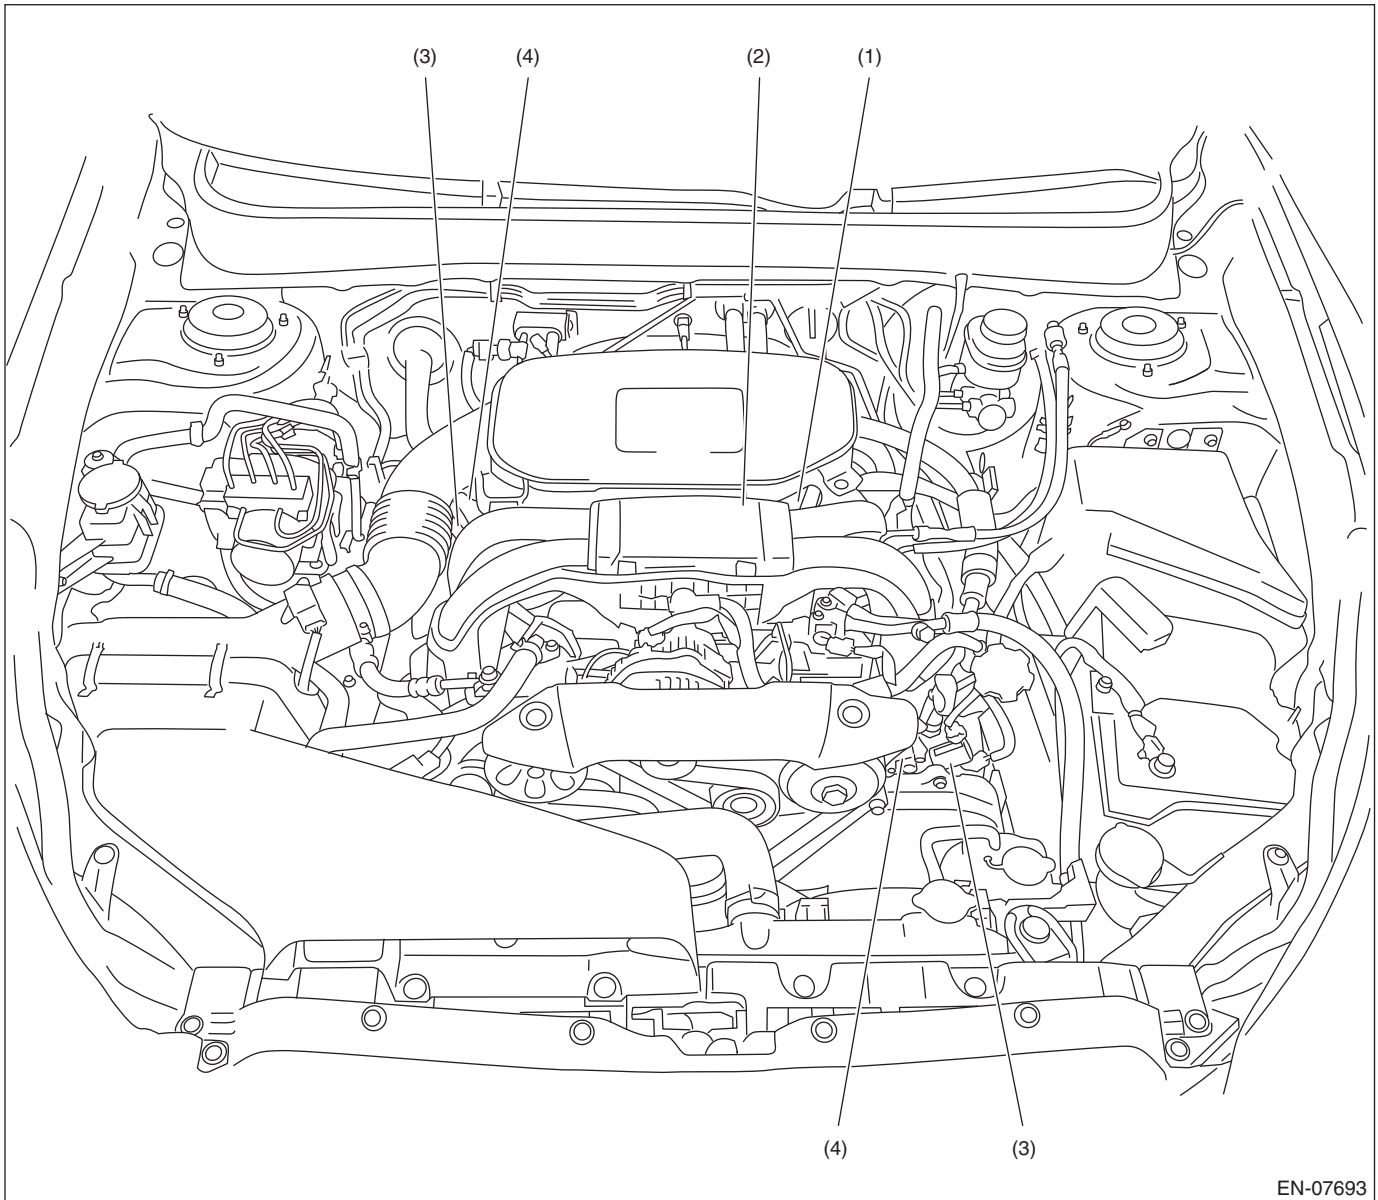


(1) Purge control solenoid valve

(3) Oil switching solenoid valve


(4) Variable valve lift diagnosis oil pressure switch

(2) EGR valve

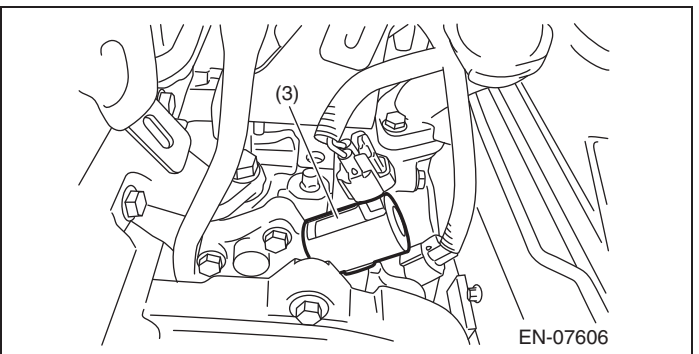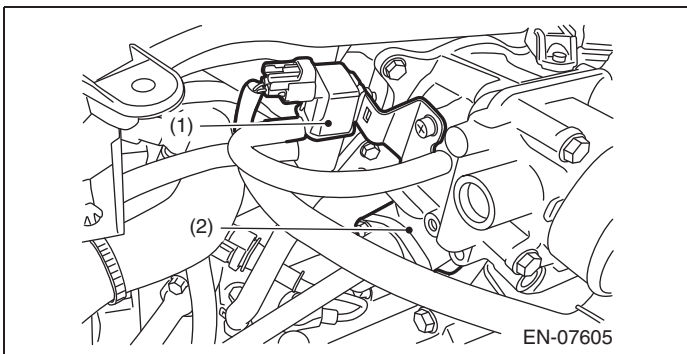


Electrical Component Location

ENGINE (DIAGNOSTICS)






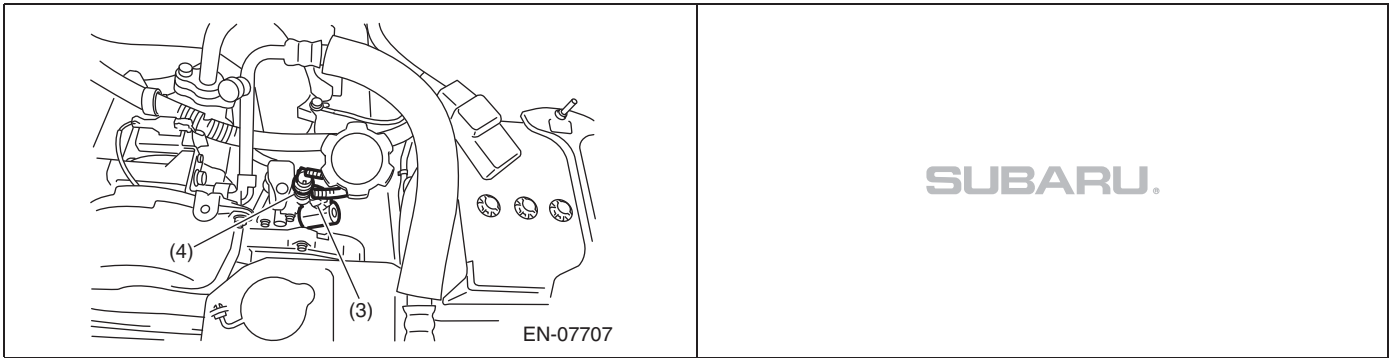


Electrical Component Location



ENGINE (DIAGNOSTICS)

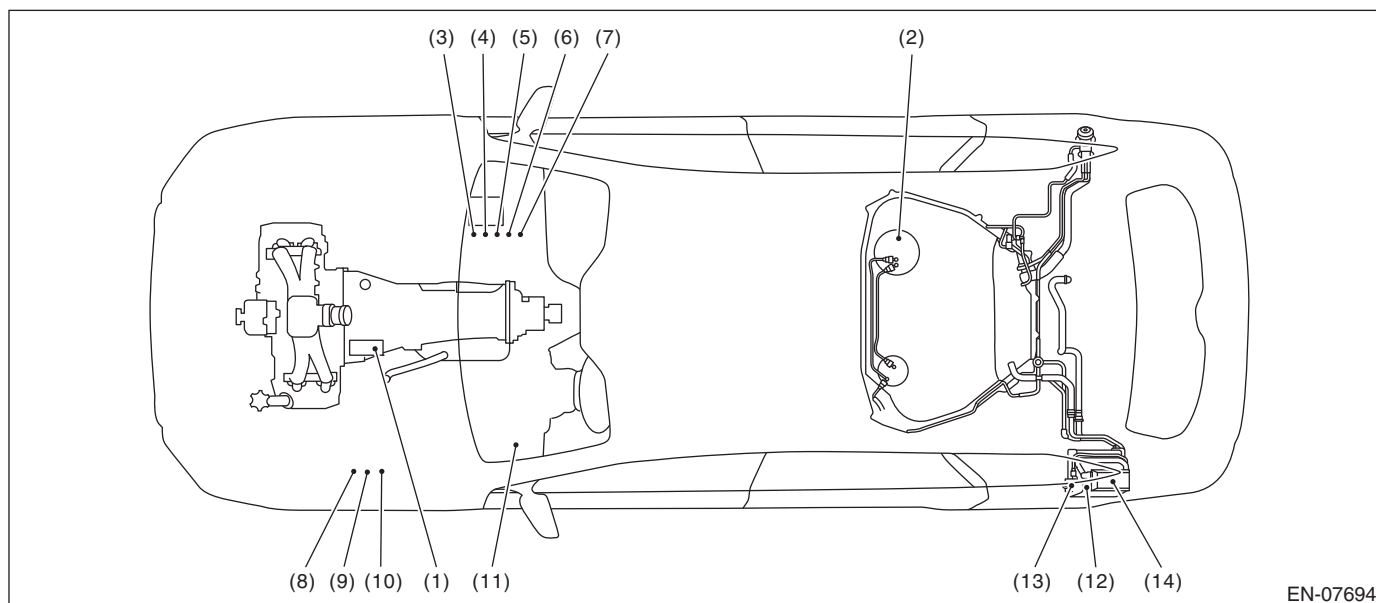

- | | | |
|------------------------------|---------------------------------------|--------------------|
| (1) Starter | (6) Electronic throttle control relay | (11) Starter relay |
| (2) Fuel pump | (7) Fuel pump relay | (12) Canister |
| (3) Main relay | (8) Radiator main fan relay 1 | (13) Drain valve |
| (4) IG relay | (9) Radiator main fan relay 2 | (14) Drain filter |
| (5) A/F, oxygen sensor relay | (10) Radiator sub fan relay | |

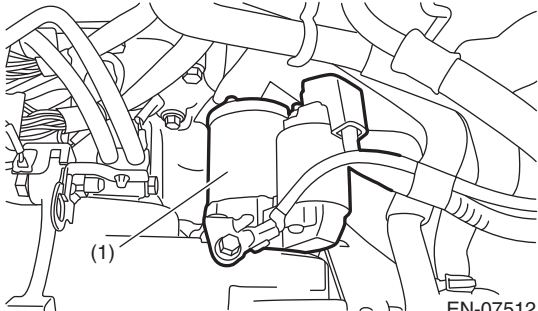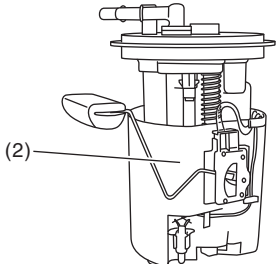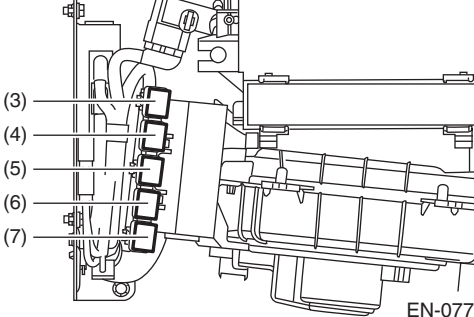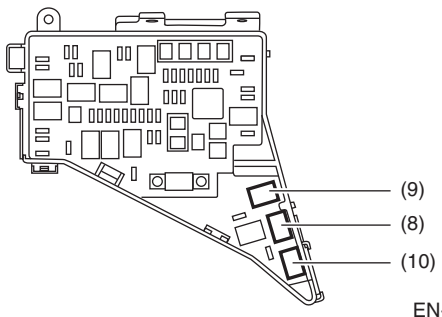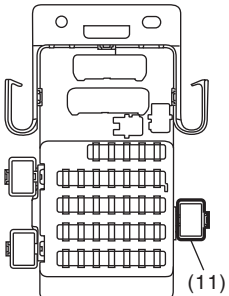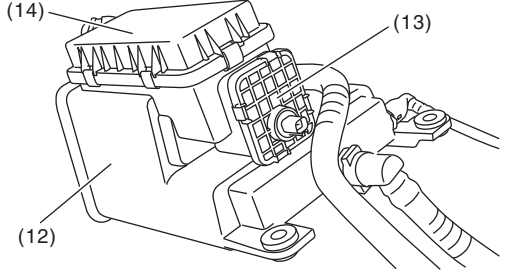 EN-07512	 EN-07752
 EN-07721	 EN-07514
 EN-07722	 EN-07723

4. TRANSMISSION

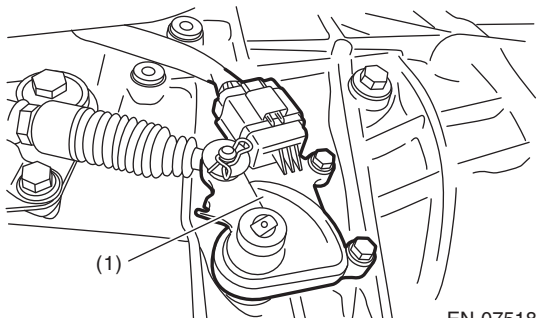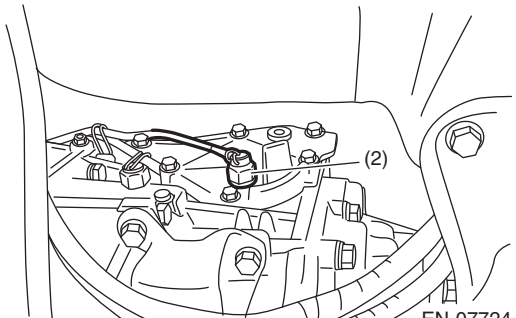 EN-07518	 EN-07724
---	--

(1) Inhibitor switch (CVT model)

(2) Neutral position switch (MT model)