

Drain Valve

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

12. Drain Valve

A: REMOVAL


Drain valve is integrated with canister. Refer to "Canister" for removal procedure. <Ref. to EC(H4SO)-5, REMOVAL, Canister.>

B: INSTALLATION

Refer to "Canister" for the installation procedure. <Ref. to EC(H4SO)-6, INSTALLATION, Canister.>

C: INSPECTION

Measure the resistance between drain valve terminals.

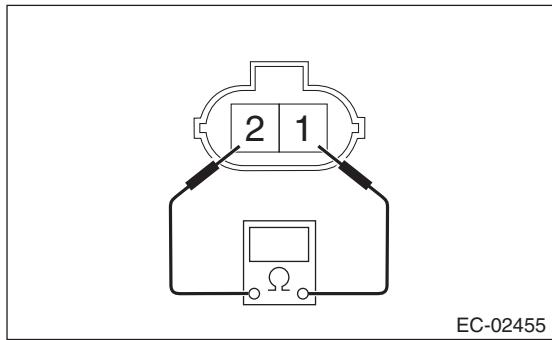

Terminal No.	Standard
1 and 2	20 — 30 Ω