

6. EGR Valve

A: REMOVAL

For removal procedures, refer to “FU” section.
<Ref. to FU(H4SO)-31, REMOVAL, EGR Valve.>

B: INSTALLATION

For installation procedures, refer to “FU” section.
<Ref. to FU(H4SO)-31, INSTALLATION, EGR Valve.>

C: INSPECTION

Refer to “FU” for inspection procedures. <Ref. to FU(H4SO)-31, INSPECTION, EGR Valve.>