

## EXHAUST


### 2. Front Exhaust Pipe

#### A: REMOVAL


##### CAUTION:

Vehicle components are extremely hot after driving. Be wary of receiving burns from heated parts.


- 1) Remove the air intake duct. <Ref. to IN(H4SO)-9, REMOVAL, Air Intake Duct.>
- 2) Disconnect the ground cable from battery.

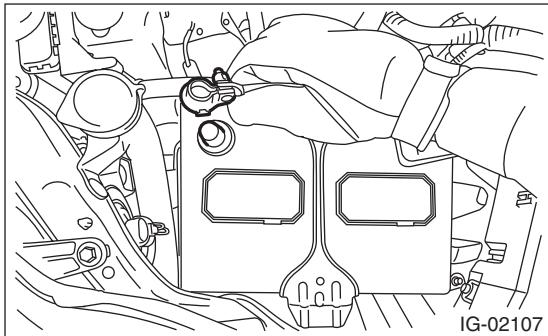

- 3) Disconnect the front oxygen (A/F) sensor connector (A) and rear oxygen sensor connector (B) and remove the clip (C) fastening the harness.

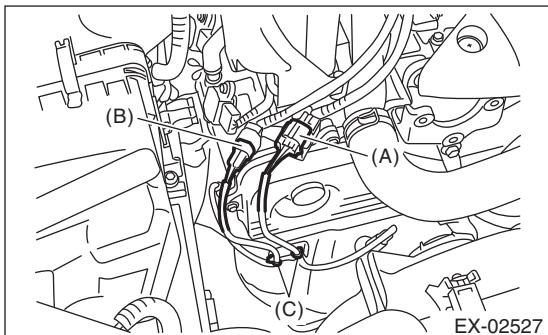


- 4) Lift up the vehicle.
- 5) Remove the under cover. <Ref. to EI-35, REMOVAL, Front Under Cover.>
- 6) Disconnect the center exhaust pipe from rear exhaust pipe.

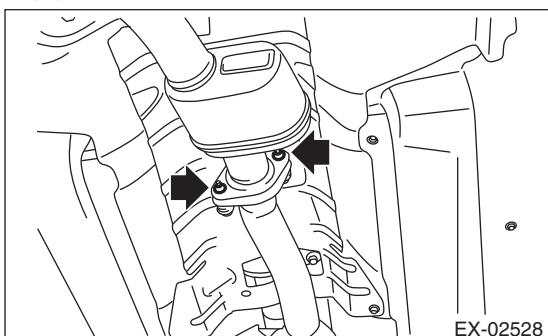


- 7) Remove the nuts which hold front exhaust pipe onto cylinder heads.

##### CAUTION:

Be careful not to drop the front exhaust pipe and center exhaust pipe assembly.

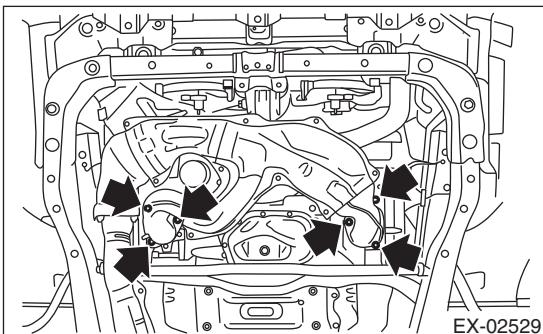

- 8) Remove the bolt which holds center exhaust pipe to hanger bracket.

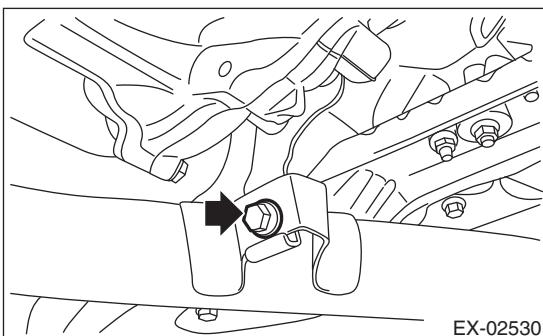


- 9) Remove the front exhaust pipe and center exhaust pipe as a unit from the vehicle.

##### CAUTION:

- The front exhaust pipe and center exhaust pipe assembly are very heavy. Be careful not to drop the exhaust pipes when removing.
- After removing the front exhaust pipe and center exhaust pipe assembly, do not pull the rear exhaust pipe with excessive force.

- 10) Remove the front exhaust pipe from the center exhaust pipe.

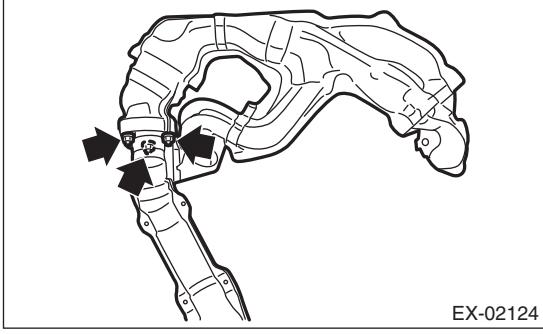

- 11) Remove the front oxygen (A/F) sensor and rear oxygen sensor from the front exhaust pipe. <Ref. to FU(H4SO)-35, REMOVAL, Front Oxygen (A/F) Sensor.> <Ref. to FU(H4SO)-37, REMOVAL, Rear Oxygen Sensor.>

**B: INSTALLATION**

1) Install the front oxygen (A/F) sensor and rear oxygen sensor to the front exhaust pipe. <Ref. to FU(H4SO)-35, INSTALLATION, Front Oxygen (A/F) Sensor.> <Ref. to FU(H4SO)-37, INSTALLATION, Rear Oxygen Sensor.>


2) Install the front exhaust pipe to the center exhaust pipe.

NOTE:

Use a new gasket.

**Tightening torque:**

**40 N·m (4.1 kgf-m, 29.5 ft-lb)**

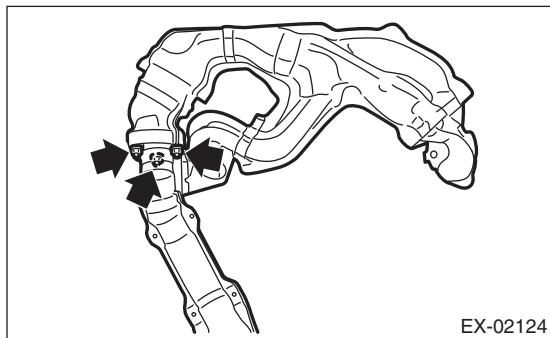


EX-02124

3) Install the front exhaust pipe and center exhaust pipe as a unit to the vehicle.

NOTE:

Use a new gasket.

4) Temporarily tighten the nuts which hold front exhaust pipe to cylinder heads.

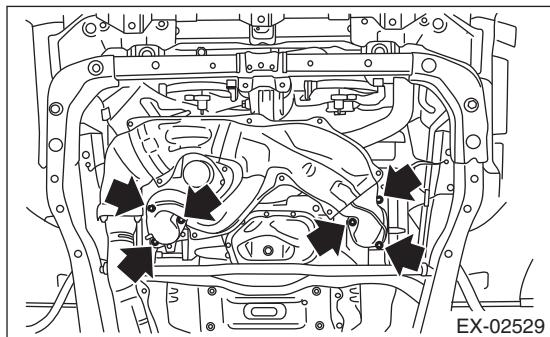

EX-02529


5) Install the center exhaust pipe to rear exhaust pipe.

NOTE:

Use a new gasket.

**Tightening torque:**

**18 N·m (1.8 kgf-m, 13.3 ft-lb)**

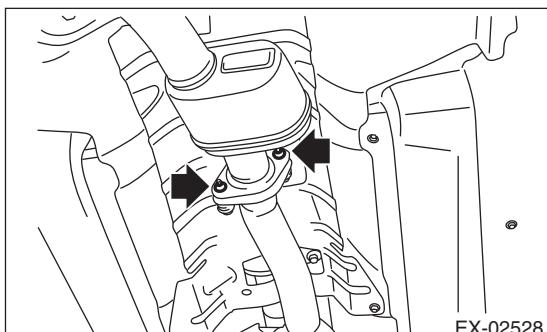


EX-02528

6) Tighten the bolts which hold center exhaust pipe to hanger bracket.

**Tightening torque:**

**35 N·m (3.6 kgf-m, 25.8 ft-lb)**

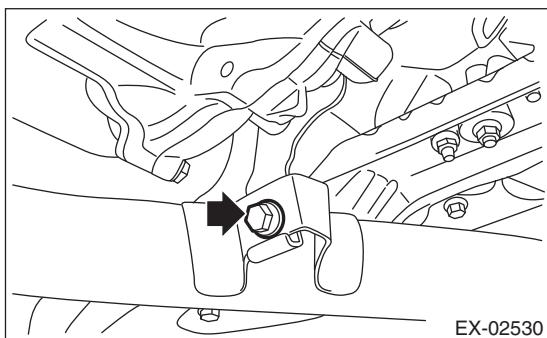


EX-02530

7) Tighten the nuts which hold front exhaust pipe to cylinder heads.

**Tightening torque:**

**30 N·m (3.1 kgf-m, 22.1 ft-lb)**

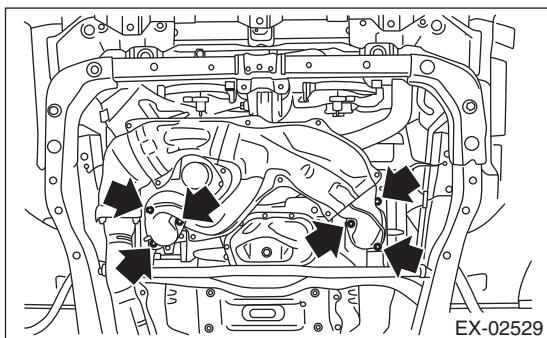

EX-02529


8) Install the under cover. <Ref. to EI-35, INSTALLATION, Front Under Cover.>

9) Lower the vehicle.


# Front Exhaust Pipe

## EXHAUST

- 10) Connect the front oxygen (A/F) sensor connector (A) and rear oxygen sensor connector (B), and fasten the harness with the clip (C).

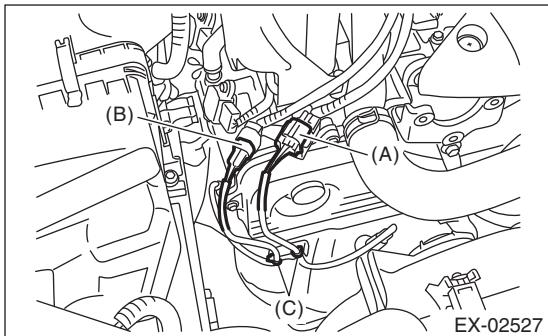

- 11) Connect the ground cable to battery.

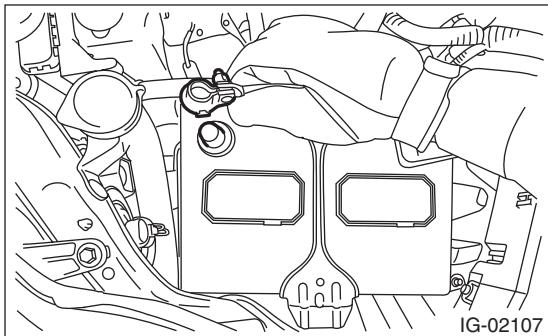

- 12) Install the air intake duct. <Ref. to IN(H4SO)-9, INSTALLATION, Air Intake Duct.>

## C: INSPECTION

- 1) Check the connections and welds for exhaust leaks.
- 2) Make sure there are no holes or rusting.