


7. Radiator Cap

A: INSPECTION

- 1) Check that the radiator cap does not have deformation, cracks or damage.
- 2) Attach the radiator cap tester to radiator cap.

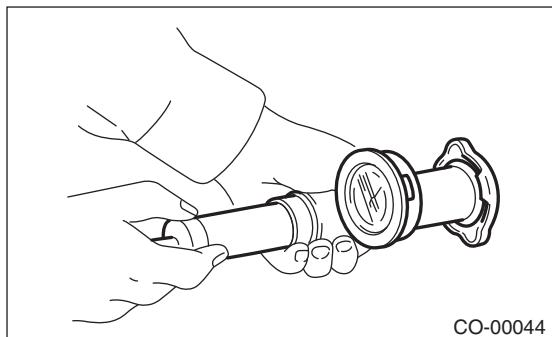

CO-00044

- 3) Increase pressure until the radiator cap tester gauge needle stops. Radiator cap is functioning properly if it holds the service limit pressure for 5 — 6 seconds. Replace the radiator cap if its valve opens at less than the service limit.

Standard:

93 — 123 kPa (0.95 — 1.25 kgf/cm², 14 — 18 psi)

Service limit:

83 kPa (0.85 kgf/cm², 12 psi)

CAUTION:

Be sure to remove foreign matter and rust from the cap in advance. Otherwise, results of pressure test will be incorrect.