


## COOLING


### 8. Radiator Main Fan and Fan Motor

#### A: REMOVAL


- 1) Disconnect the ground cable from battery.

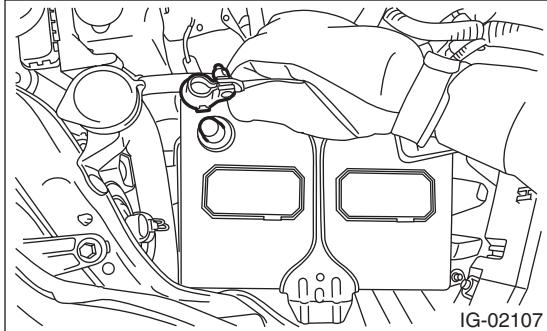

- 2) Remove the reservoir tank. <Ref. to CO(H4SO)-26, REMOVAL, Reservoir Tank.>
- 3) Disconnect the connector (A) of the main fan motor assembly.

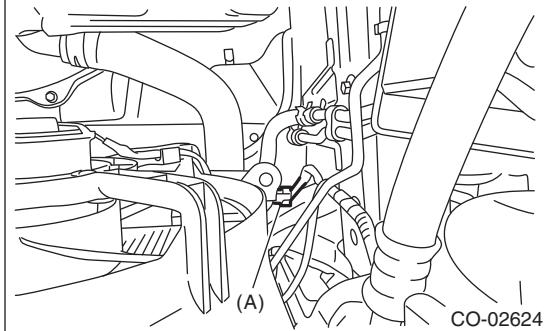

- 4) Remove the CVTF hose from the clip of the radiator main fan shroud. (CVT model)
- 5) Remove the bolts which hold the radiator main fan shroud to the radiator.

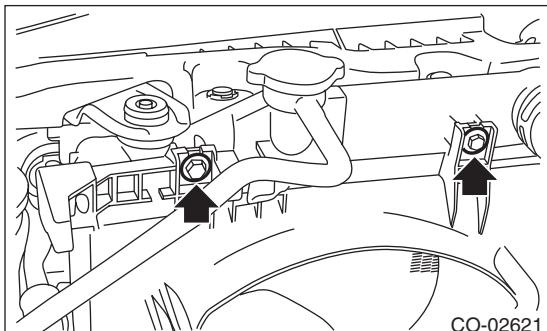

- 6) Remove the radiator main fan and fan motor from vehicle.


#### B: INSTALLATION

##### CAUTION:

Confirm that the radiator hose is securely connected.


Install in the reverse order of removal.

**Tightening torque:**  
7.5 N·m (0.8 kgf-m, 5.5 ft-lb)

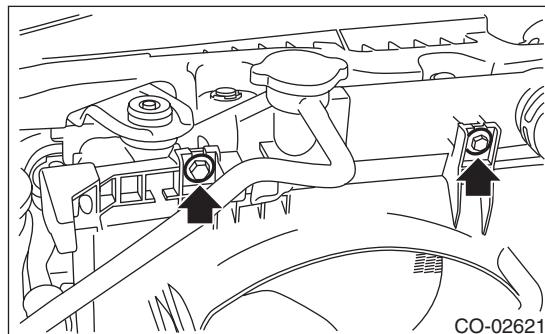

#### C: DISASSEMBLY


- 1) Remove the clip which holds the main fan motor assembly connector onto the radiator main fan shroud.
- 2) Remove the bolts which hold the main fan motor assembly onto the radiator main shroud.

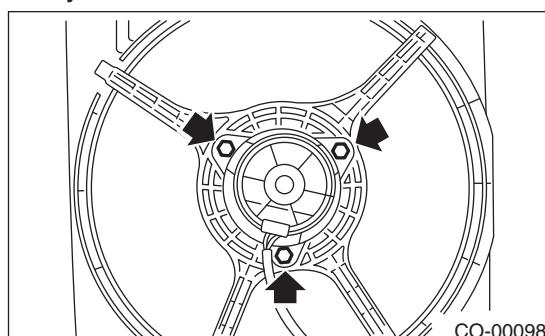

#### D: ASSEMBLY

Assemble in the reverse order of disassembly.

**Tightening torque:**  
5 N·m (0.5 kgf-m, 3.7 ft-lb)

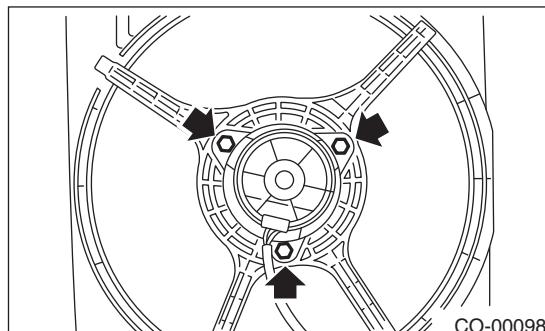

#### E: INSPECTION

Check that the radiator main fan, radiator main fan shroud and main fan motor assembly do not have deformation, cracks or damage.