



## 9. Radiator Sub Fan and Fan Motor

### A: REMOVAL


- 1) Disconnect the ground cable from battery.

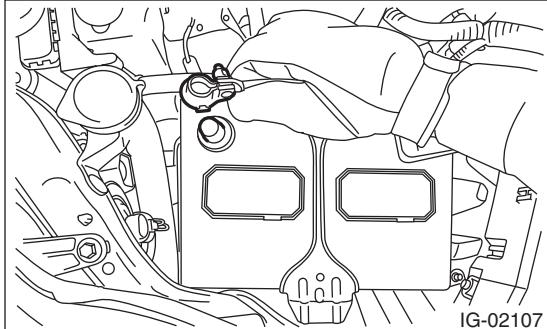

- 2) Remove the air intake duct. <Ref. to IN(H4SO)-9, REMOVAL, Air Intake Duct.>
- 3) Remove the connector (B) of sub fan motor assembly.

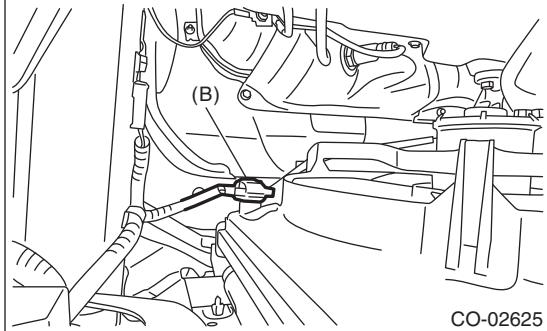

- 4) Remove the CVTF hose from the clip of the radiator sub fan & fan motor assembly. (CVT model)
- 5) Remove the bolts which hold the radiator sub fan shroud to the radiator.

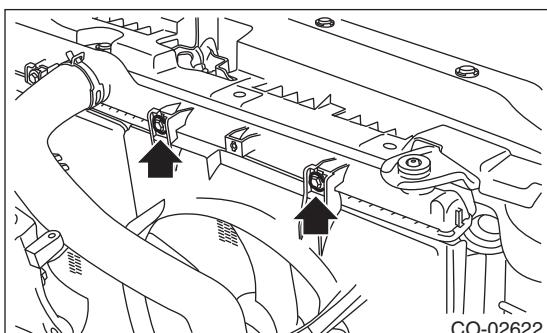

- 6) Remove the radiator sub fan and fan motor from vehicle.

### B: INSTALLATION


#### CAUTION:

Confirm that the radiator hose is securely connected.

Install in the reverse order of removal.


#### Tightening torque:

7.5 N·m (0.8 kgf-m, 5.5 ft-lb)

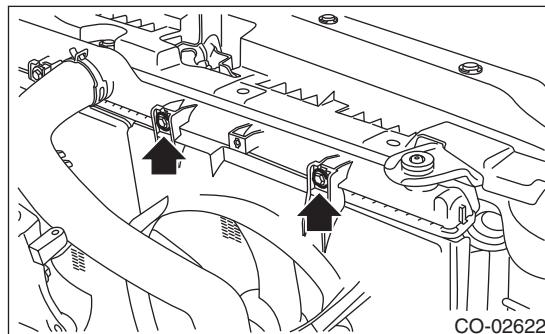

### C: DISASSEMBLY

- 1) Remove the clip which holds the radiator sub fan motor assembly connector onto the radiator sub fan shroud.
- 2) Remove the bolts which hold the sub fan motor assembly onto the radiator sub fan shroud.

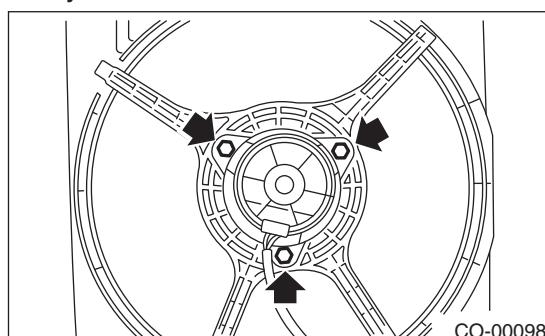


### D: ASSEMBLY

Assemble in the reverse order of disassembly.

#### Tightening torque:

5 N·m (0.5 kgf-m, 3.7 ft-lb)

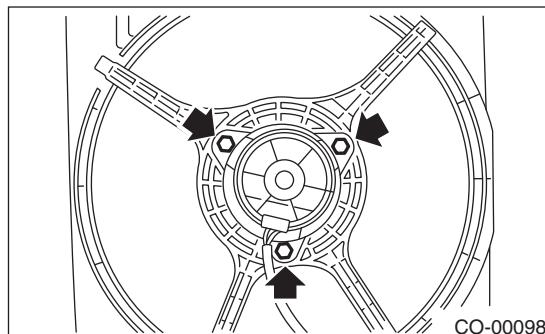

### E: INSPECTION

Check that the radiator sub fan, radiator sub fan shroud and sub fan motor assembly do not have deformation, cracks or damage.